
# Faucet Installation Instructions


MK171

- Hole diameters are 1 1/4" minimum to 1 3/4" maximum
- Maximum deck thickness is 3 3/16" (without escutcheon and soap dispenser) or 2 11/16" (with escutcheon, without soap dispenser) or 2 5/8" (with soap dispenser)
- This kitchen faucet comes completely assembled and water tested
- Includes braided stainless steel supply lines with 1/2" IPS Inlets
- Tools required-channel lock pliers (or pipe wrench), basin wrench and small crescent wrench
- Shut off water supply prior to beginning installation

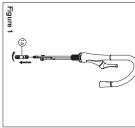


Step 1

Before installation, remove white plastic quick connect assembly (1A) from the free end of pulldown hose.

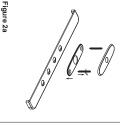


Step 2a Three Hole Mounting
Screw bolts to the escutcheon. Insert escutcheon
assembly through the base plate and the holes of
the sink.

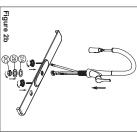


Step 2b Three Hole Mounting

Unile black pull-down spray hose and secure spray/head onto faucet spout ensuring it folks into place, Insert faucet through hole in escutdhoon. Feru muderneath sank, side plastic washer (2A), metal washer (2B), and threaded nut (2C) and faucet ensuring that you pass both but and cold water supply hoses through first fallwed by black pull-down spray hose. Score by lightening threaded mounting nut (2C).

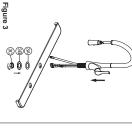


Step 3 Single Hole Mounting

Unite black pull-down spray hose and secure sprayhead noto facuet spout ensuring it folias into place, insent faucet through hole in sink or countertop. From underneath sink, side plastic washer (AA), metal washer (BB), and threaded nut (3C) onto facuet ensuring that you pass both hot and cold water supply hoses through first followed by black pulldown spray hose. Secure by tightening threaded mounting nut (3C).



Step 4

Screw quick connector to the free end of lopul-down hose. Alop block (Al) and tabs (4B) on quick connector Pusit quick connector housing filmly juryeard to stap onto receiving block. Pail allown with moderate pressure to ensure connecting the hose jetted, Aler connecting the hose attach weight (AC) and the black hose at bottom of the loop to prevent hose from whiting.

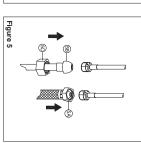

Step 5

Make connections to water lines. Use 1/2" I.P.S. faucet connections (5A, not included) or use coupling nuts (5C, not included) with 3/8" O.D.ball-nose riser (5B). Use wrenches to tighten connections. Do not overtighten.

### MISENO

For additional assistance or service call: 1-855-480-2915 or visit our website www.miseno.com

# **Faucet Installation Instructions**





Figure 6

#### Step 6 Install Soap Dispenser (Optional)


Install Soap Disponser (Optional)
Remore the bottle Soparale head from body assembly by holding the flange and pulling up on the dispenser head taking care not to pull directly on the spigot. Make sure the flange is propelly seated then insert body assembly through selected hole in sikk and secure with rut. From under the sink screw the bottle onto the body assembly shark. Fill bottle with soap from above counter then attached soap dispenser head.

**NOTE:** To refill soap bottle simply remove dispenser body and fill from above counter.

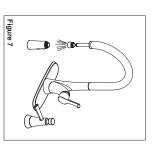

Step 7

Important: After installation is completed, turn on hot and cold water supplies. Check for leaks. Pull the hose assembly out of the spoul and remove the spray head by unscrewing it from the hose counterOckwise. Be sure to hold the end of the hose down into the sink and turn the fauced onto the wamp osition where it makes hot and cold water. Flush water lines for one minute. Check for leaks, Re-tighten any connections if necessary, but do not overlighten. Rehnall spray head by hand lightening it back onto the spray hose.

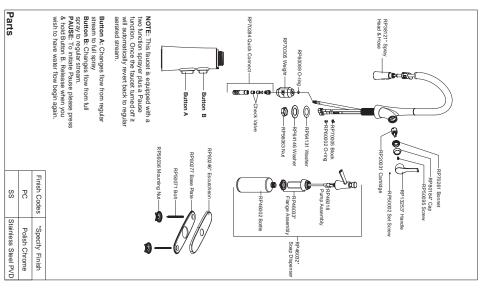

Maintenance: Clean with warm water, soft cotton cloth and non-abrasive liquid dish soap. Towel dry. Never use acids, harsh abrasives, detergents, or products containing chlorides on any parts of this product.

#### MISENO

For additional assistance or service call: 1-855-480-2915 or visit our website www.miseno.com