


- 1) After removing fixture from carton, rotate top 2 arms 90 degrees - all arms should be 90 degrees apart.
- 2) After arms are rotated in to place, slide tubing arms together. Right arms will slide in to Left arm
- 3) Secure with set screw- see detail B
- 4) If arms are too tight or loose, see detail A to adjust arms.
- If necessary:
 - A) Loosen coupling
 - B) Raise cover
 - C) Tighten or loosen arm
- 5) Pass wire from fixture through stem and screw stem to top of fixture. **NOTE:** Thread locking compound must be applied to all stem threads as noted with symbol to prevent accidental rotation of fixture during cleaning, relamping, etc.
- 6) Pass fixture wire through remaining stems and screw stems together.
- 7) Thread one small threaded pipe into end of each small loop.
- 8) Attach small loop to end of last stem.
- 9) Pass threaded pipe at end of second small loop through hole in canopy.
- 10) Slip lockwasher over threaded pipe protruding from inside of canopy and screw hexnut onto threaded pipe.
- 11) Attach chain link to small loop at end of stem and to loop on canopy.
- 12) Find the appropriate threaded holes on mounting strap. Assemble mounting screws into threaded holes.
- 13) Attach mounting strap to outlet box. (Screws not provided).

- Mounting strap can be adjusted to suit position of fixture.
- 14) Make wire connections (connectors not provided). Reference chart below for correct connections and wire accordingly.

| Connect Black or Red Supply Wire to: | Connect White Supply Wire to: |
|---|---|
| Black | White |
| *Parallel cord (round & smooth) | *Parallel cord (square & ridged) |
| Clear, Brown, Gold or Black without tracer | Clear, Brown, Gold or Black with tracer |
| Insulated wire (other than green) with copper conductor | Insulated wire (other than green) with silver conductor |

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

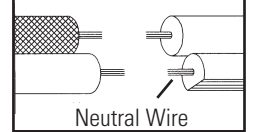

- 15) Push fixture to ceiling, carefully passing mounting screws through holes in canopy.
- 16) Thread knurl knobs onto mounting screws. Tighten knurl knobs to secure fixture to ceiling.
- 17) Slip shade over socket
- 18) Secure with socket ring

