





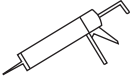


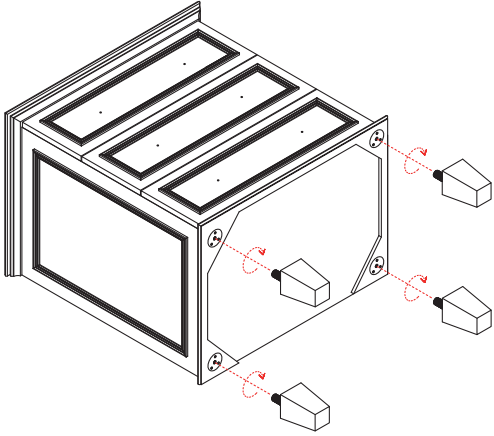
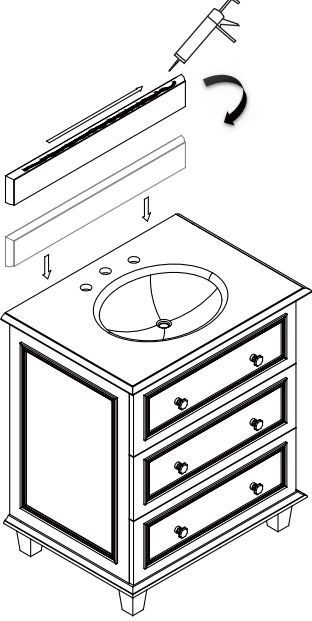
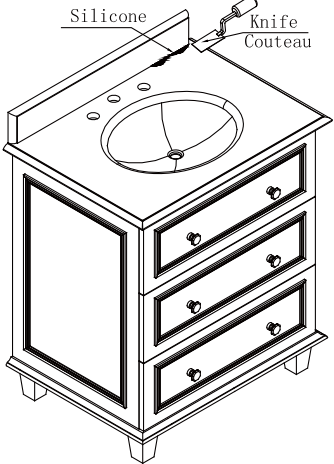
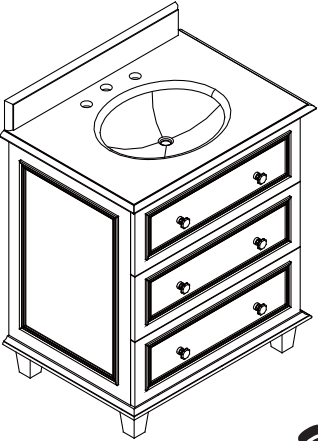



## Installation Instructions

**Notes:** We recommend that you rough-in the drain and water lines after receiving the unit.  
 The vanity should be installed by a professional plumber.  
 Drainer pipe and trap are not included.  
 If you experience any difficulties with this product, do not return to the point of purchase. Please contact MISENO directly at [infoservice@miseno.com](mailto:infoservice@miseno.com), And we will help resolve your issue.

Part List	A (Cabinet)  x1	B (Back splash)  x1	C (Screw)  x6	D (Handle)  x6	E (Foot)  x4
Tools required	 screwdriver(cross)		 silicone	 level	 tape measure
<h3>Step 1</h3> 			<h3>Step 2</h3> 		
<h3>Step 3</h3> 			<h3>Step 4</h3>  <div style="text-align: right;">  24h                 </div>		