
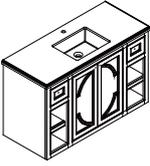




## Installation Instructions


**Notes:** We recommend that you rough-in the drain and water lines after receiving the unit.  
 The vanity should be installed by a professional plumber.  
 Drainer pipe and trap are not included.  
 If you experience any difficulties with this product, do not return to the point of purchase. Please contact MISENO directly at [infoservice@miseno.com](mailto:infoservice@miseno.com), And we will help resolve your issue.

	A (cabinet)	B (back splash)	C (screw)	D (handle)	E (Foot)
Part List	 x1	 x1	 x4	 x4	 x4
Tools required	 screwdriver(cross)	 silicone	 level	 tape measure	


### Step 1

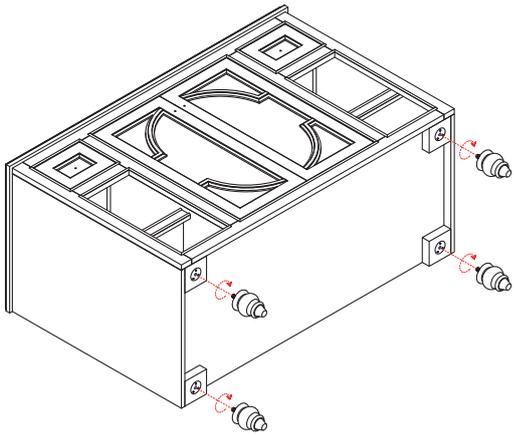

### Step 2

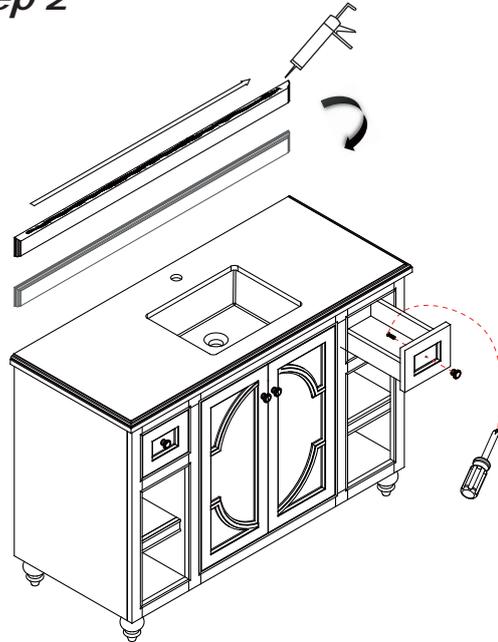

### Step 3

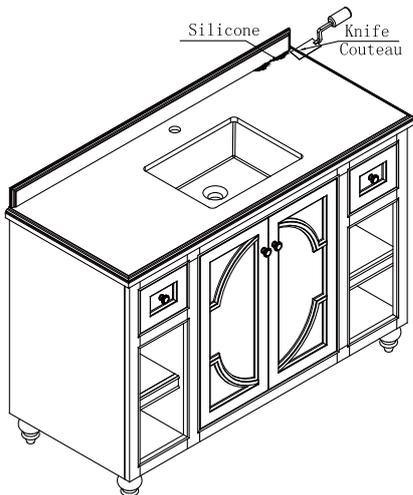

### Step 4

