








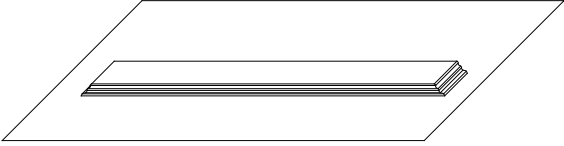
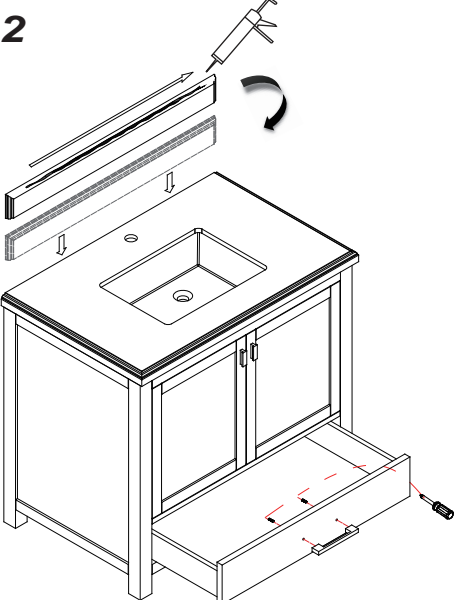
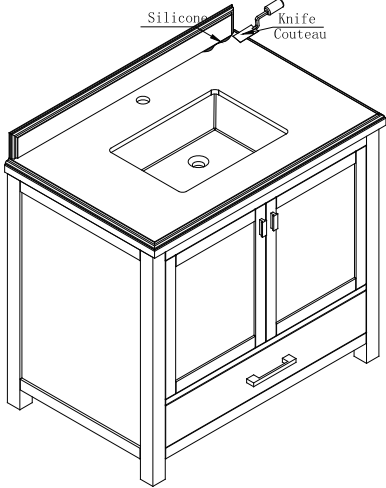
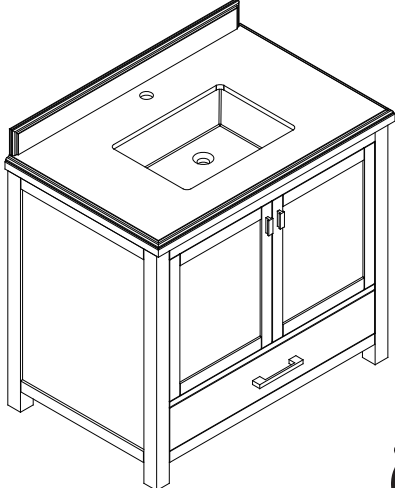



## Installation Instructions

**Notes:** We recommend that you rough-in the drain and water lines after receiving the unit.  
 The vanity should be installed by a professional plumber.  
 Drainer pipe and trap are not included.  
 If you experience any difficulties with this product, do not return to the point of purchase. Please contact MISENO directly at [infoservice@miseno.com](mailto:infoservice@miseno.com), and we will help resolve your issue.

Part List	A (cabinet)  x1	B (backsplash)  x1	C (screw)  x6	D (handle)  x2	D (handle)  x1
Tools required	 screwdriver(Phillips)	 silicone	 level	 tape measure	
<h3>Step 1</h3> <p><b>CAUTION</b>                  Handle the backsplash with extreme care!                  Stone backsplash are very fragile.                  Always handle gently and place them flat on a soft surface.</p> 			<h3>Step 2</h3> 		
<h3>Step 3</h3> 			<h3>Step 4</h3>  <div style="text-align: right;">  24h                 </div>		