



SQUARE & RECTANGULAR BASES

Model Numbers:


MSP-4834C / MSP-6030R / MSP-6030L / MSP-6032R
MSP-6032L / MSP-3232C / MSP-3636C

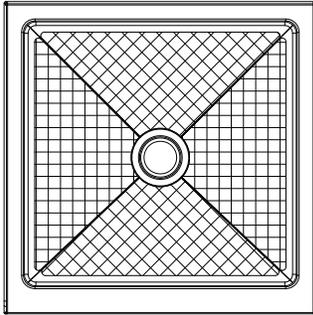


32" W x 32" D

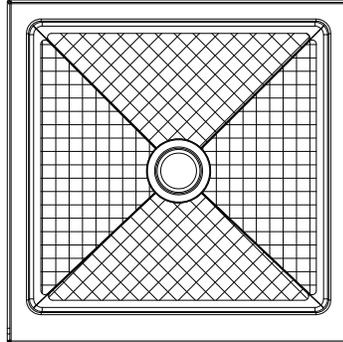


36" W x 36" D

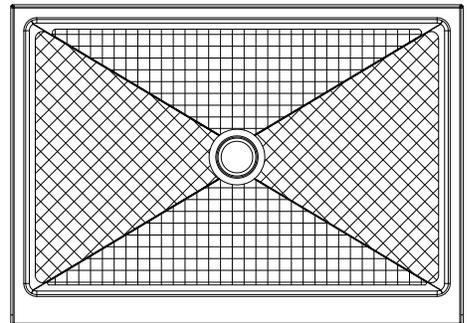


48" W x 34" D

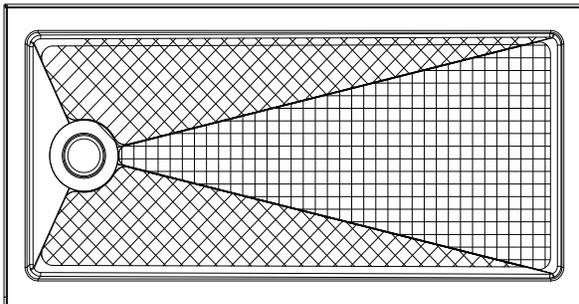


60" W x 30" D

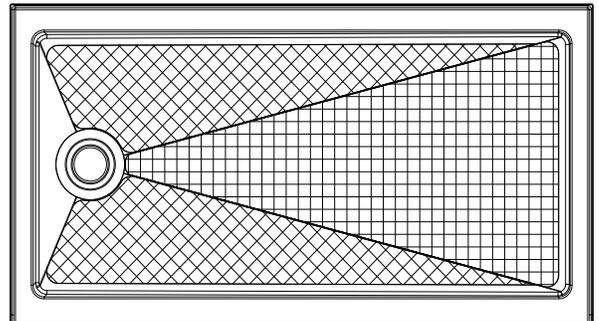

60" W x 32" D

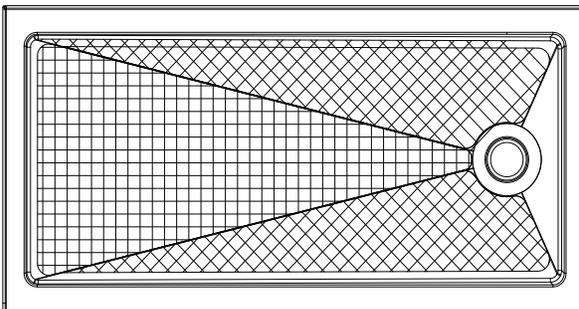

60" W x 30" D

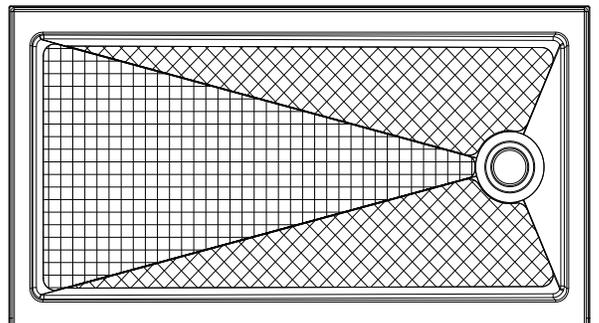


60" W x 32" D

NEED INSTALLATION HELP?


Call Customer Service at 1-855-480-2915 • Monday - Friday 7:00 am - 5:00 pm Pacific Standard Time

STUD LAYOUT


MSP-3232C
32" x 32" Square Base
 Fits 32" rough opening

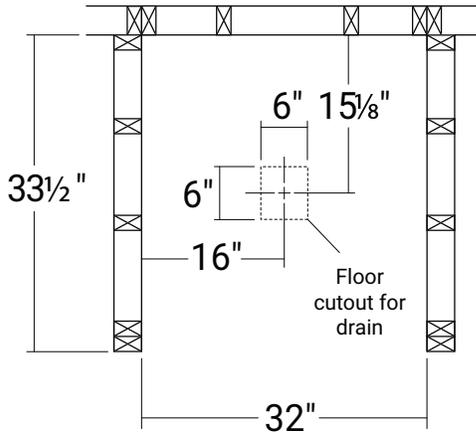


MSP-3636C
36" x 36" Square Base
 Fits 36" rough opening

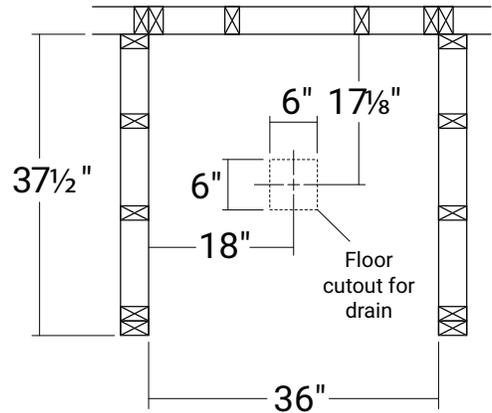


MSP-4834C
48" x 34" Rectangular Base
 Fits 48" rough opening

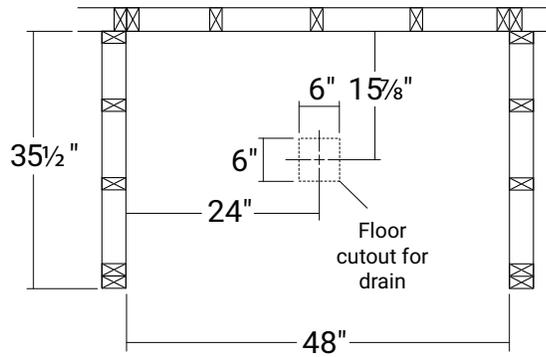

MSP-6030R / MSP-6030L
60" x 30" Rectangular Base Right/Left
 Fits 60" rough opening
 Right-hand drain shown. Floor cutout opposite for left-hand drain.

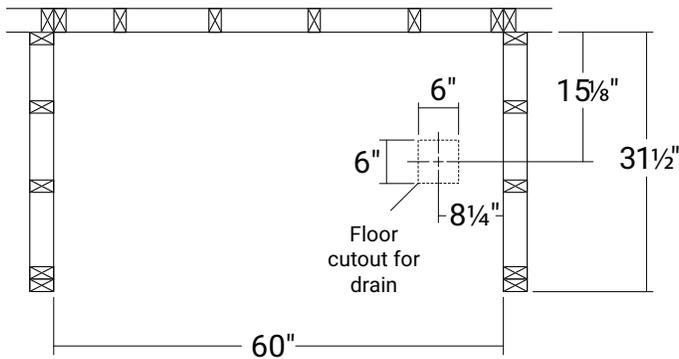

MSP-6032R / MSP-6032L
60" x 32" Rectangular Base Right/Left
 Fits 60" rough opening
 Right-hand drain shown. Floor cutout opposite for left-hand drain.

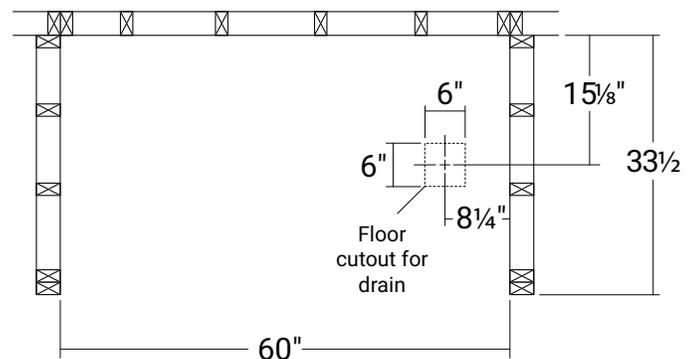

= stud location

Shower pans are subject to a manufacturing tolerance of +/- 1/8"

Tools Needed

- Level
- Jigsaw
- Tape Measure
- Pencil
- Power Drill
- Safety Glasses
- 1/8" Drill Bit

NOTE: Drain not included

Supplies Needed

- Flathead Screws, 1-5/8"
- Wood Shims
- Construction Adhesive
- Mortar Compound (optional)
- Drain Assembly
- Silicone Caulk for Drain

Starting Your Installation

- To ensure the base is the correct color, peel away the blue protective film from base edges. Leave remaining film until installation is complete to protect product finish.
- Allow the base to reach room temperature before installation.
- Read installation instructions carefully before starting project.
- Keep instructions for warranty information.
- Do not use plumber's putty, as it may result in product failure. Use a high-grade silicone caulk or latex sealant for all necessary locations.

BASE INSTALLATION

Step 1 - Strip alcove to bare studs. Shower stud pocket should be constructed as shown on stud layout page. Studs should be plumb and square to the subfloor.

Floor must be clean, smooth, and level. Subfloor must be installed in the stud layout. Do not install shower base on open floor joists.

Cut hole in subfloor as shown to accommodate drain (not included). Make sure floor cutout is in proper location for directional pans.

Step 2 - Trial fit base in prepared alcove. With base sitting on the floor, check for level on top of the base. The base should be level from front-to-back and side-to-side (Figure 1).

If base is not level, install wood shims between base feet and subfloor as needed.

Remove base from alcove.

Optional: If subfloor is not level, a floor leveling compound (smooth mortar) or a similar quick-setting compound specifically made for leveling floors is an excellent way to fully support and level base instead of wood shims.

Step 3 - Apply construction adhesive to all feet and install base into alcove (Figure 2).

Level base with shims into construction adhesive under feet (Figure 3).

After base is leveled, if alcove is larger than base, shim between base and studs to create tight fit. Pre-drill holes using 1/8" drill bit. Then screw base flange to all studs (Figure 4).

NOTE: Failure to screw flange to all studs will void warranty.

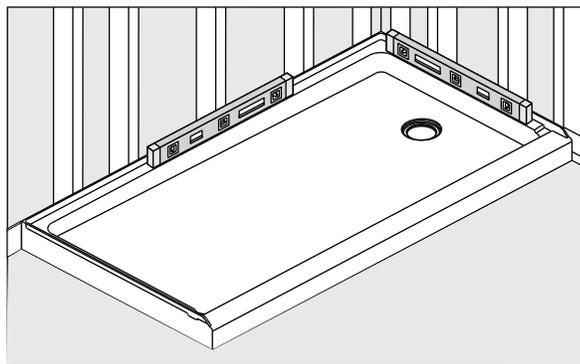


FIG 1 Check to ensure the base is level.

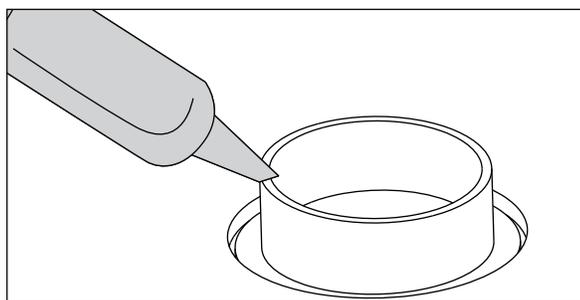


FIG 2 Apply construction adhesive to all feet.

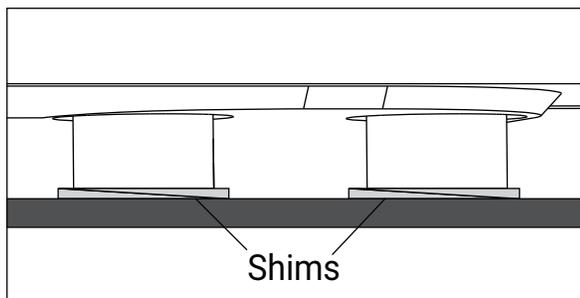


FIG 3 Apply shims under feet into adhesive as needed to level the base.

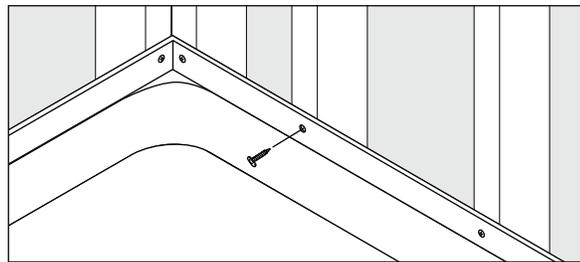


FIG 4 If necessary, shim between base and studs for a tight fit. Screw flange to all studs.

CLEANING

Do not use any abrasive cleaners or metal scrapers.

If drywall mud or plaster gets on your shower, it may be carefully removed with a wooden scraper made from a piece of scrap wood.

Adhesive may be removed with mineral spirits.

Ideal cleaners are Formula 409, Lysol Bathroom Cleaner or Comet Gel.

WARNING: Some cleaning products are not suitable for use on this shower base. Read all labels carefully. DO NOT USE products that list incompatibility with ABS, Acrylic or Polystyrene.

SCRATCH REMOVAL INSTRUCTIONS

For effective scratch removal and polishing, you will need to purchase these items:

- 1 sheet 1000 grit 3M wet/dry sandpaper
- 1 sheet 1500 grit 3M wet/dry sandpaper
- 1 sheet 2000 grit 3M wet/dry sandpaper
- 1 small container of 3M rubbing compound (#05933)

These items can be purchased locally at most auto parts stores, or auto paint supply shops.

Step 1 - Start sanding with 2000 grit sandpaper. Use a small 2"x2" square and use plenty of water. The water is both a lubricant and prevents residue buildup on the sandpaper. Residue buildup shortens the effective life of the paper and may scratch the surface you're trying to polish.

Step 2 - 2000 grit sandpaper is the finest grit. If you can't remove all scratches using 2000 grit, switch to 1500 grit and polish until you no longer feel the scratches, then sand with 2000 grit.

Step 3 - If 1500 grit will not remove the scratches, switch to 1000 grit sandpaper. This grit should remove all but the deepest gouges. Once the scratch is removed with 1000 grit, sand with 1500 grit until smooth, and then 2000 grit for the final sanding, still using water.

Step 4 - Once all scratches have been removed and smoothed through progression to 2000 grit sandpaper, use the 3M rubbing compound (#05933) on a soft, damp cloth. Polish with firm pressure, using a circular motion, until the finish returns to its normal smooth shine.

NOTE: For deep gouges professional finish repair is recommended.

SCRATCH / SANDPAPER GUIDE

SUPERFICIAL SCRATCHES 2000 grit
LIGHT SCRATCHES 1500-2000 grit
MEDIUM SCRATCHES 1000-2000 grit
DEEP GOUGES 600-2000 grit
PROFESSIONAL REFINISHING RECOMMENDED

ATTENTION CUSTOMER:

Important Shower Enclosure
Warranty Information
Please do not discard

**Thank you for your purchase of a shower enclosure
from MISENO**

In order to be eligible for product warranty, please save your
order number and the name of your retailer.

No registration is required.

We retain sales records from all our retail partners, so if warranty service
is required, the name of your retailer and order number is all you need.

RETAILER: _____

ORDER #: _____

For any questions or comments
about your new shower enclosure,
please contact our customer service at:

1-855-480-2915

or send us an email at

infoservice@miseno.com