


# **Barn Door Hardware Installation**

### For Use with 78-3/4" Round Rod Single Roller Kits


Parts Included:

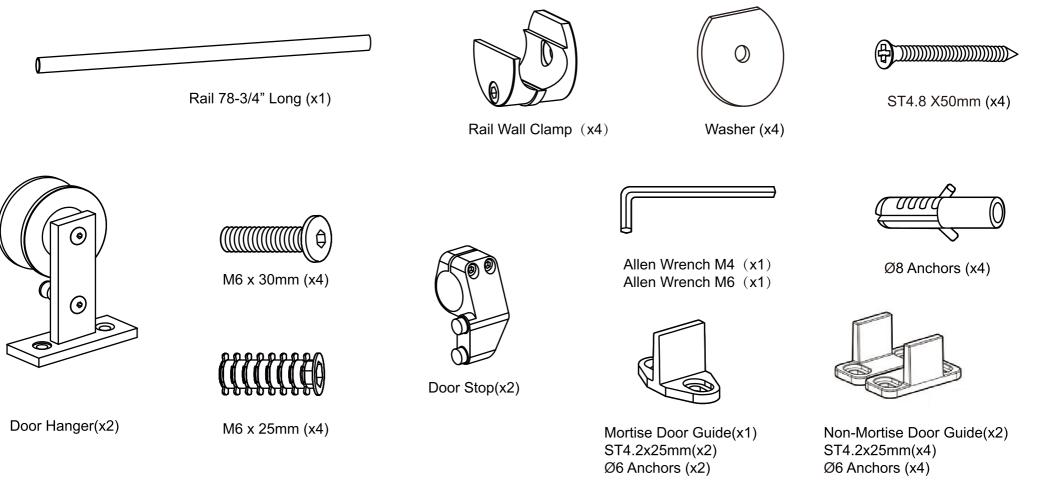

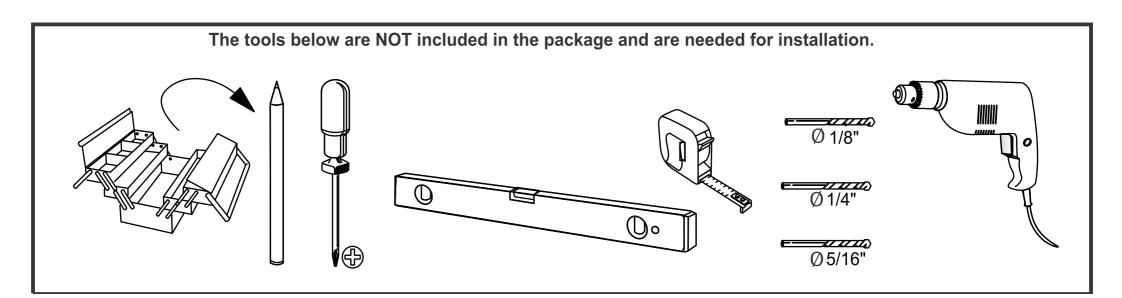

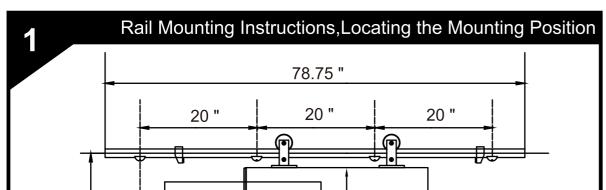

DH = Door Height

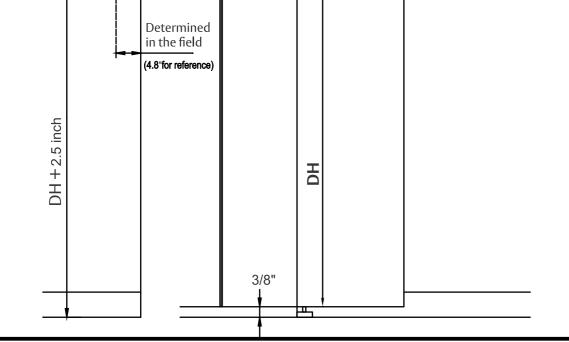


Recommend that you layout your door and hardware on the floor first to determine spacing.


#### Measure twice Mount once

Rail must be level to keep door from moving by itself!


1

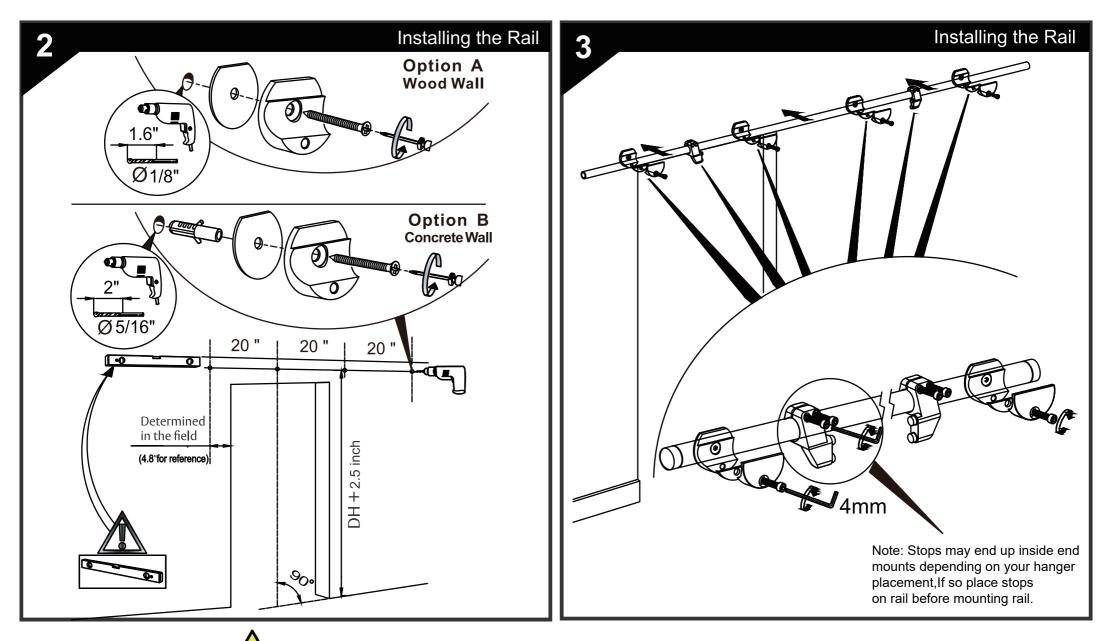


All Rail Mounts must be screwed into a solid Wood Header

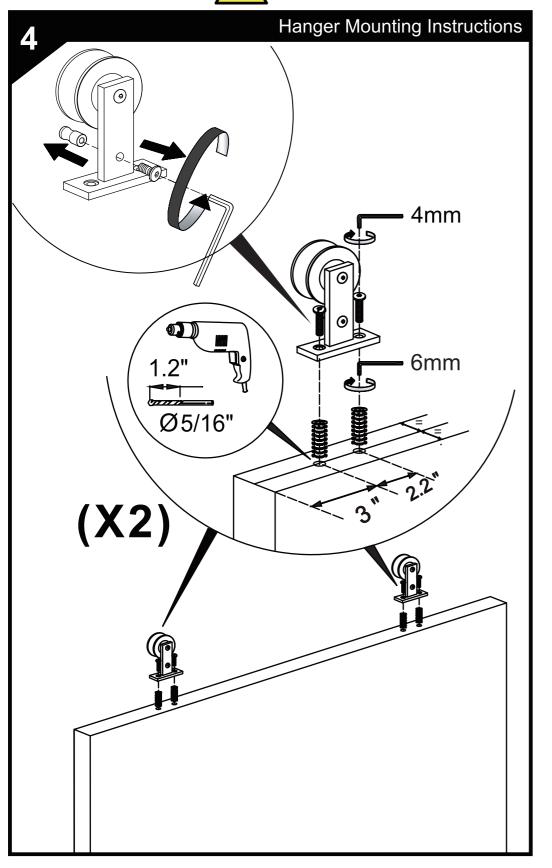

Hanger position from the edge can vary based on your door design. Position Shown is for a flat Surface Door you may have to Adjust to center Hanger onto the vertical styles of your door

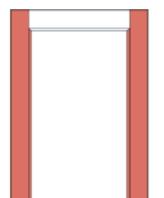



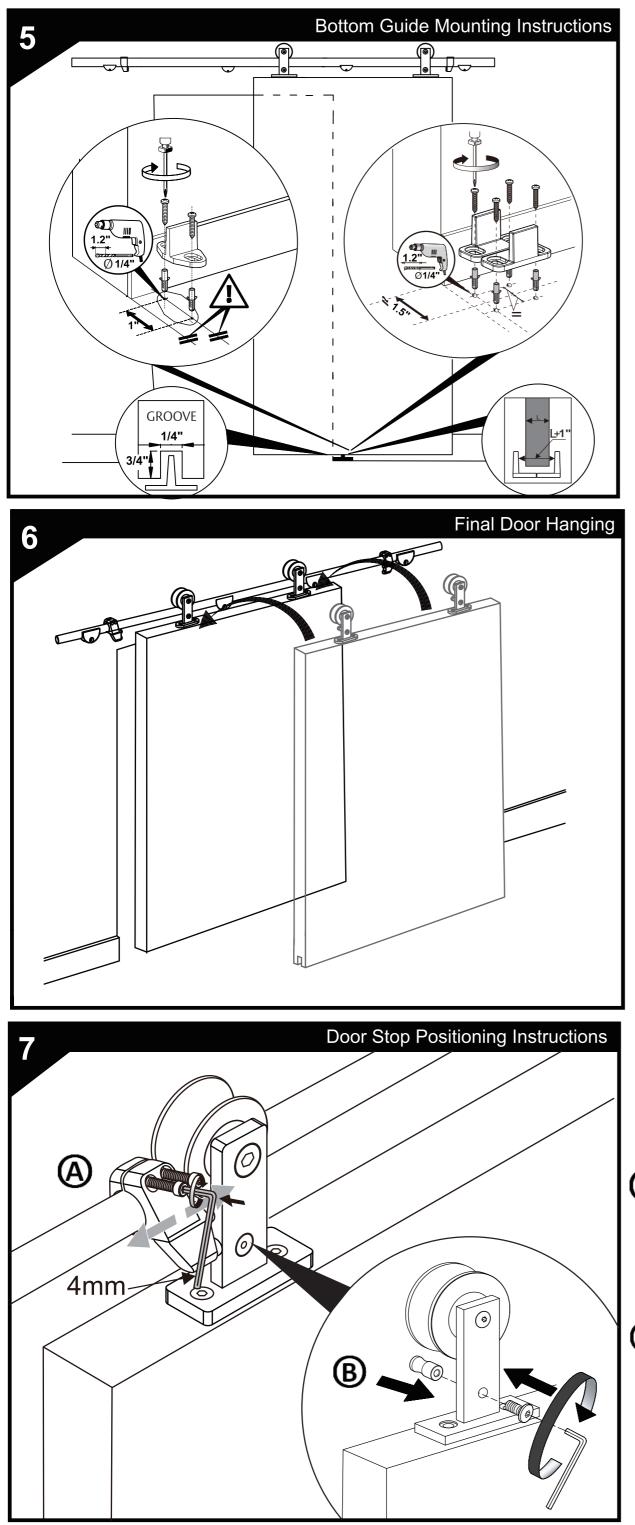


The Guide Stabilizes the door by keeping the bottom from Swinging. Kit includes both a Mortise (Grove in the bottom of the door) and a Non-Mortise option.

This step will require hanging and removing the door to measure and install the Guides

Hang the door and slide it into the Floor Guide .

Adjust your Door Stops to your desired position and lock down your Door Stops with the Allen Wrench Provided

B Reinstall Auti-jump pins to keep door safely on the rail when in use

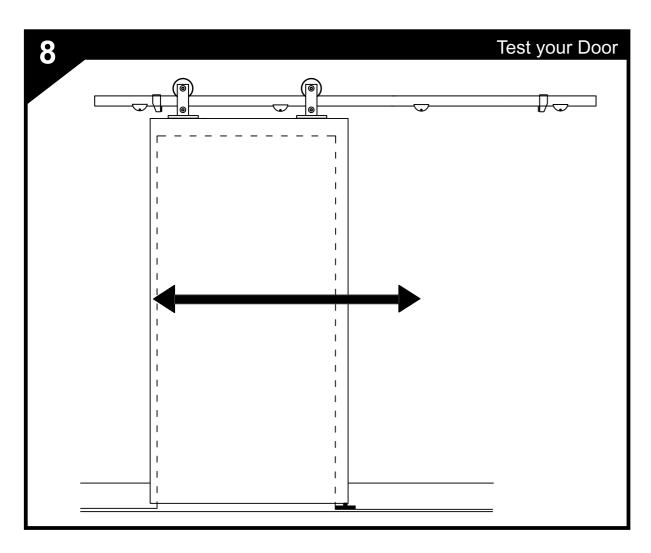

Door should Slide smoothly in both Directions

## **Optional Accessories**

### Handles Interior and Exterior

Handles make Opening and Closing the door easier



**Privacy Latch** Especially important on bathroom doors



Expansion Parts Rail Joiner



### **Steel Door Guides** Low Profile and Industrial look wall mount

