


23*16CM

CAUTION

DO NOT UNSCREW SMALL RETAINING SCREWS AT REAR OF CYLINDER. USE ONLY GRAPHITE FOR LUBRICATION. NEVER OIL CYLINDER OR ALLOW FOREIGN SUBSTANCE TO ENTER KEYWAY.

INSTRUCTIONS


1. Apply proper template to inside of door and follow instructions given on template.

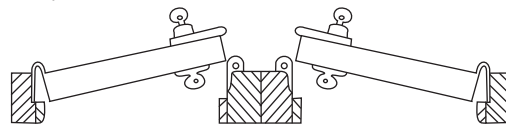

LEFT HAND DOOR

RIGHT HAND DOOR

2. Insert cylinder and ring from the outside of door and place backplate on inside of door, connecting backplate with cylinder by two connecting screws. Cut off screws to proper length relative to the door thickness.

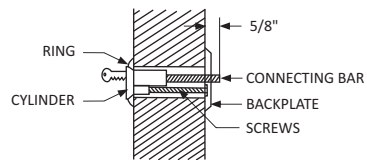

3. Cut off connecting bar so that it projects 5/8" beyond inside of door.
4. Place lock on door so that connecting bar enters slot. Using punched holes as guide, screw lock to door.
5. Apply strike to door jamb lower than the centerline of the lock to allow for any sag in door.
6. Mortise long lip into door jamb and leave short lip on surface.

TEMPLATE

JSC-FGS-H101

