




27" Wall Oven Bottom Trim Flush Mount Installation without Pedestal


Questions? Visit us at monogram.com. In Canada, visit monogram.ca.

The oven must be installed before you install this trim kit.

- Attach the LEFT BRACKET (L) on the left side of the oven and the RIGHT BRACKET (R) on the right side of the oven through mounting holes in the front vertical brace. Use the sheet metal screws provided.

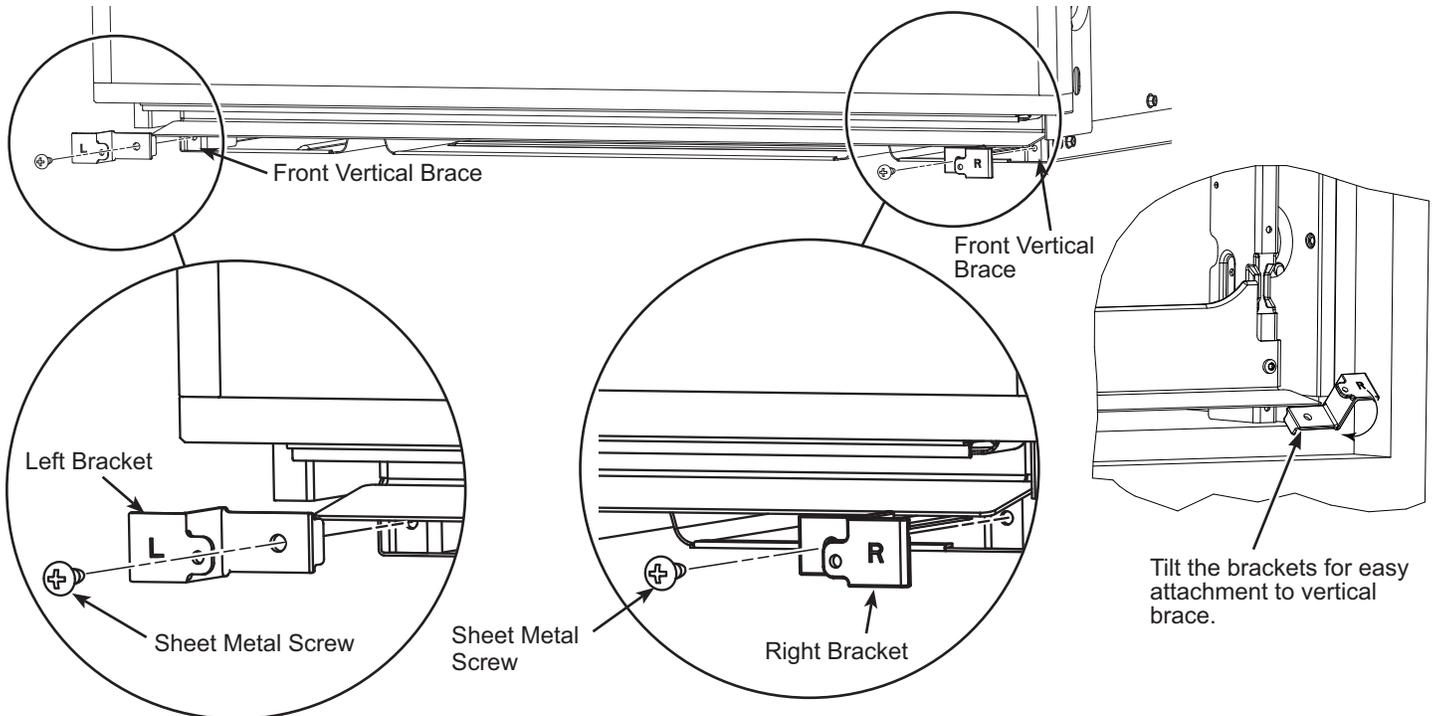

- Attach the BOTTOM TRIM to these brackets with the flange inside the cabinet and toward the bottom. Use machine screws provided.

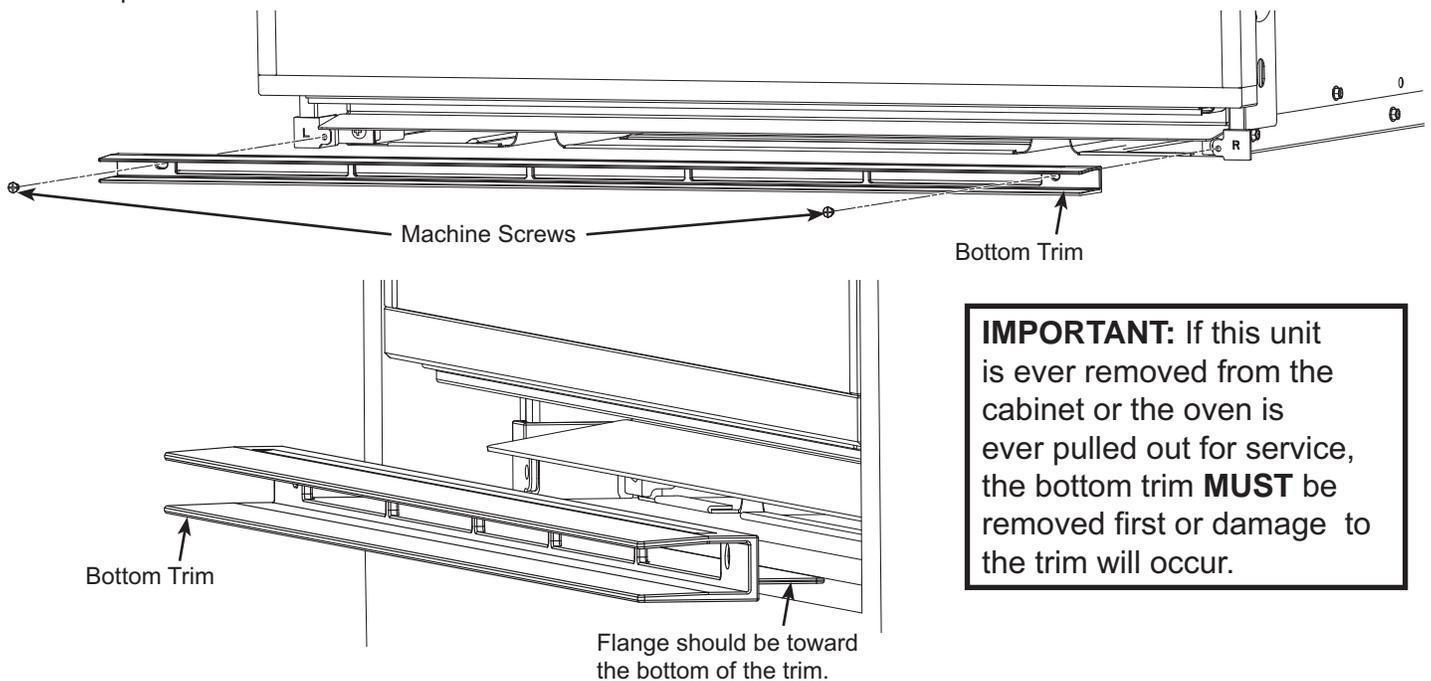

IMPORTANT: If this unit is ever removed from the cabinet or the oven is ever pulled out for service, the bottom trim **MUST** be removed first or damage to the trim will occur.