
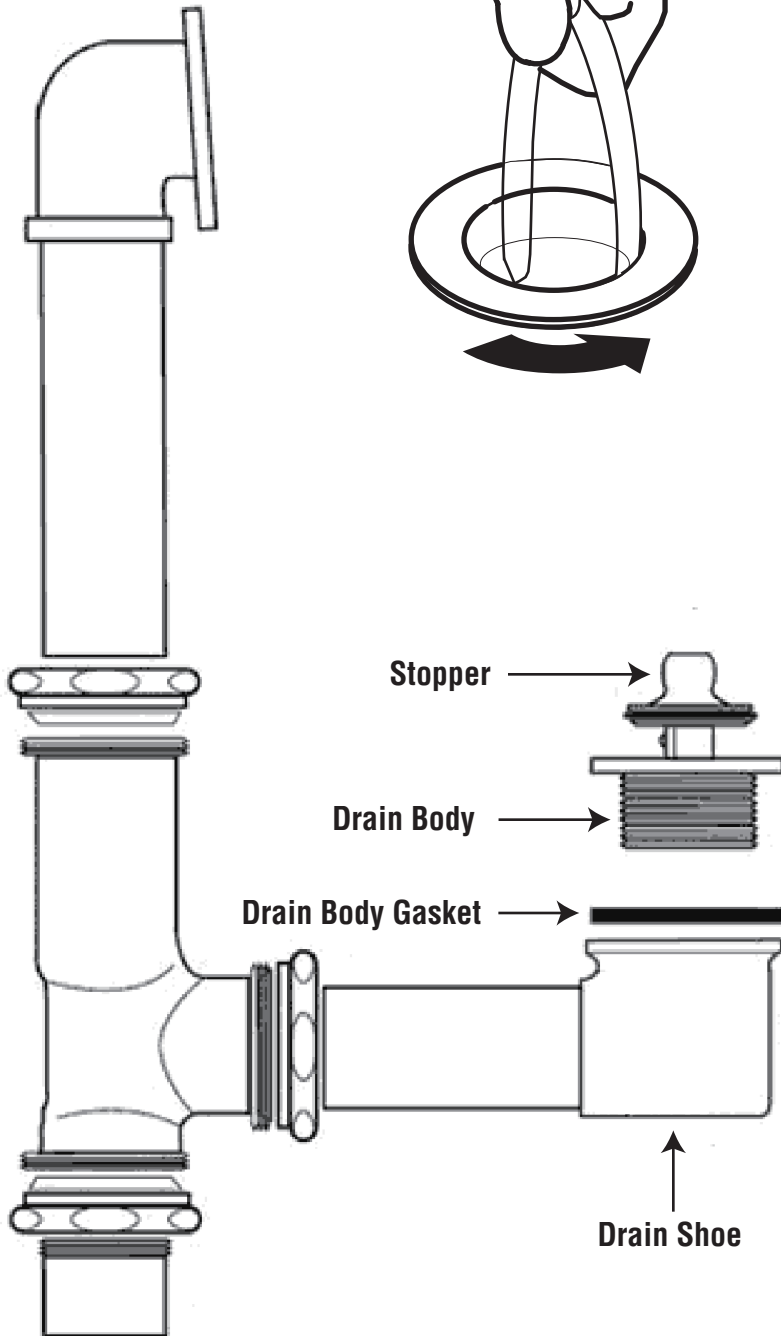


- Step 1. Insert the Drain Key or the pliers into the drain.
- Step 2. Following the instructions for the tool, turn counterclockwise.
- Step 3. Keep turning drain counterclockwise until the old drain is released.

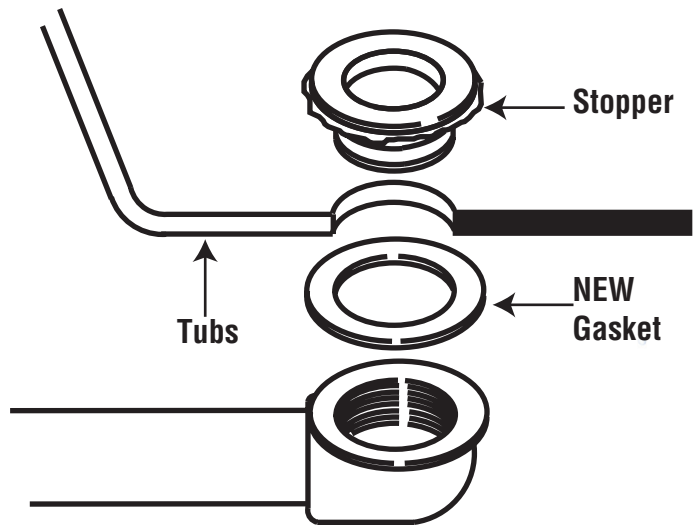

- Step 4. Clean drain area, making sure to remove all old putty residue. Allow to dry before installing new drain.
- Step 5. Replace stopper into assembly.