


Making Dream Surfaces Attainable

END CAP

End caps are used to fill the gap between the floor and carpet, hearths or against sliding doors.

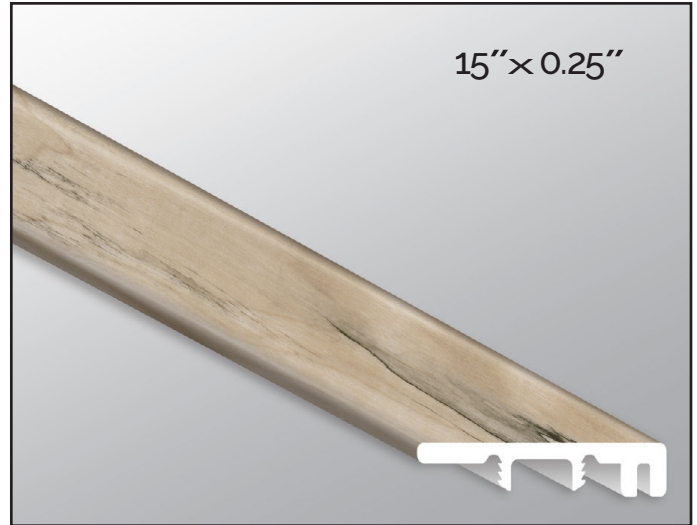

INSTALLATION

1

Install the flooring leaving a 1" gap between the two floors for the end cap installation.

2

Measure and trim to fit.

3

Center the track between the flooring leaving a 1/4" spacing between the track and floor planks. Screw track to subfloor (or glue down with construction adhesive).

4

Starting at one end, press the molding into the track inching along the length of the molding. **You may also use a rubber mallet.**