




# Installation Instructions


**Derin Collection** 

Following these mounting instructions with the hardware included will be more than sufficient to support vanity installation.

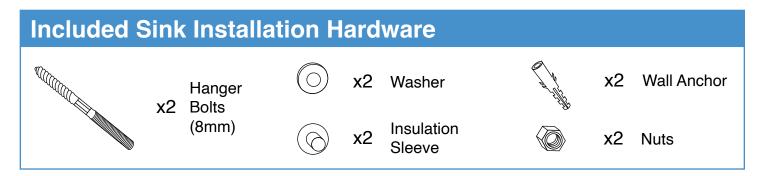

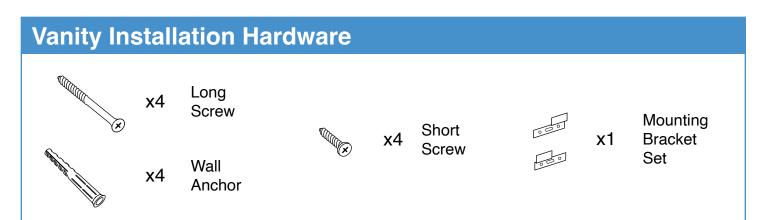

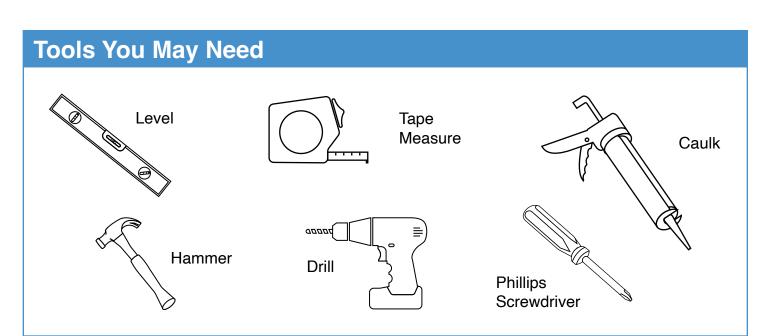

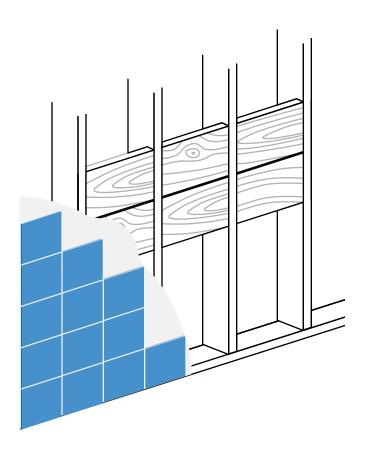



# **1. Prepare Location**

Locate studs in the wall. If the studs do not line up with the holes in the back of the sink and vanity, be sure to add sufficient wall supports behind the finished wall.

# 2. Install Legs

Lay vanity cabinet on it's back. screw on the feet with phillips

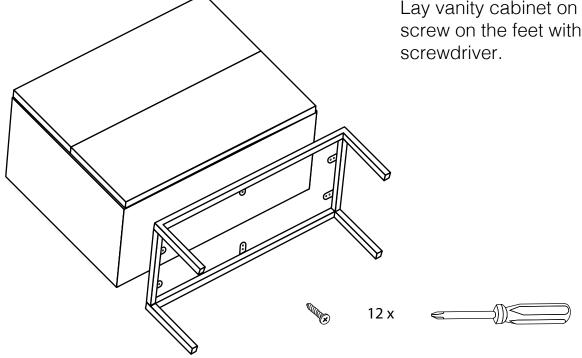

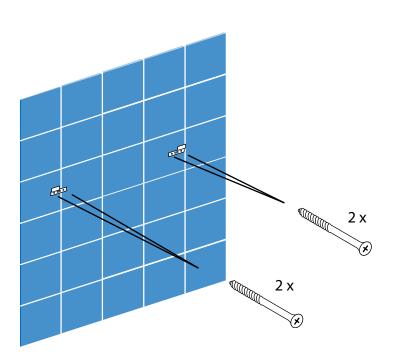



# 2. Mount Vanity Bracket


Mark the desired height of the vanity on the wall. Mark the location of the vanity. Drill pilot holes and install the mounting brackets. Check position with a level.

#### 4. Install Vanity Base

Remove drawers. Rest vanity on mounting brackets. Check for level. Use a phillips head screwdriver to adjust.

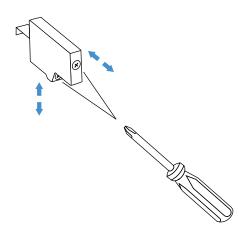


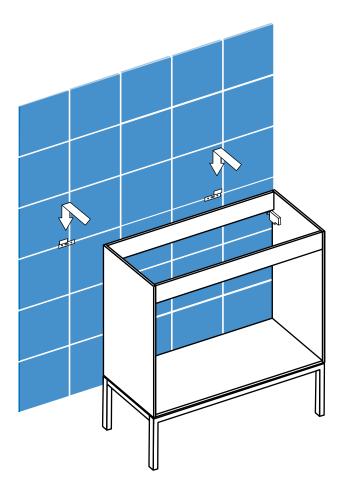


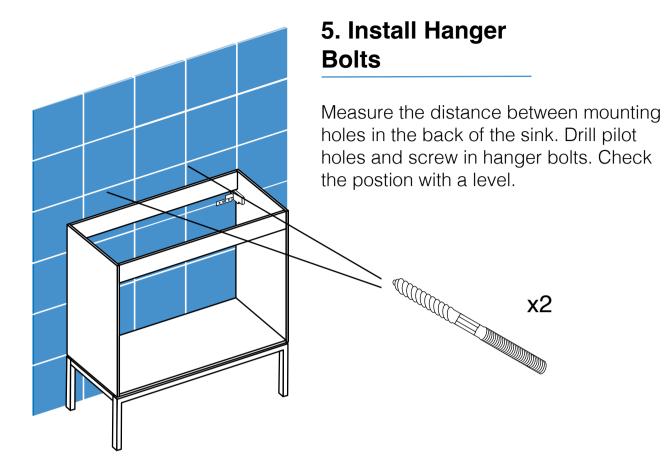

# 6. Mount Sink With Washers and Nuts

Thread the sink on to the two hanger bolts. Secure the sink with insulation sleeves, washers and nuts. Be careful not to over tighten the bolts. Over tightening can cause the sink to chip and crack.

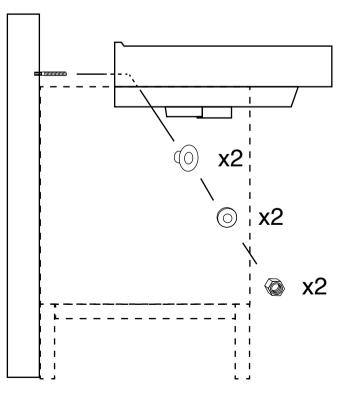

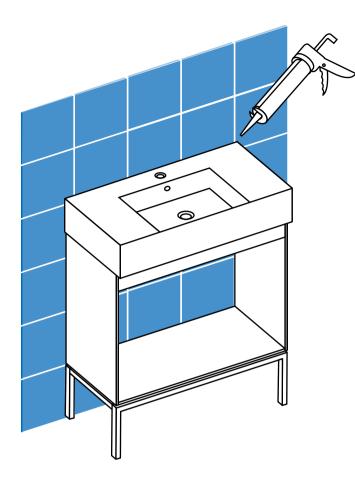



# 7. Install Caulk

Finish the sink installation with a bead of caulk between the sink and wall.

# 8. Install Handles

Screw on handles with phillips screwdriver. Replace drawers or close doors.

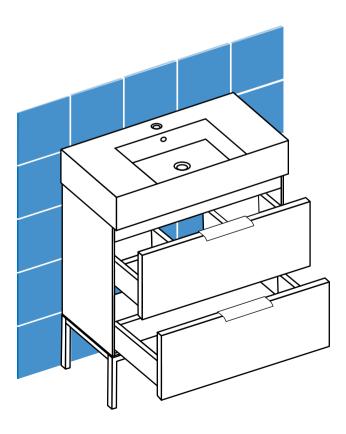

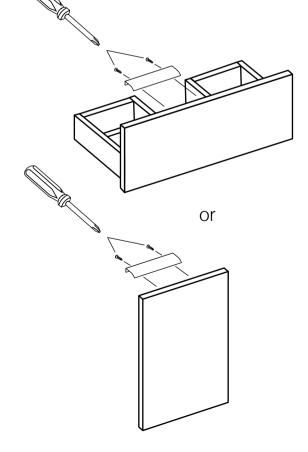

# 9. Vanity Accessories

