



INSTALLATION INSTRUCTIONS
JACOBEOAN SINGLE HOLE
KITCHEN FAUCET
Model No's: 2470-5203,

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

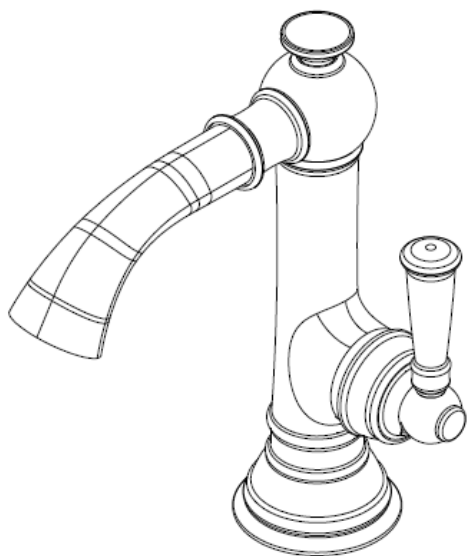

2470-5203

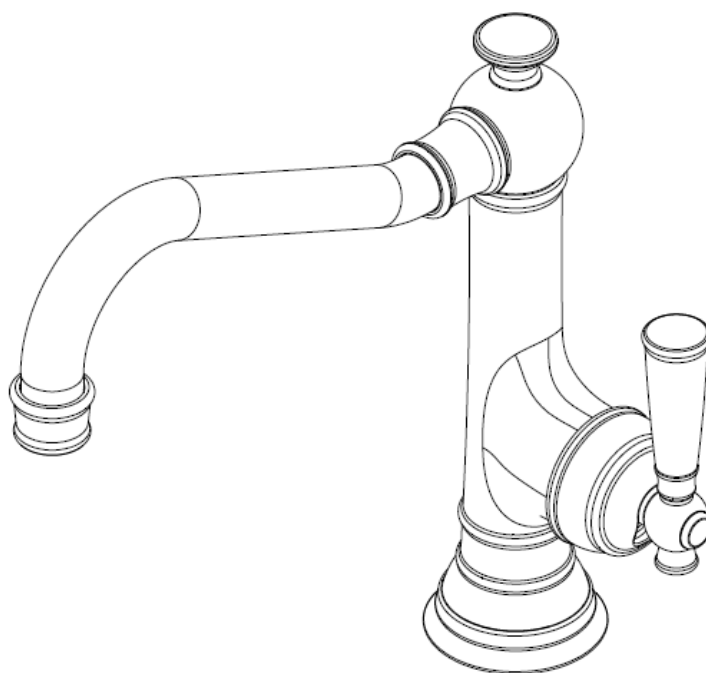

2470-5303

**INSTALLERS WARNING:
DO NOT CUT PEX SUPPLY LINES.**

It is not necessary or prudent to cut the pex supply lines of this product. Brasstech will not accept product returns for any reason if the supply lines have been cut.

If you have made this mistake, please contact Brasstech customer service at (949) 417-5206 for assistance.

Recommended Installation by a Professional Plumbing Contractor

Installer: Do not cut pex supply line. Doing so will void warranty and expose installer to potential liability.

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials. Installer: Do not cut pex supply line. Doing so will void warranty and expose installer to potential liability.

If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size x 1/2" thick), should be utilized.

1. Drill hole in mounting surface. Recommended deck hole $\varnothing 1.350''$ not to exceed $\varnothing 1.562''$.
2. Place O-ring (2) on underside of base RING (1). **See Figure 1.**
3. Insert Hoses through base RING (1) and hole in mounting surface. Secure into place with MOUNTING KIT (3). **See Figure 1.**
4. Attach hot/cold spout supply directly to valves in the wall. **See Fig. 2**
5. With faucet in the OFF position, open water supplies valves. Inspect connections under sink for leaks. **DO NOT** turn faucet on yet.
6. Detach AERATOR ASSY (4) from SPOUT (5), turn on faucet and flush for one minute to remove debris from lines.
7. Turn OFF faucet and reattach AERATOR ASSY (4) to SPOUT (5).

