

# Installation Instructions

\*\*\*URGENT: READ PRIOR TO ATTEMPTING INSTALLATION\*\*\*


## RECESSED LIGHTING - SAPPHIRE SERIES

ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION


### REFLECTOR CLIP

1. Connect and lock the trim connector to the housing connector.
2. Install the 3 reflector clips onto the plaster frame. Push the clips onto the edge of the plaster frame reveal with the clips pointing toward the center of the opening.
3. The clips should be spaced 120° apart
4. Push the reflector into the plaster frame opening until the reflector is flush with the ceiling. The reflector clips should hold the reflector in place.


INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN.

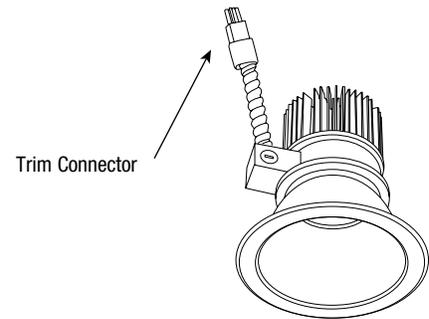


### NCHR-SERIES

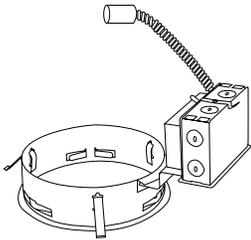

### NAH-SERIES

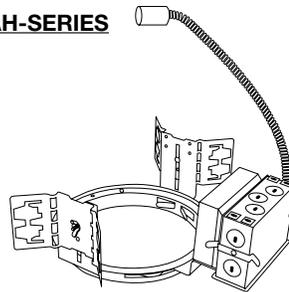

### NCH-SERIES

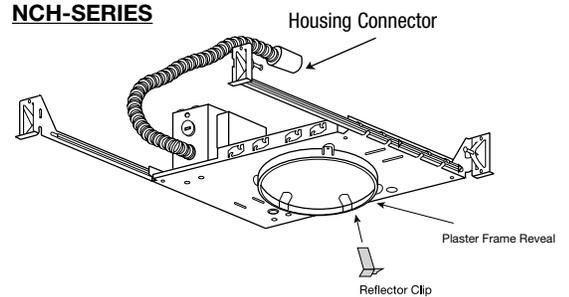

Please refer to individual Specification Sheets for dimensions.