
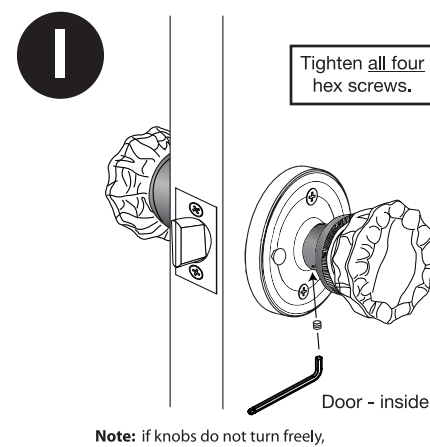
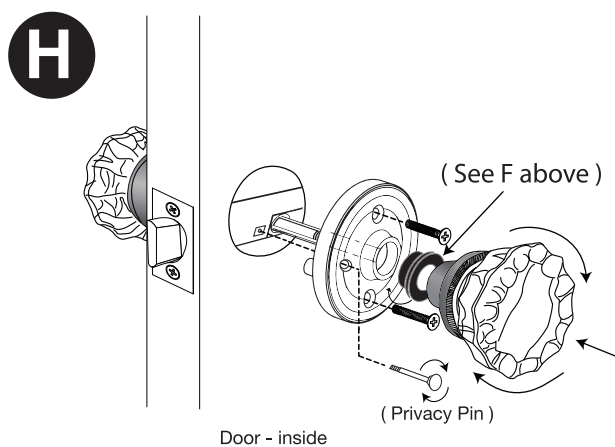
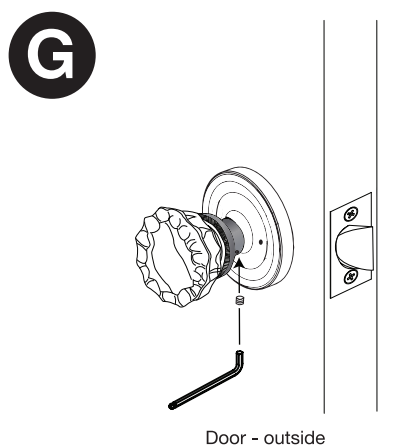
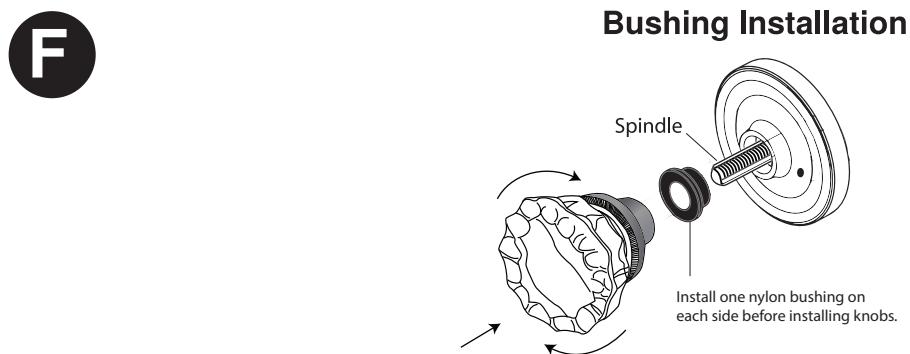
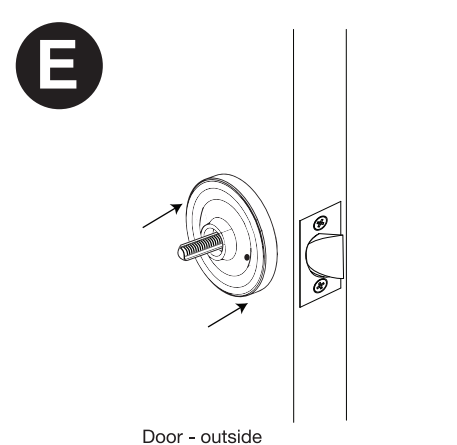
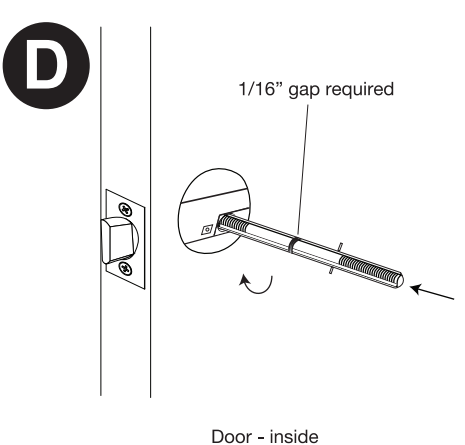
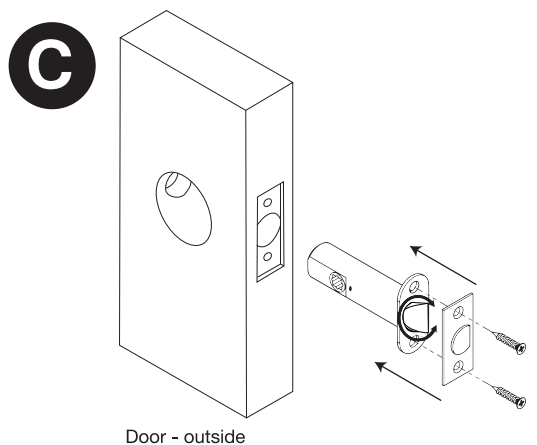
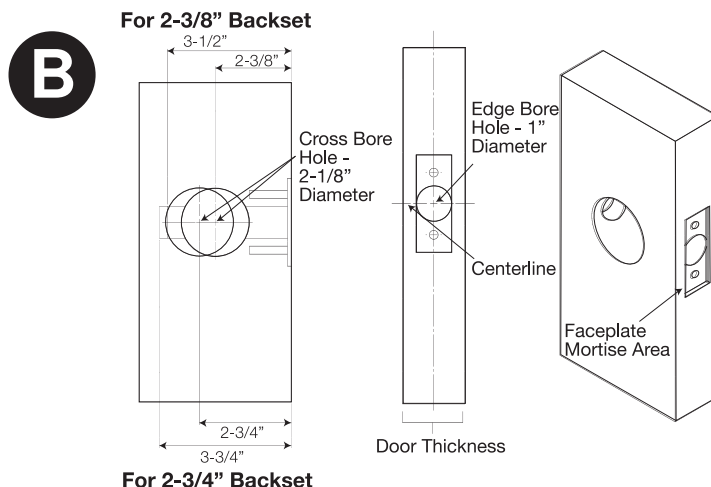


Rosette Door Hardware Installation Instructions

Updated October 2014

Privacy

Note: Passages and privacies fit doors 1-3/8" to 1-3/4" thick

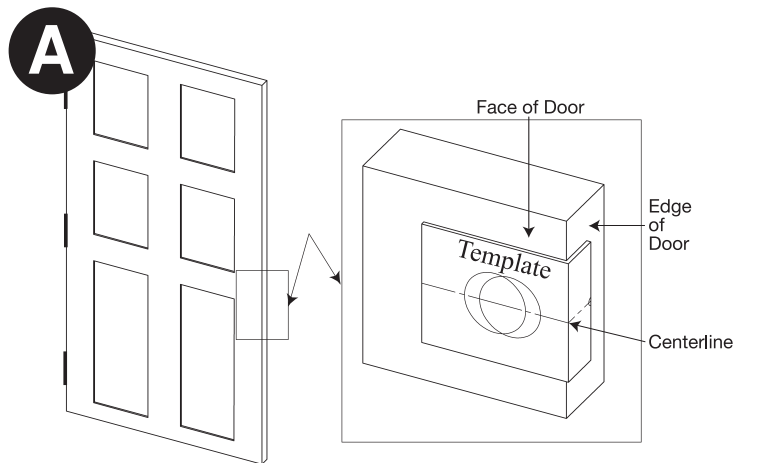

Note: if knobs do not turn freely, rotate one knob counterclockwise 1/4 turn.