

THERMA-GLASS

TETHEROW Shower Doors

Item No.

TET-6075-SC


TET-6075-BNC

TET-6075-MBC

TET-6060-SC

TET-6060-BNC


TET-6060-MBC

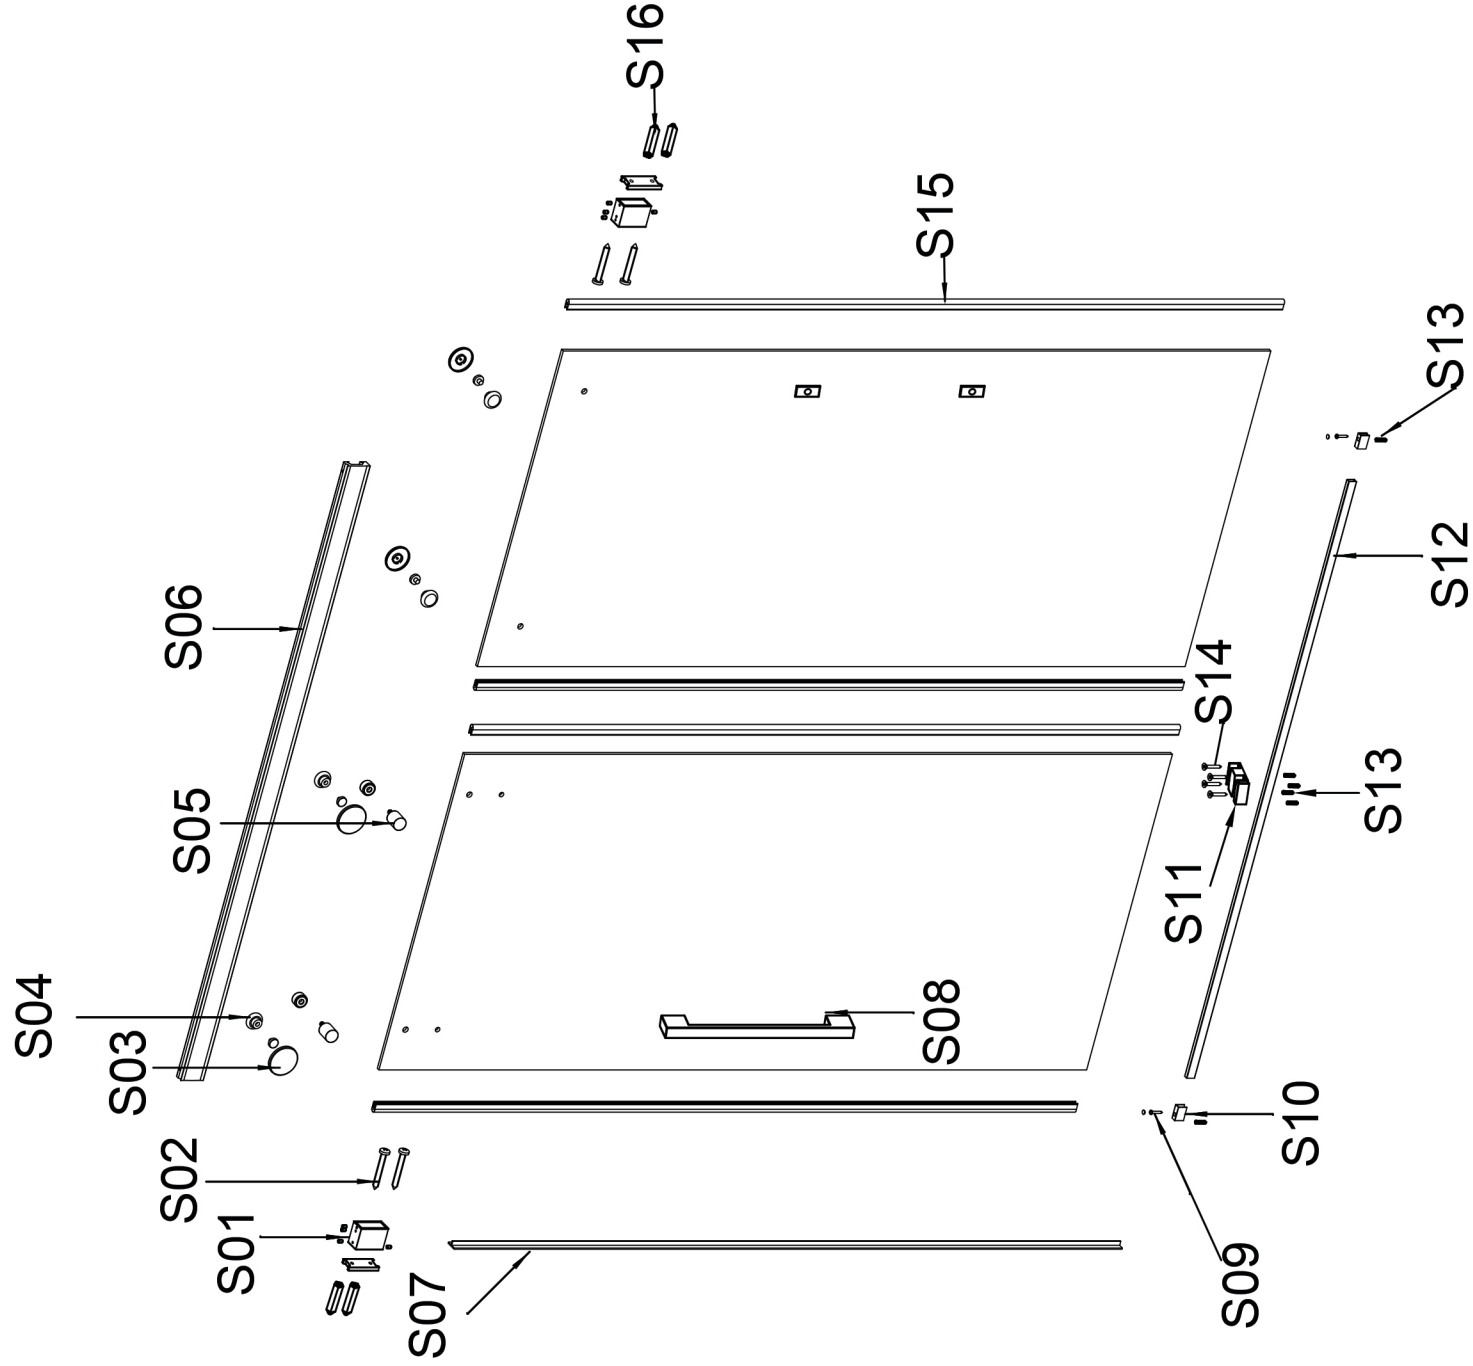


S01	S02	S03	S04	S05	S09
2X	4X	4X	4X	2X	2X
S10	S11	S13	S14	S16	
2X	1X	6X	4X	4X	4X

Tetherow Shower Door


Installation Steps

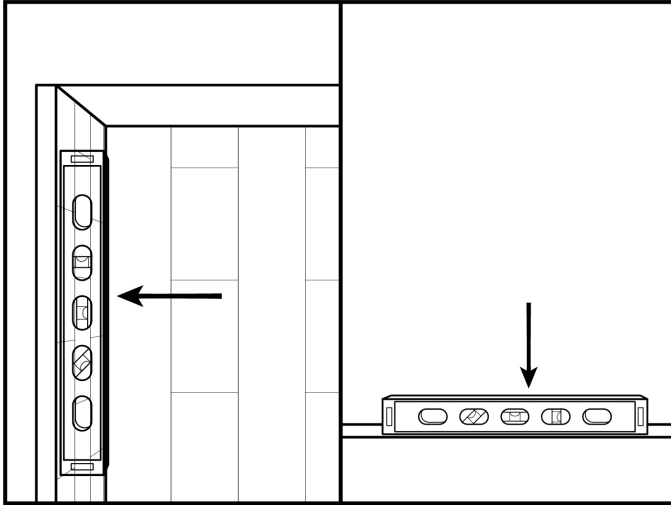


STEP 01: Ensure walls and base are level.

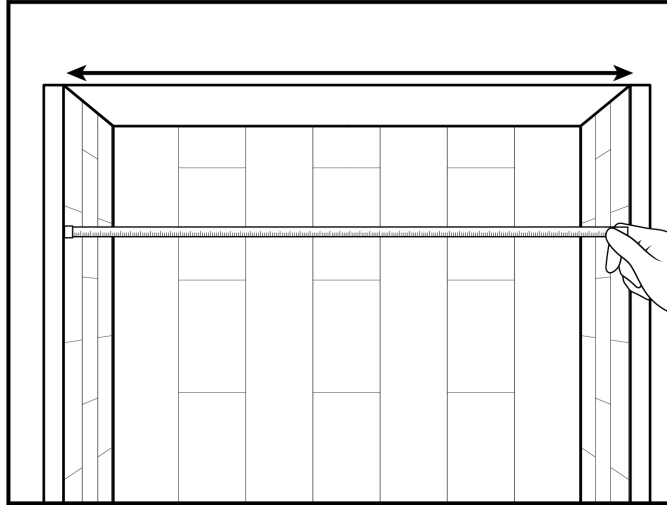


STEP 02: Verify the width of the shower opening.

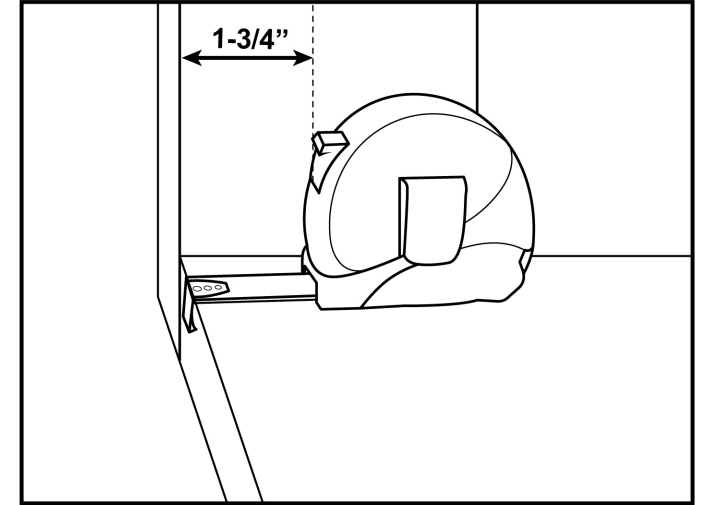


STEP 03: Make a measurement of 1-3/4" back on both walls.

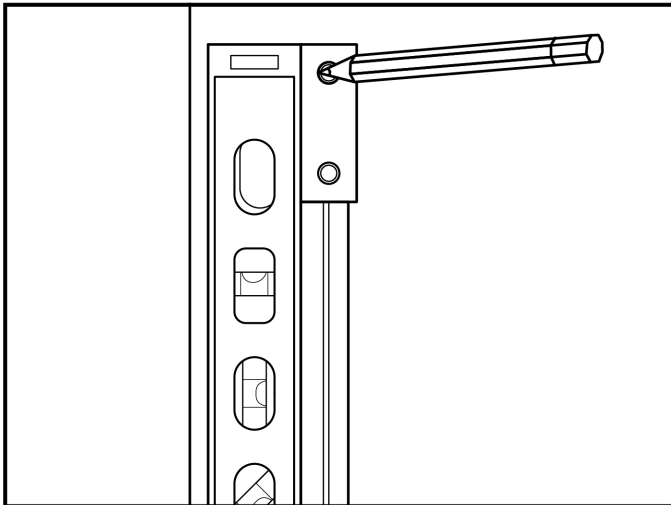

STEP 04: Center the "T-brackets" on the marks made in the previous step. Use supplied "T-brackets" (part S07) for placement of header brackets.

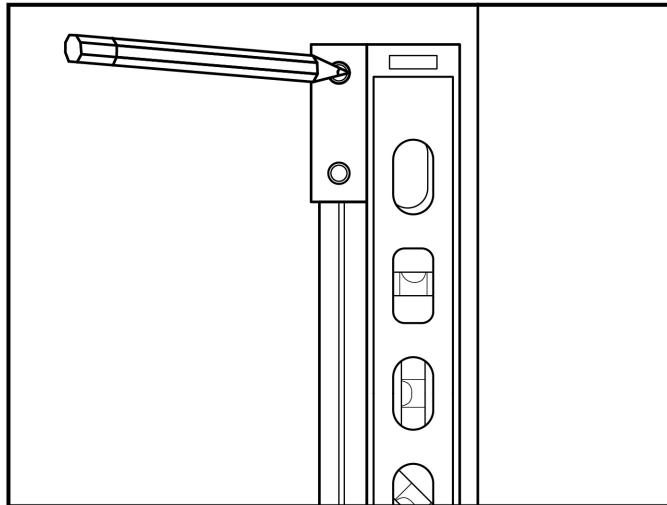


STEP 05: Repeat step 4 on the other wall.

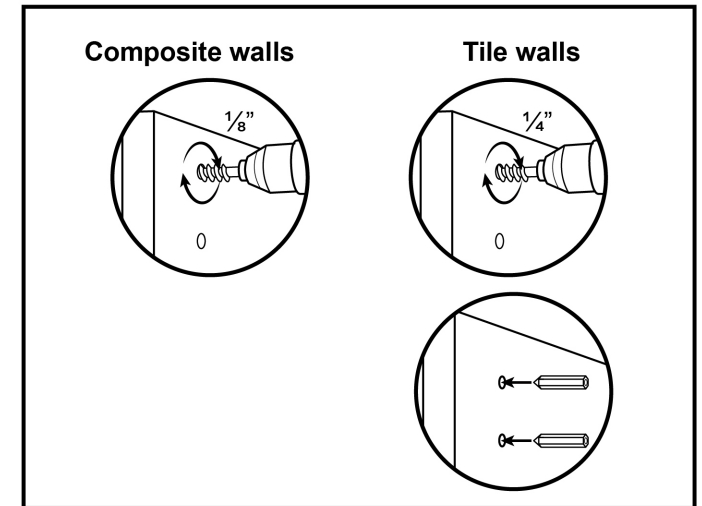


STEP 06: Drill holes for tile wall drill a 1/4" hole, for composite wall drill a 1/8" hole. For tile walls insert anchors.


Installation Process

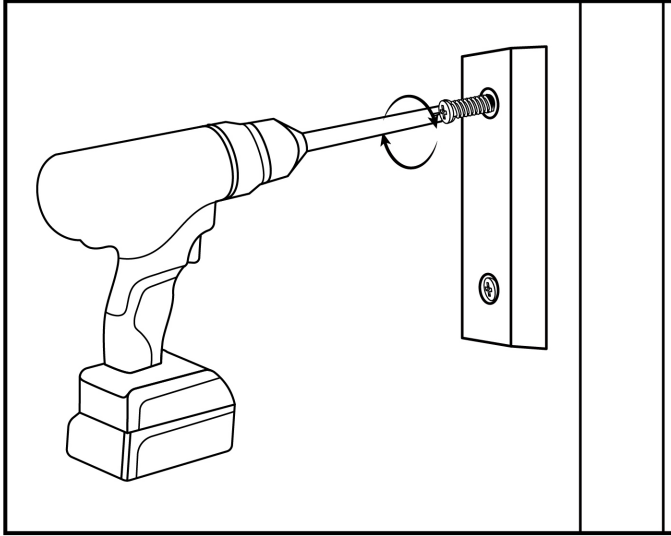


STEP 07: Install header bracket on both walls.

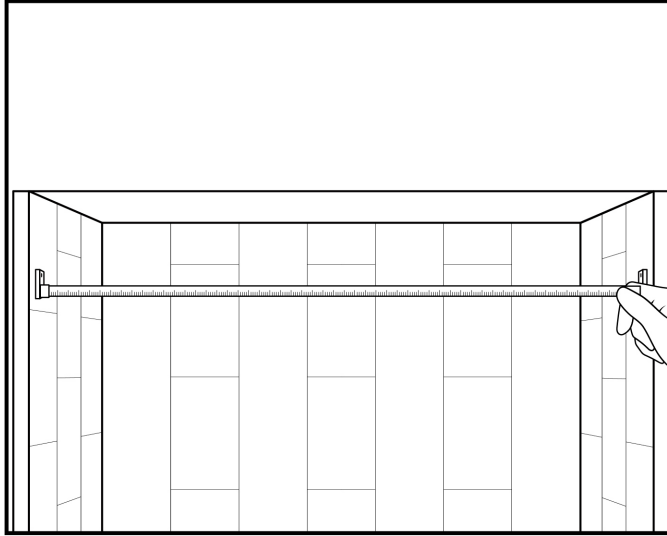


STEP 08: Measure the distance between the header brackets.

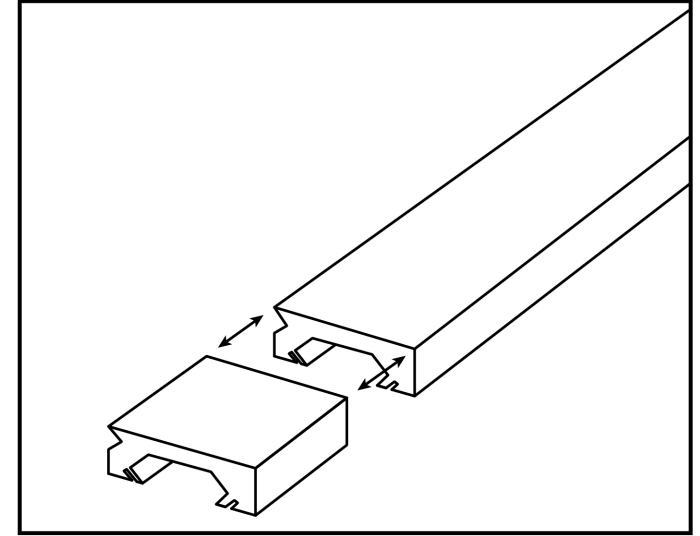


STEP 09: Subtract $\frac{1}{8}$ " from your measurement and cut the header to size.

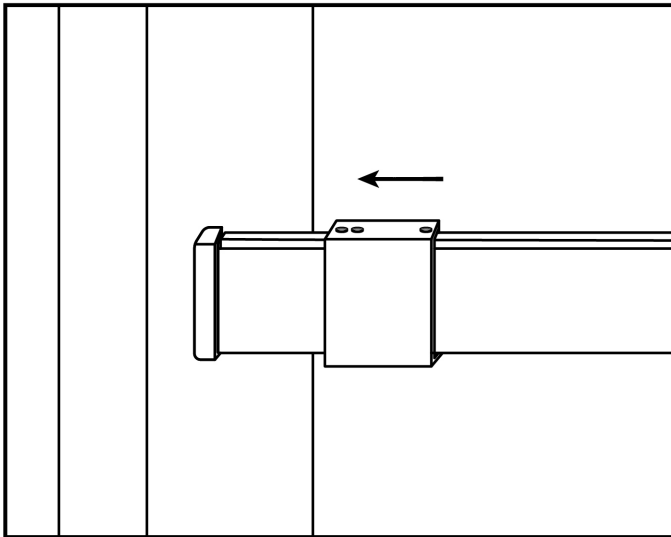

STEP 10: Slide wall bracket sleeve on to header bar. Install header and screw down the sleeve to the wall bracket on both walls.

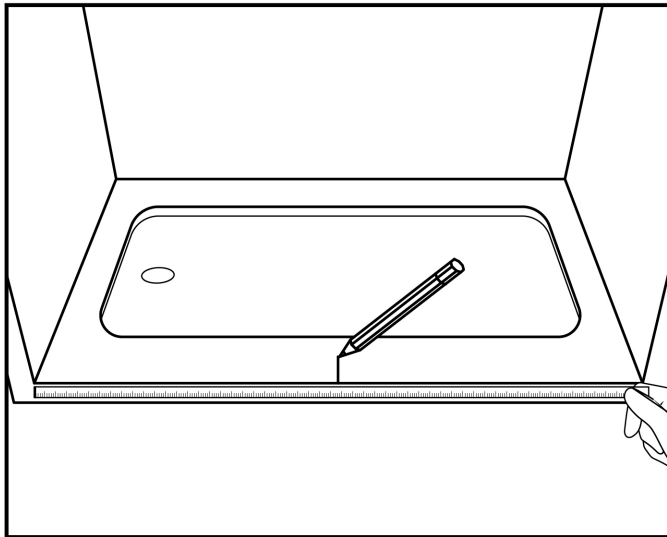


STEP 11: Measure the distance between the walls and mark the center of the distance on the base.

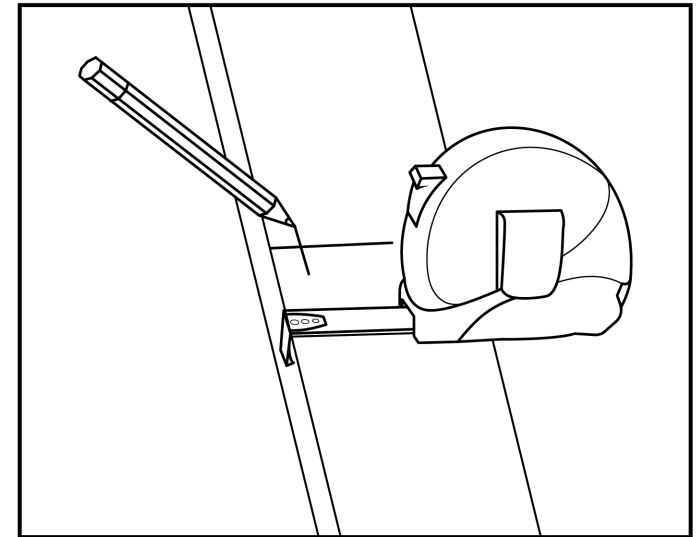


STEP 12: Mark $\frac{1}{8}$ " back from the front of threshold.


Installation Process

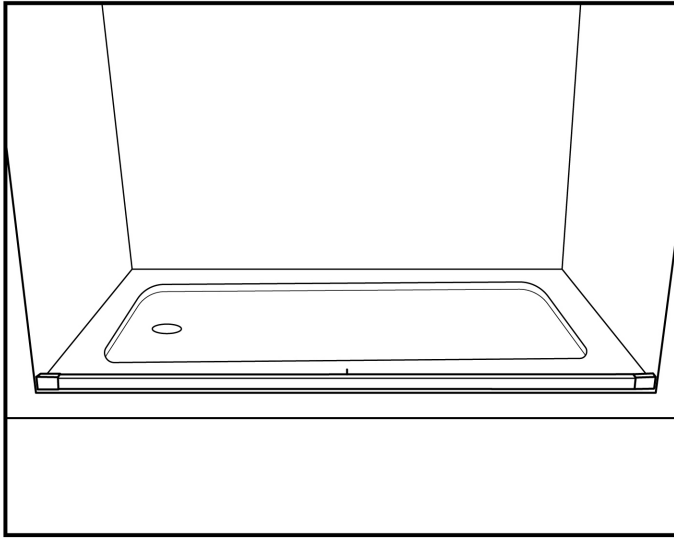


STEP 13: Silicone bottom of the bottom bar and place on threshold on marks.

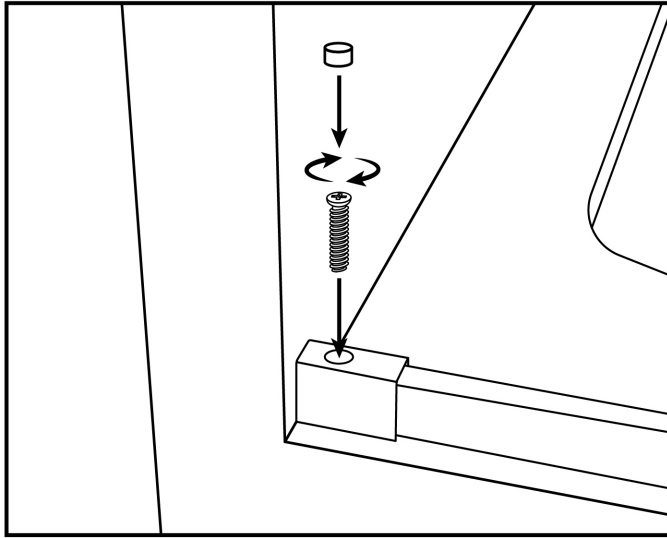


STEP 14: Drill and secure the bar with the end caps.

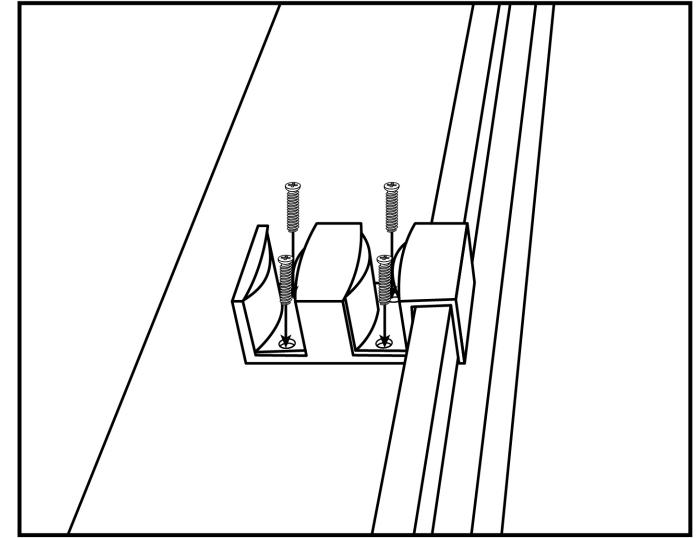


STEP 15: Install the Guard (part S11) over the threshold centered in the shower opening.

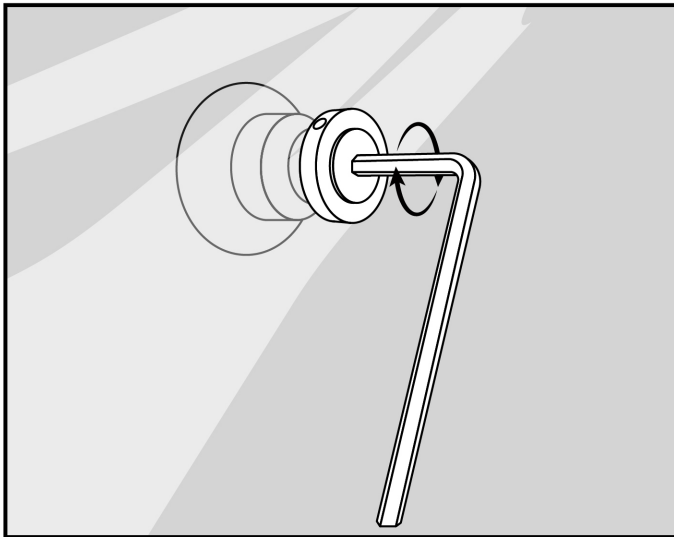

STEP 16: Install Rollers on the inside panel.

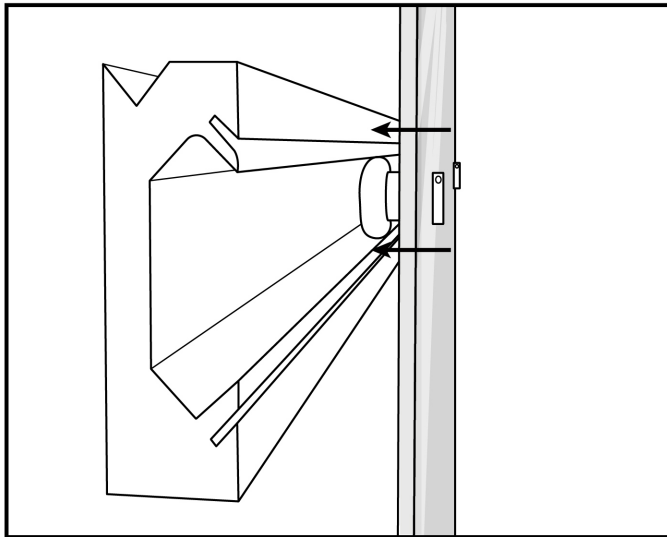


STEP 17: Hang inside panel on the header rail track.

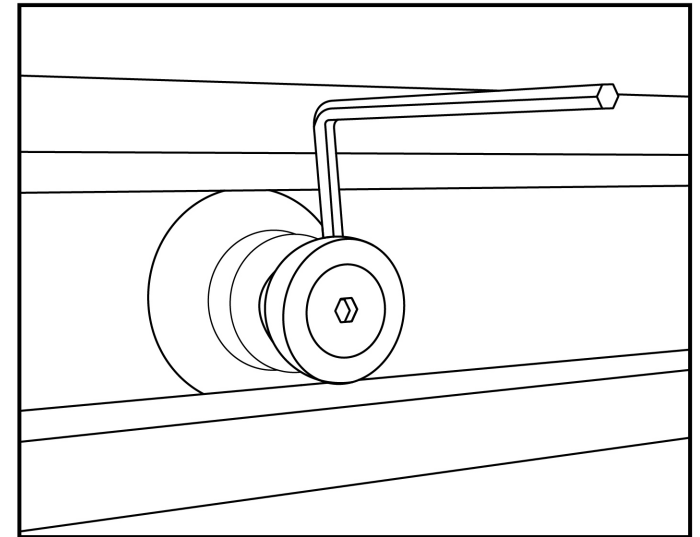


STEP 18: Adjust roller for an even glass-to-wall reveal


Installation Process

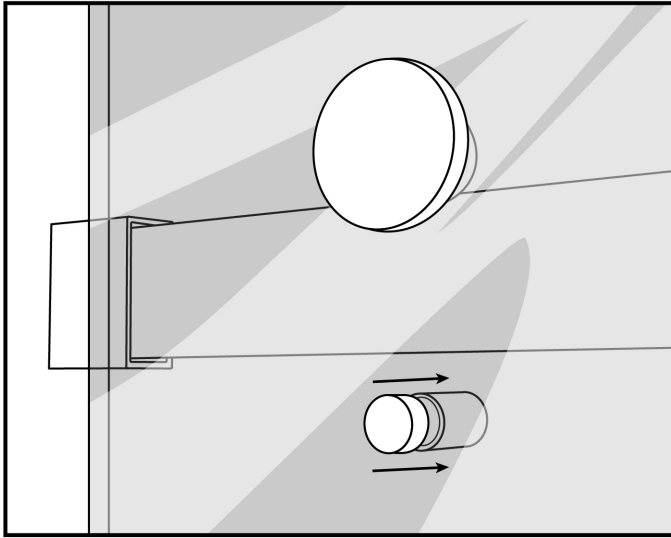


STEP 19: Repeat the roller installation process for the front panel. Install anti-jump fitting(S05) and roller caps.

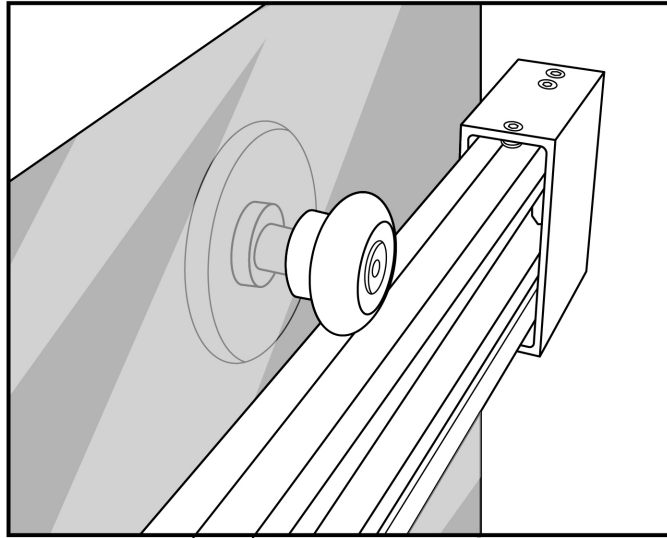


STEP 20: Place the front panel on top of the header rail.

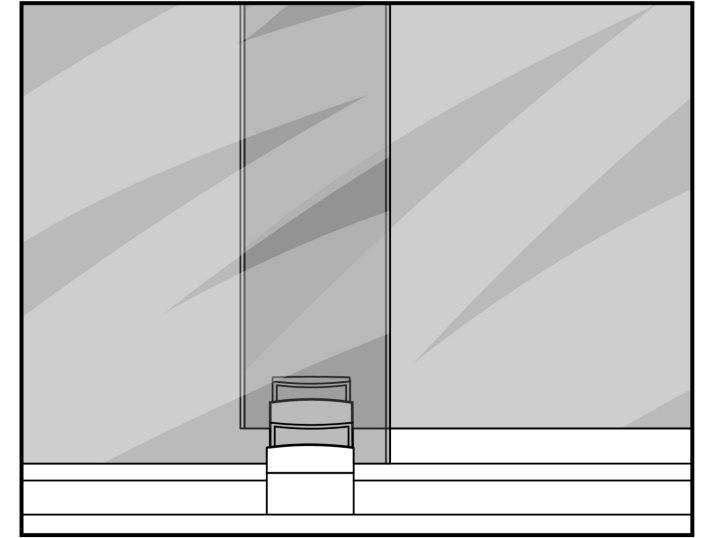


STEP 21: : Move the panels into the center guild.

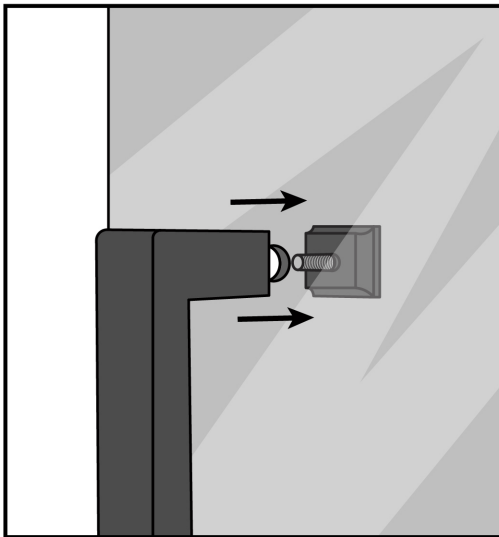


STEP 22: Install handles. The handle on the front panel facing outside. The handle of the inside panel facing inward.

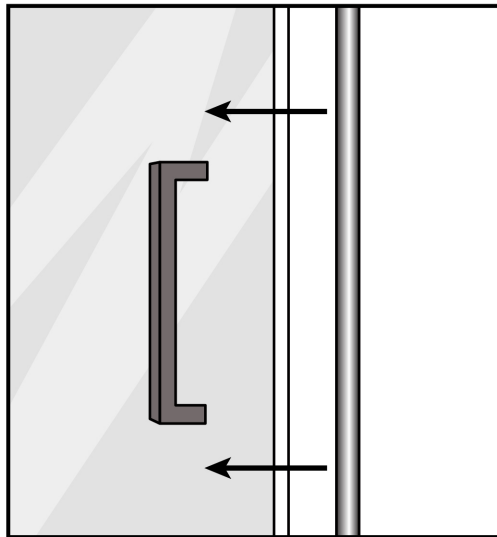

STEP 23: Install door poly (S15) on the edges of the panels.

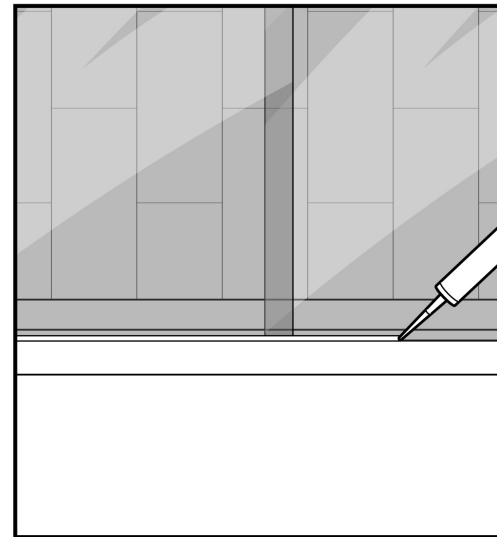

STEP 24::Seal the exterior of the threshold. No need to seal wall jams.

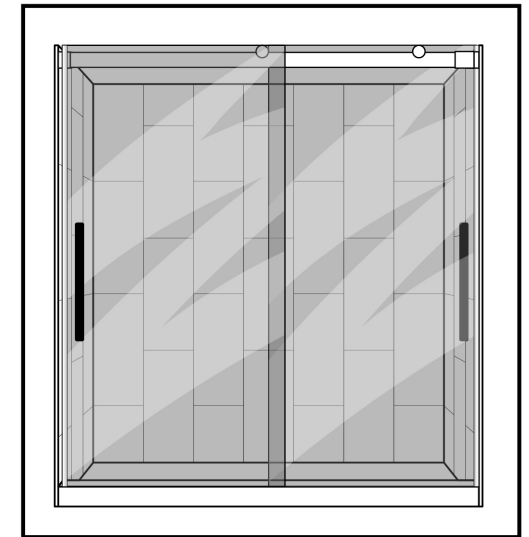

NOTE: Allow 24 hours to dry before use.

THERMA-GLASS

NūVōTM
SHOWER WALLS

Item No.

NUV-6036-80AB

NUV-6036-80CB

NUV-6036-80DT

NUV-6036-80PG

NUV-6036-80SG

NUV-6036-80WW

Care and Maintenance Instructions

Nuvo Stone Composite Shower Walls, K/CD Series Shower Bases, & Cascade Tubs

GENERAL CLEANING INSTRUCTIONS

For normal everyday cleaning, Therma-Glass suggests using Formula 409 or Microban 24 Hour. The use of scouring pads or abrasive cleaners will dull the surface. Should you wish to use a product not listed below, test on a small area in the corner of the skirt before applying to the entire wall or bathtub liner. Always review individual cleansers' instructions. Rinse thoroughly after cleaning.

GENERAL CLEANING INSTRUCTIONS

Microban 24, Formula 409, Wet & Forget Shower. White vinegar and water may also be used to soften mineral deposits. Use 1/2 cup Clorox Bleach per gallon of water as a disinfectant.



DO NOT USE:

- Original Clean Shower
- Clean Shower for Plastic Showers & Glass
- Ammonia
- Acetone
- Soft Scrub
- Dawn dish soap
- Abrasive or acidic cleaning products
- Dow disinfectant cleaner
- Scrub Free
- Fingernail polish remover
- Scouring pads
- Lestoil
- Lysol disinfectant cleaner

Use of these chemicals could cause a dull surface and chemical cracks. This will void your product warranty.

There is no need to use abrasive cleaners. Abrasive cleaners dull the gloss over a period of years. In extreme cases where the recommended cleaners do not work, use a Chore Boy or 3M Sponge pad. Make sure you only use the ones recommended for Teflon or non-stick surfaces.


DRAIN CLEANER

CAUTION: Liquid drain cleaners are recommended over powders and/or crystal; however, when using liquid drain cleaning agents, bail the standing water out of the bathtub and remove the drain plug. Use a funnel to prevent spills and apply the chemicals directly down the drain. Always make certain the chemicals do not come in contact with the acrylic surface.


Use drain cleaners sparingly, so that they do not boil out and attack the acrylic surface.

NuVo Vertical Shower Walls


Installation Steps

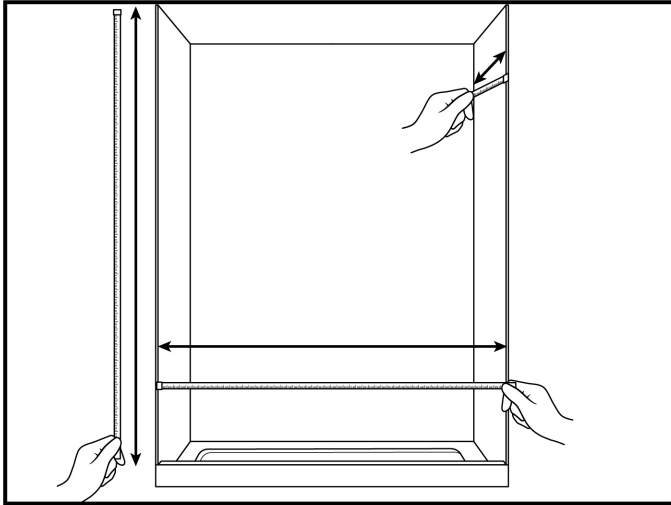


STEP 01: Measure existing space. HxWxD

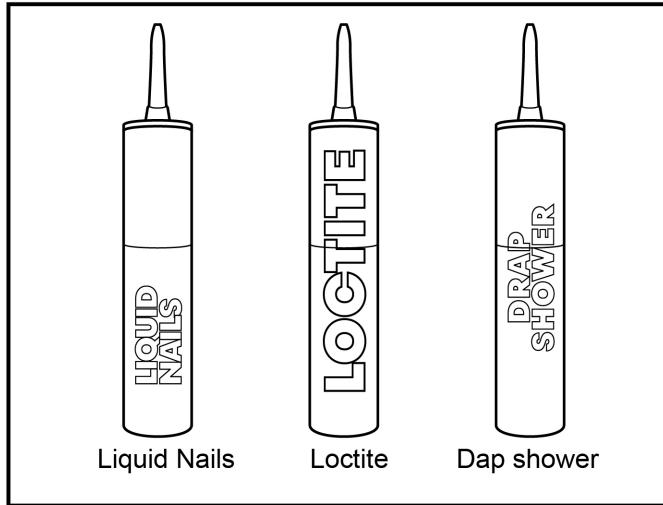


STEP 02: Recommended adhesives are Liquid Nails, Loctite, and Dap shower surrounds.

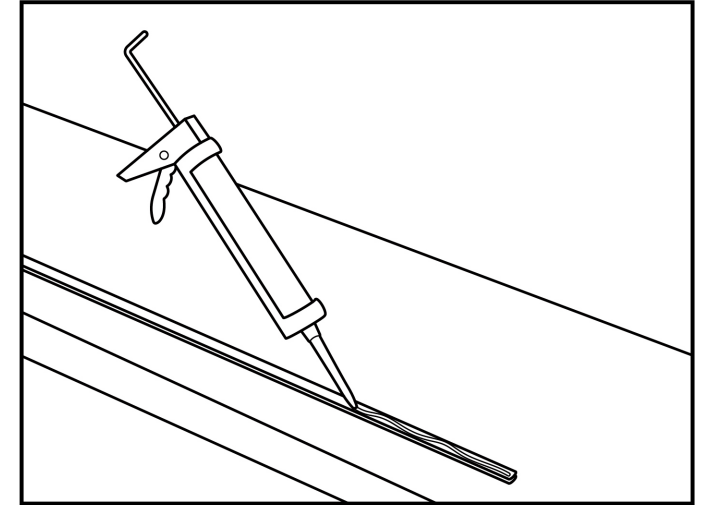


STEP 03: Apply adhesive to the backside of the W trim piece.

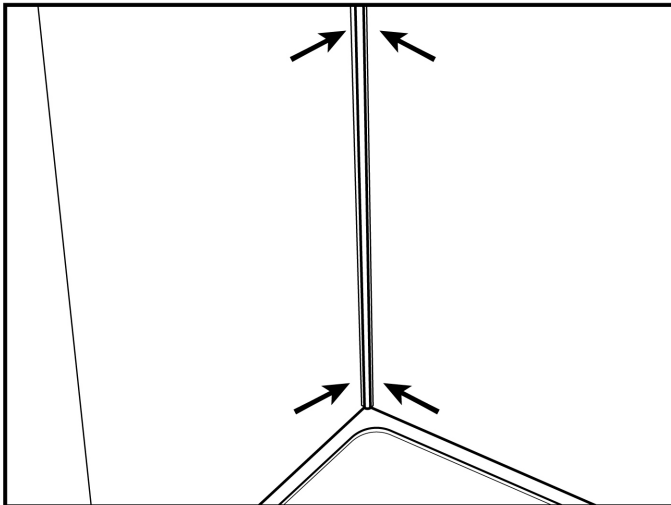

STEP 04: Place the W trim piece in back corner of non-shower head side.

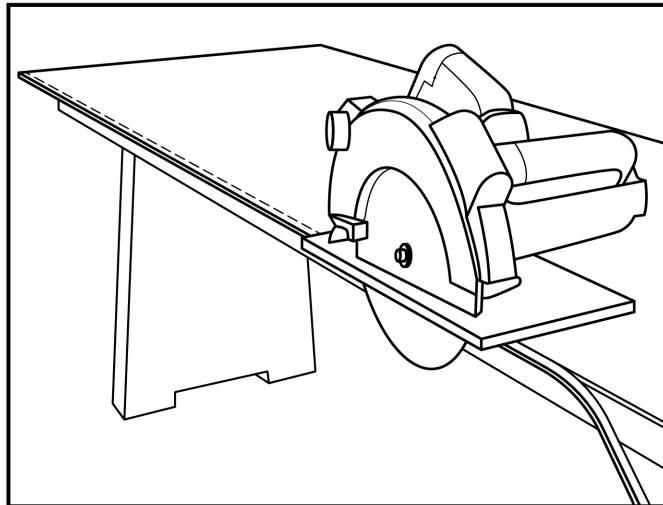


STEP 05: Trim of snap-lock end of first sidewall panel.

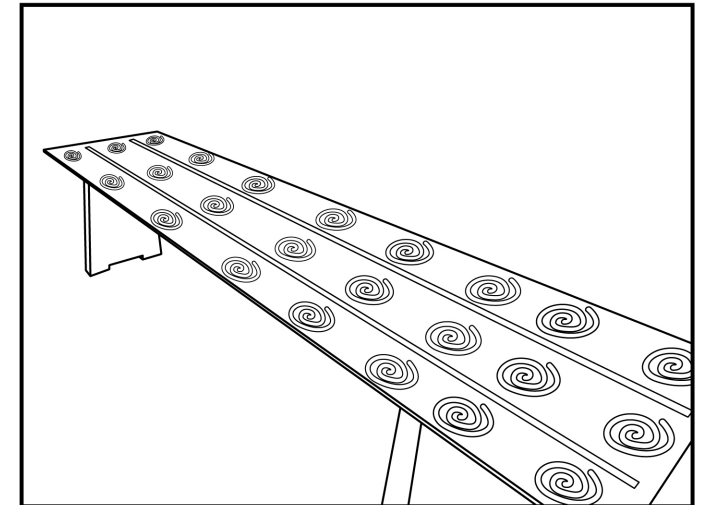


STEP 06: Apply double-sided tape and adhesive to reverse side of panel, leaving a 2" gap around the edge of the first sidewall panel.


Installation Process

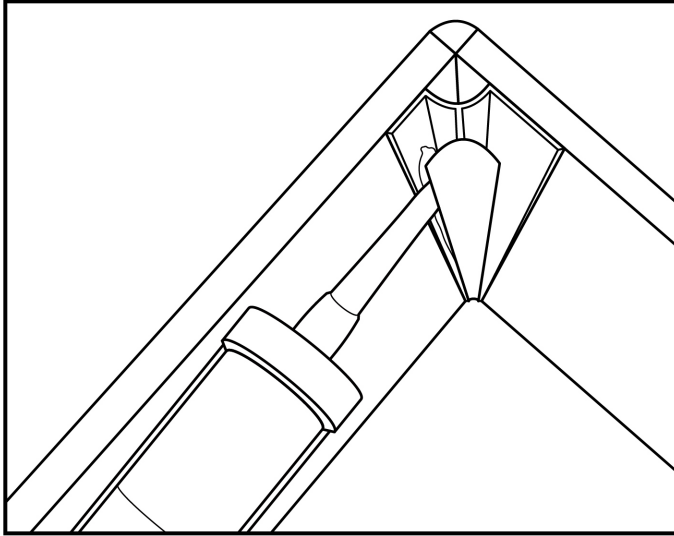


STEP 07: Fill in W trim piece channel with silicone on the sidewall side.

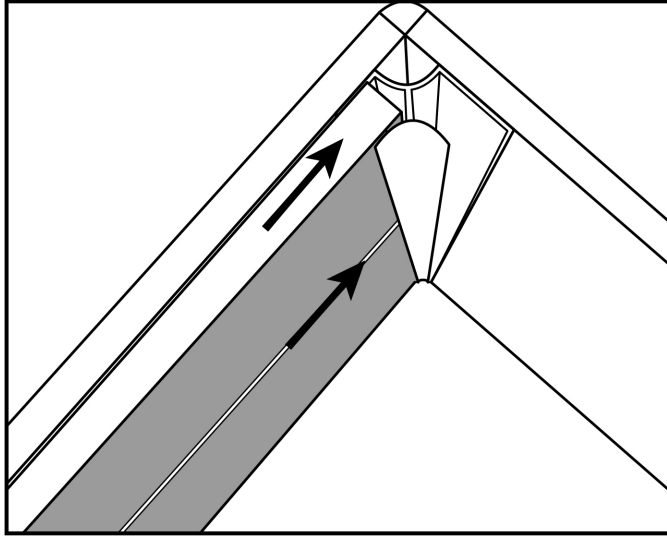


STEP 08: Insert first sidewall panel into W trim piece.

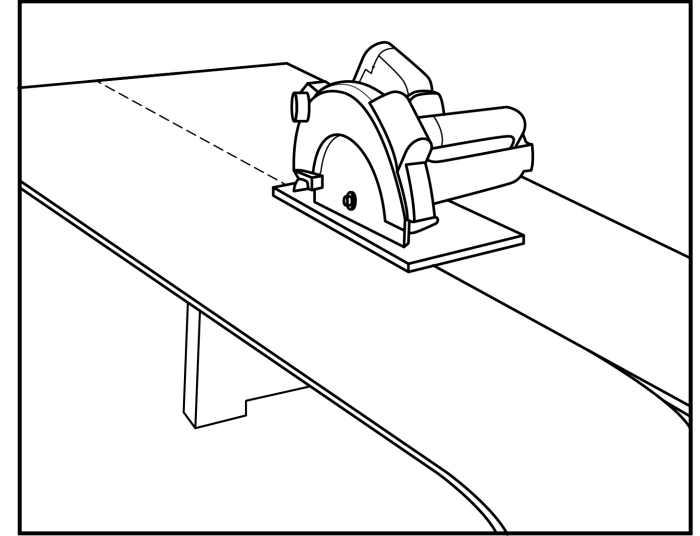

STEP 09: Cut second sidewall panel to fit wall.

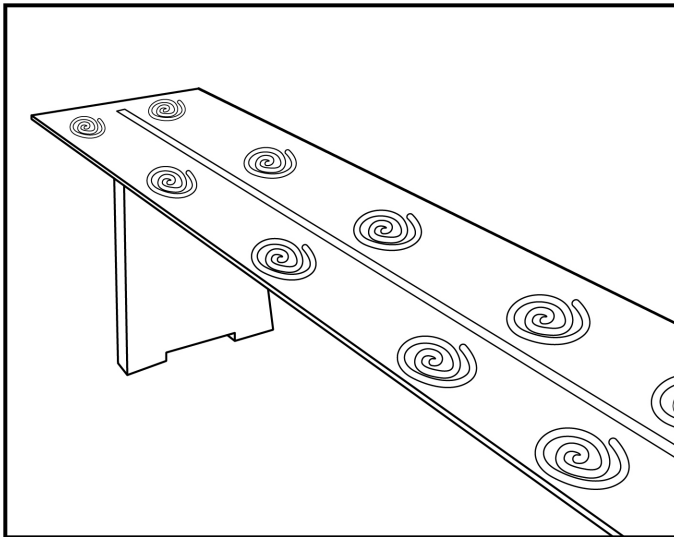


STEP 10: Apply double-sided tape and adhesive to reverse side of panel, leaving a 2" gap around the edge of the second sidewall panel.

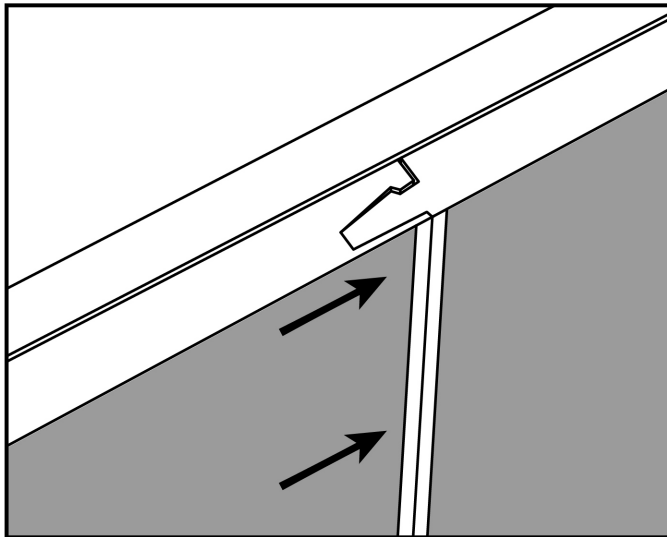


STEP 11: Push and snap-lock the second sidewall panel into the first.

Note: This is the only panel that installs behind adjacent panel.

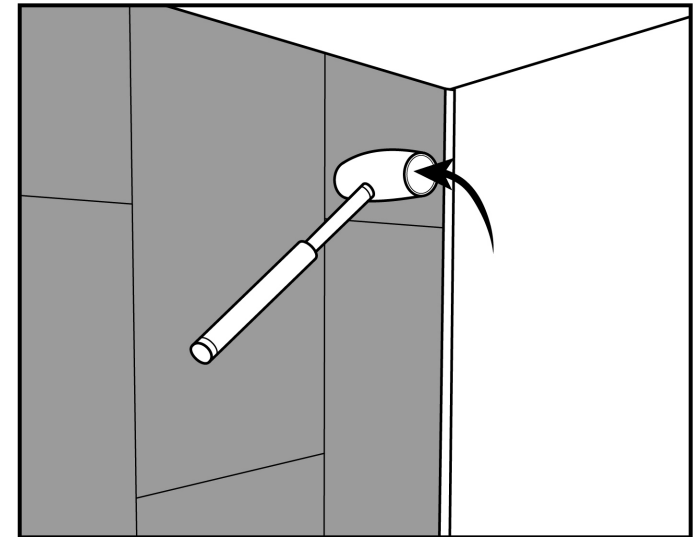


STEP 12: Lightly tap both panels into place with rubber mallet.


Installation Process

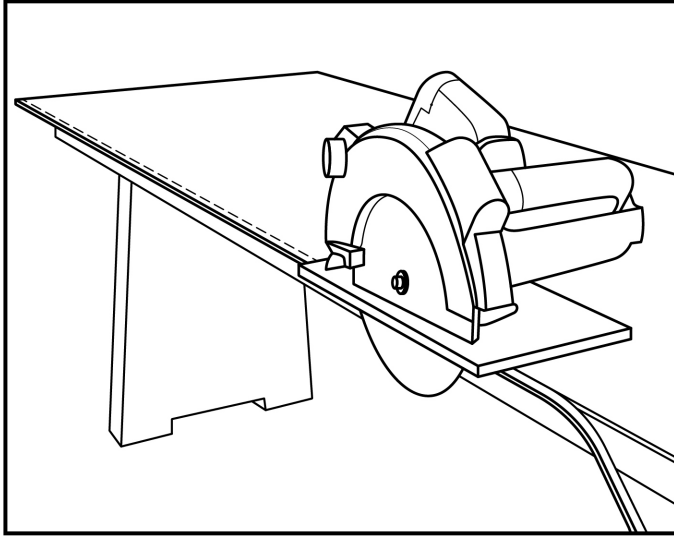


STEP 13: Trim off snap-lock of the first back wall panel.

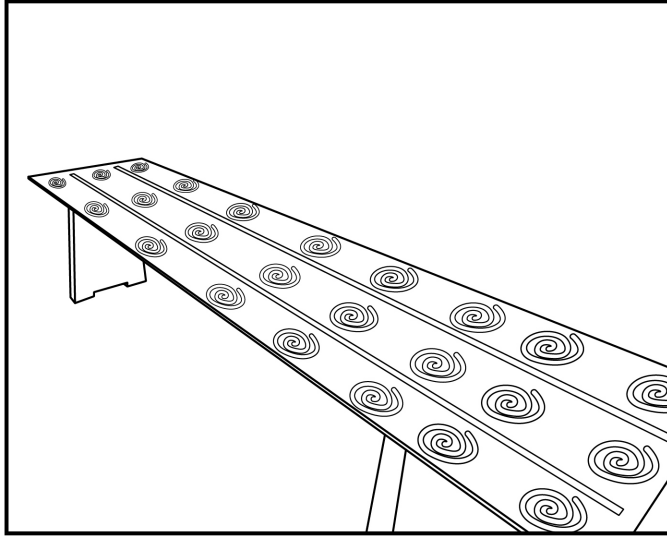


STEP 14: : Apply double-sided tape and adhesive to reverse side of panel, leaving a 2" gap around the edge of the first backwall panel.

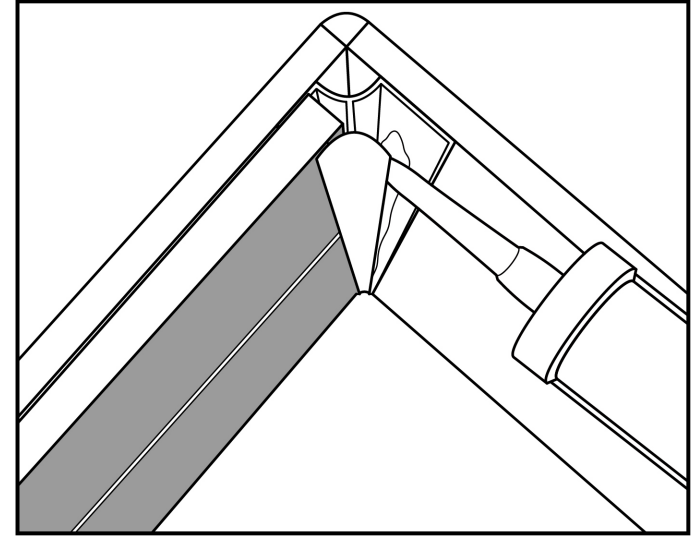


STEP 15: Fill in W trim piece channel with silicone on the back wall side.

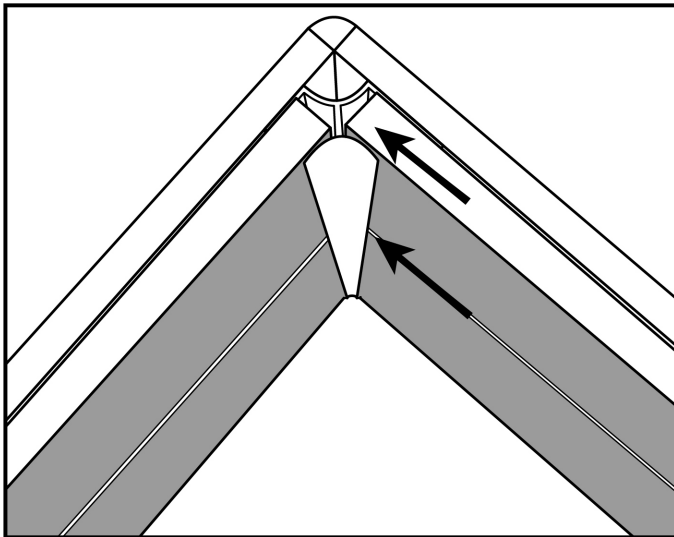

STEP 16: Insert first backwall panel into W trim piece.

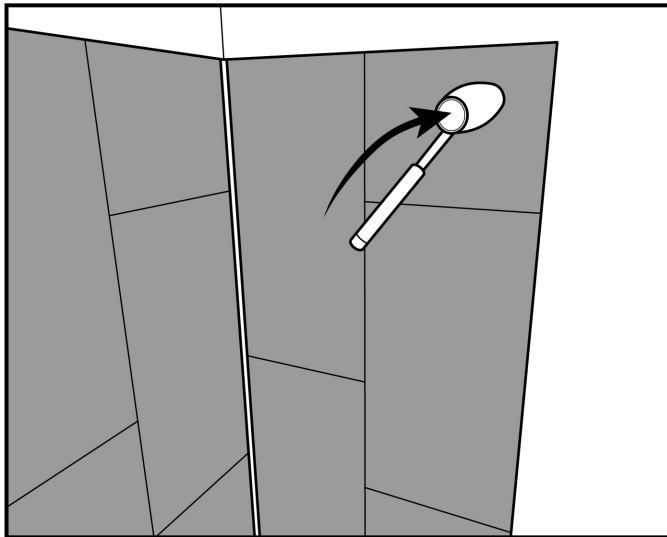


STEP 17: Lightly tap into place with rubber mallet.

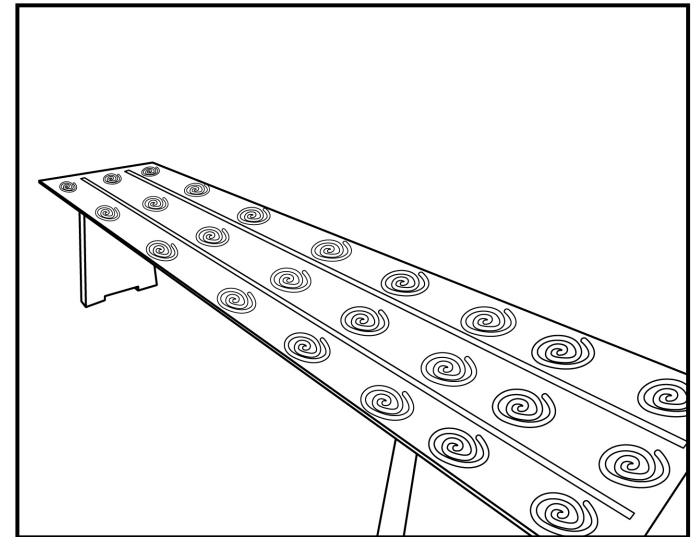


STEP 18: Apply double-sided tape and adhesive to reverse side of panel, leaving a 2" gap around the edge of the second backwall panel.


Installation Process

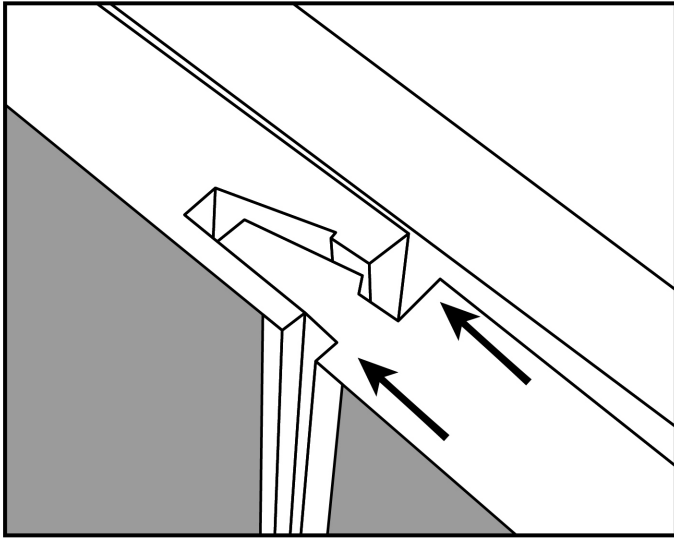


STEP 19: Position next panel at a 45° angle to the adjacent panel and push to wall making sure the click/lock is fully engaged.

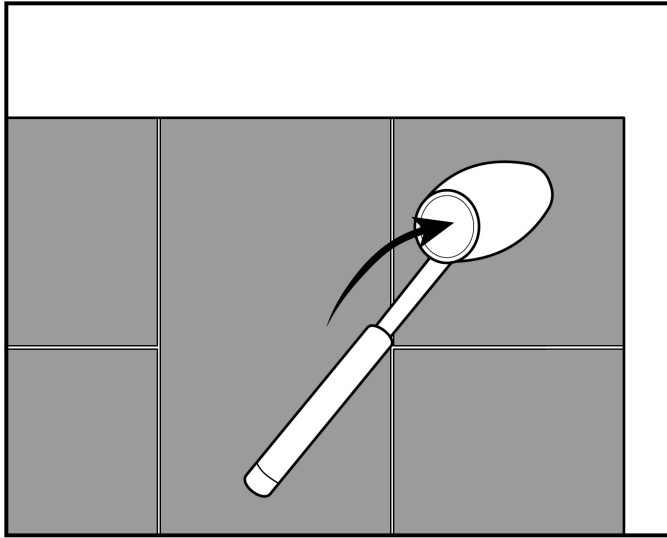


STEP 20: Lightly tap into place with rubber mallet.

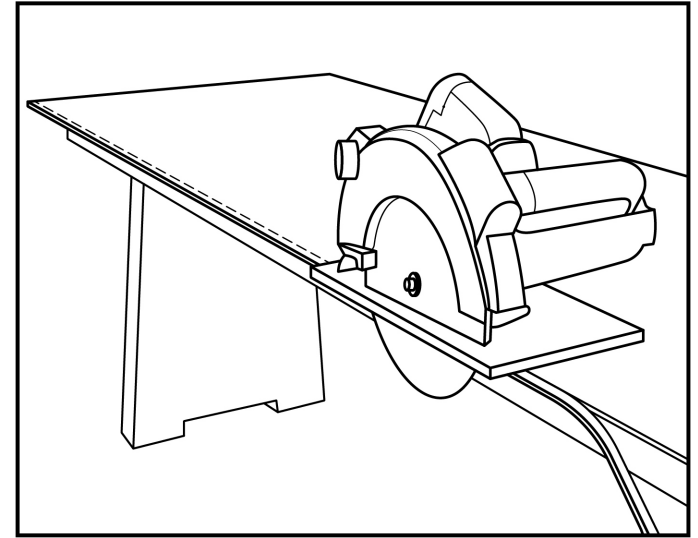


STEP 21: Trim off snap-lock on the third back wall panel. If back wall is less than 60" trim panel to fit.

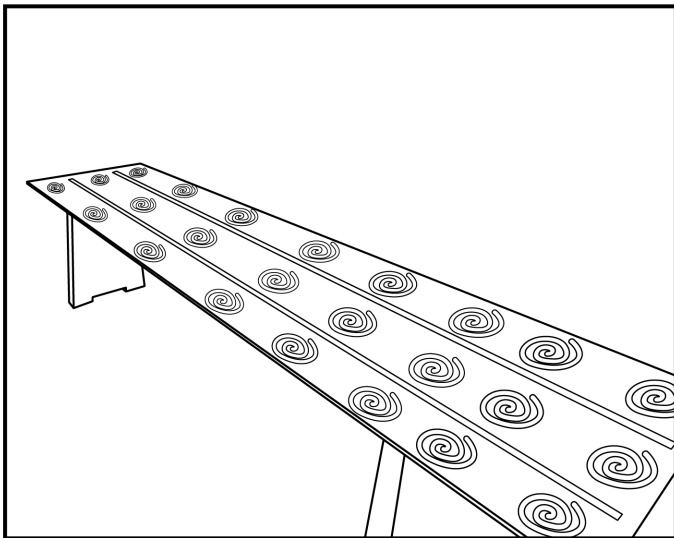

STEP 22: Apply double-sided tape and adhesive to reverse side of panel, leaving a 2" gap around the edge of the third back wall panel.

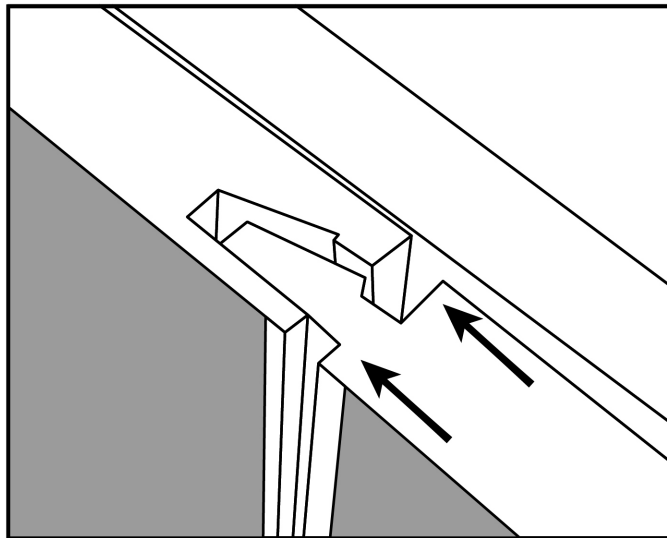


STEP 23: Repeat step 19.

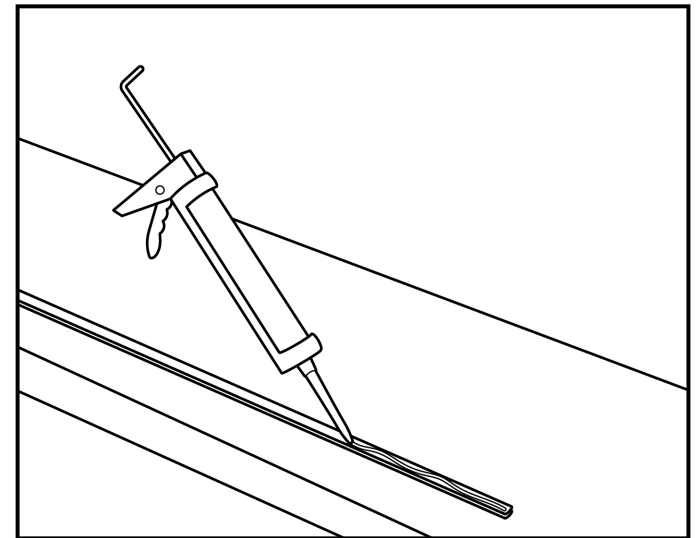


STEP 24: Apply adhesive to backside of W trim piece.


Installation Process

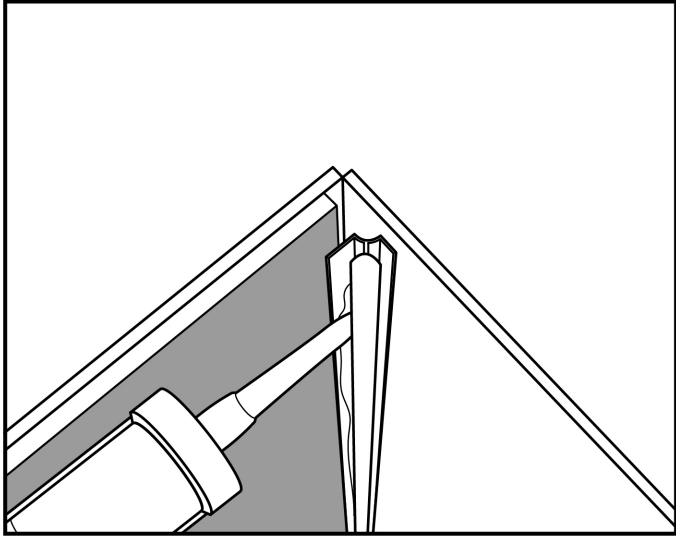


STEP 25: Fill in W Trim piece channel with silicone on the backwall side.

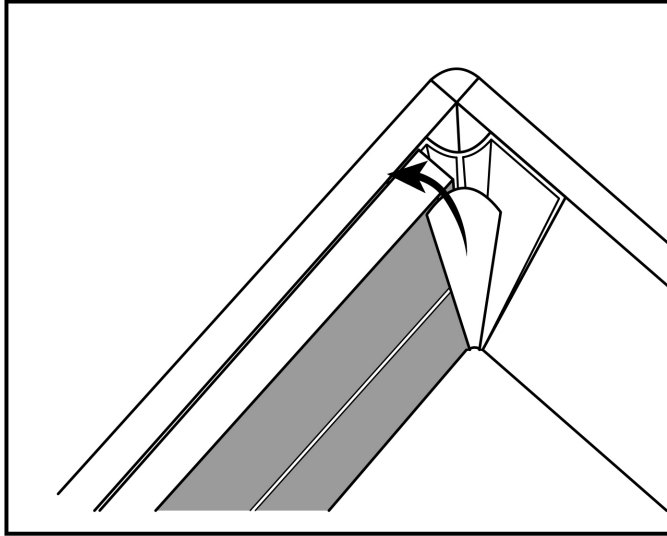


STEP 26: Place W trim piece in corner behind third back-wall panel.

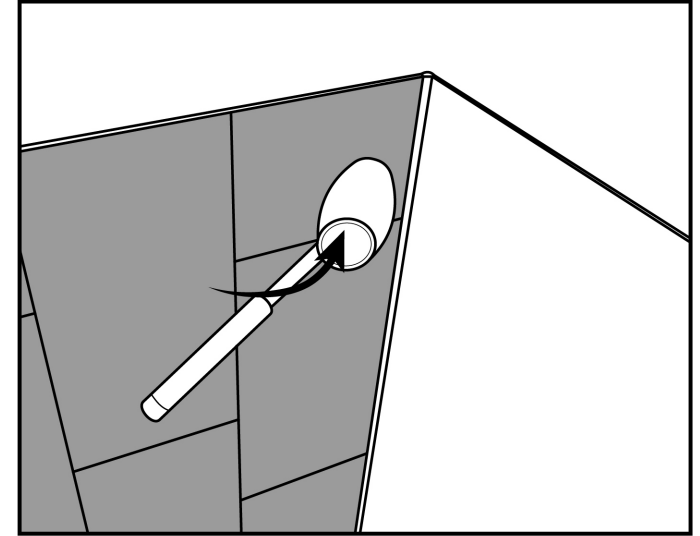


STEP 27: Lightly tap into place with rubber mallet.

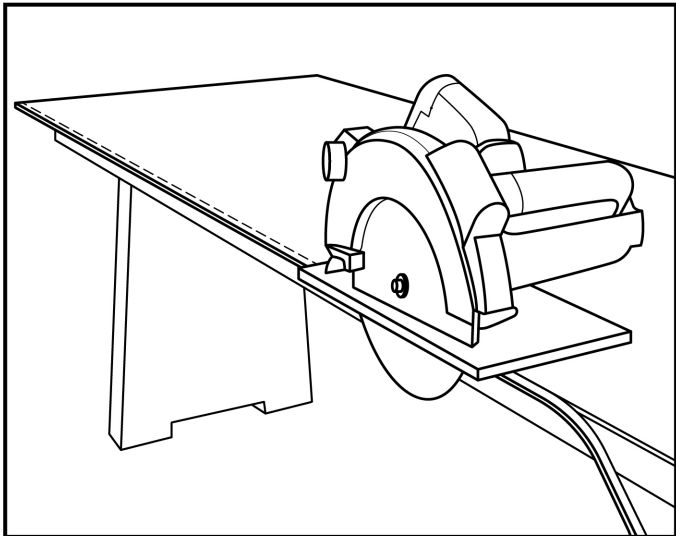

STEP 28: Trim snap-lock off third sidewall panel.

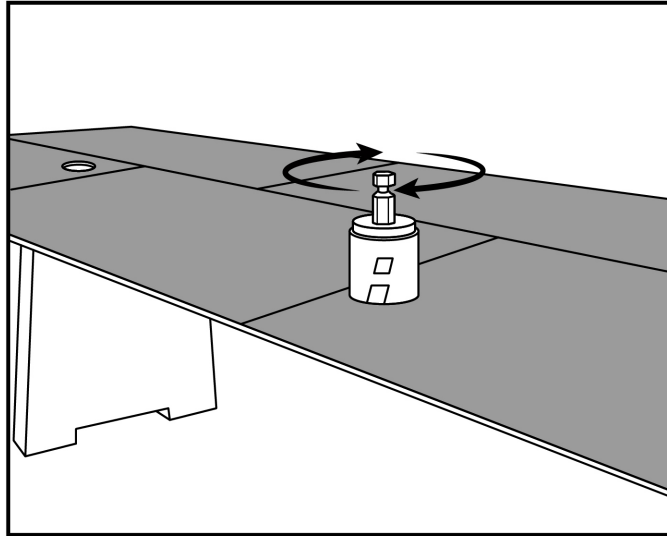


STEP 29: Cut holes for plumbing in third sidewall panel from the front, drilling from the back will damage panels.

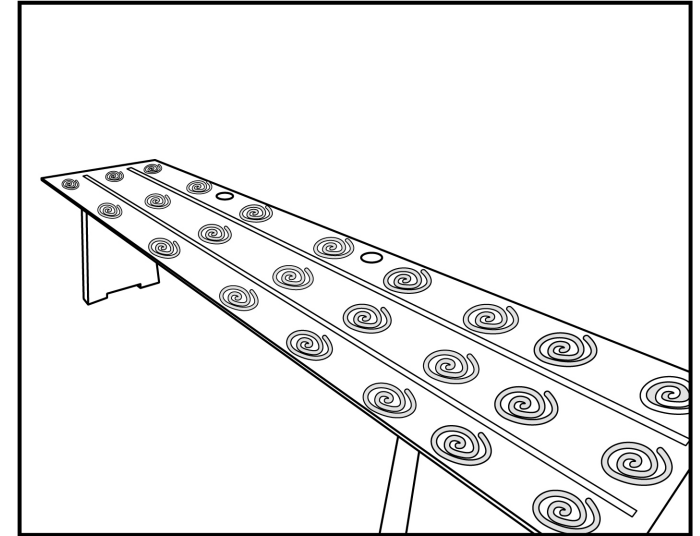


STEP 30: Apply double-sided tape and adhesive to reverse side of panel, leaving a 2" gap around the edge of the third sidewall panel.


Installation Process

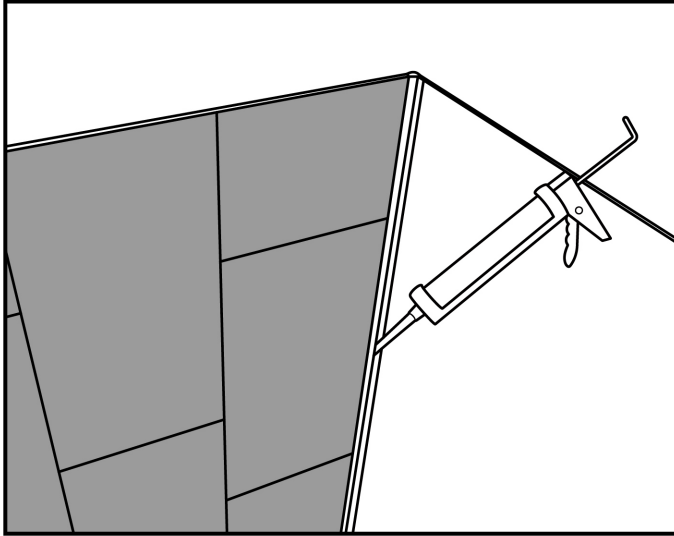


STEP 31: Fill in W trim piece channel with silicone on the sidewall side.

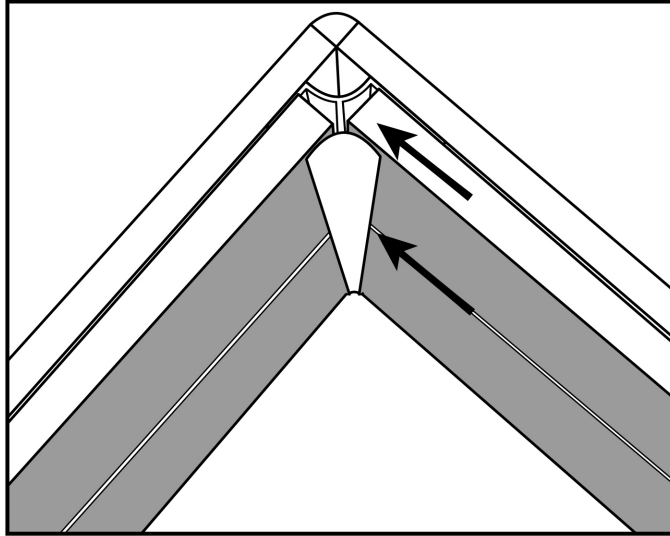


STEP 32: Push third sidewall panel into W trim piece.

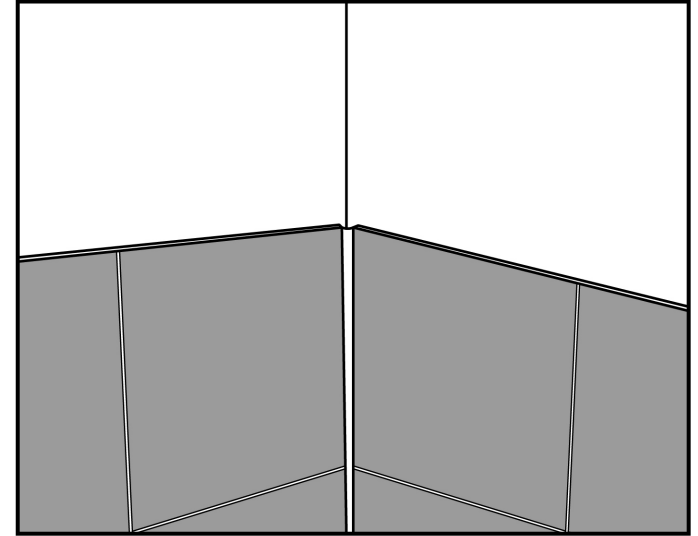


STEP 33: : Lightly tap into place with rubber mallet.

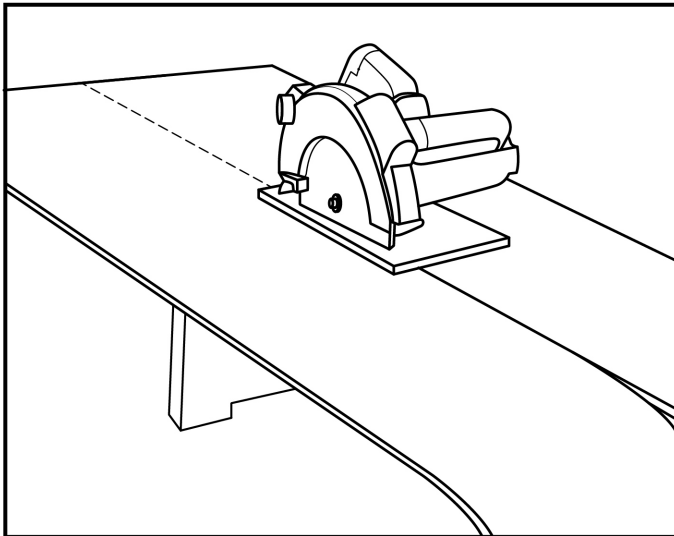

STEP 34: Cut fourth sidewall panel to fit.

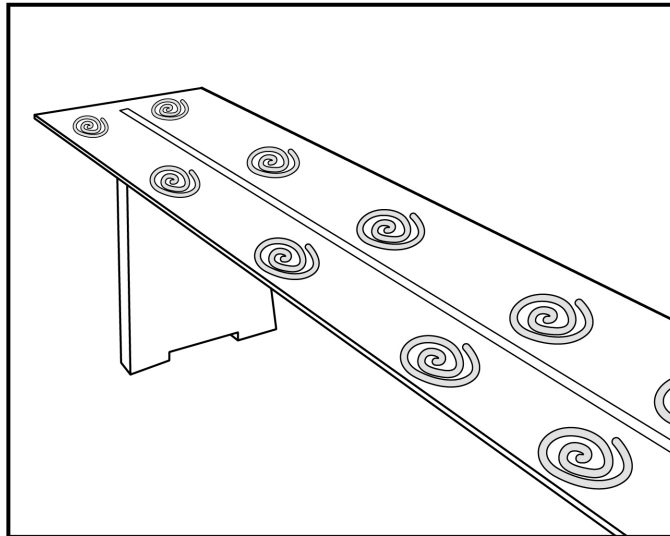


STEP 35: Apply double-sided tape and adhesive to reverse side of panel, leaving a 2" gap around the edge of the fourth sidewall panel.

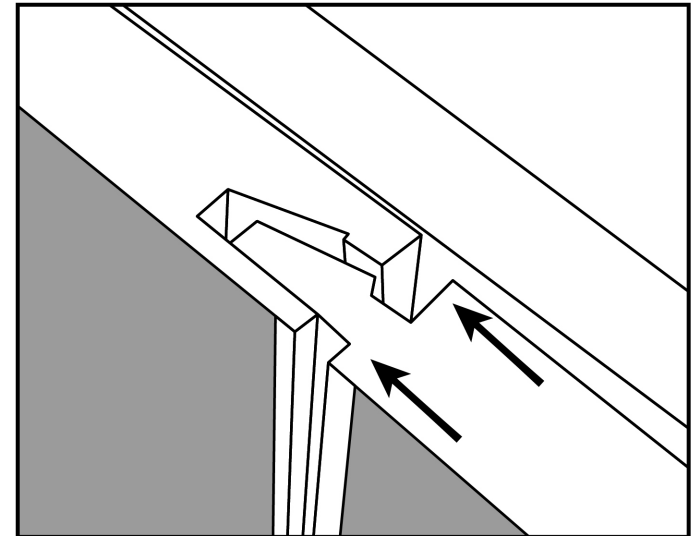


STEP 36: Repeat step 19.


Installation Process

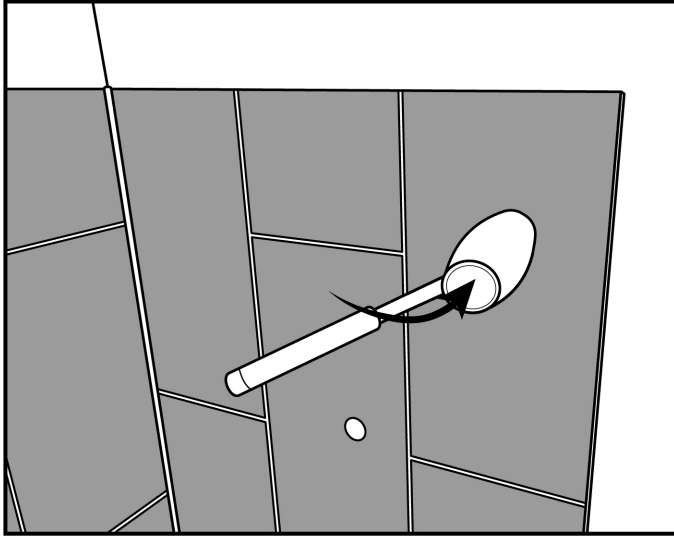


STEP 37: Lightly tap into place with rubber mallet.

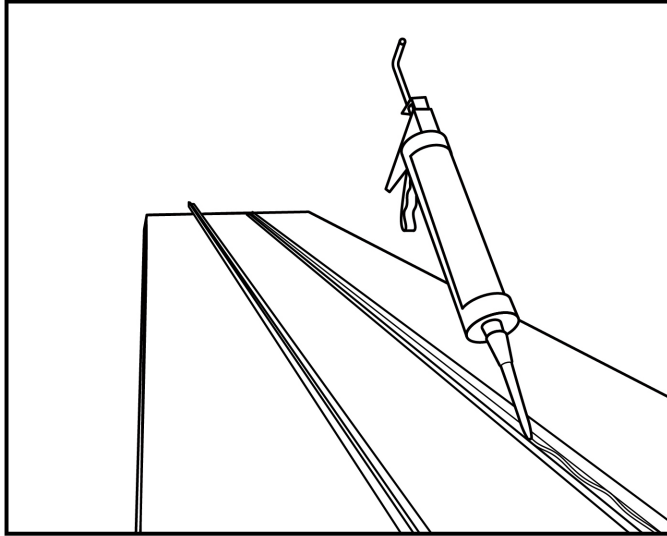


STEP 38: Fill in channels of F or U trim edge pieces with silicone.

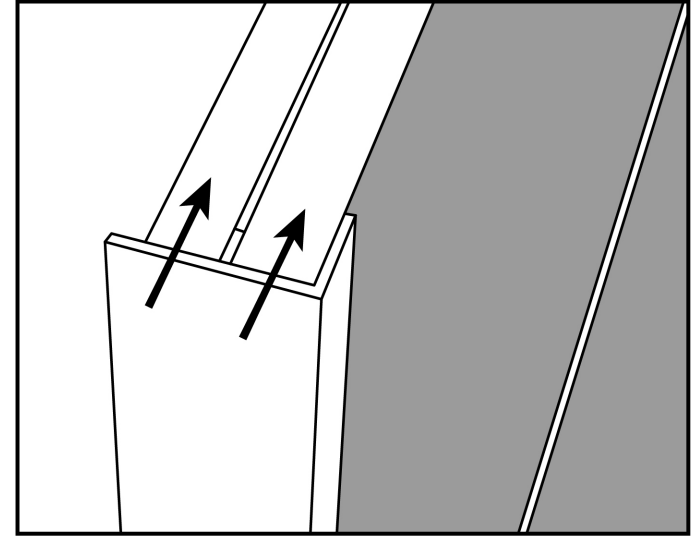

STEP 39: Push edge pieces into place.

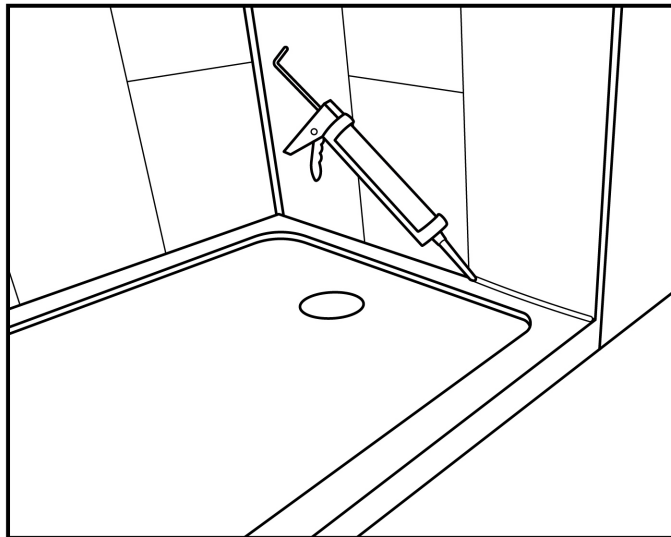

STEP 40: Properly caulk around the entire wall top and bottom to ensure fit

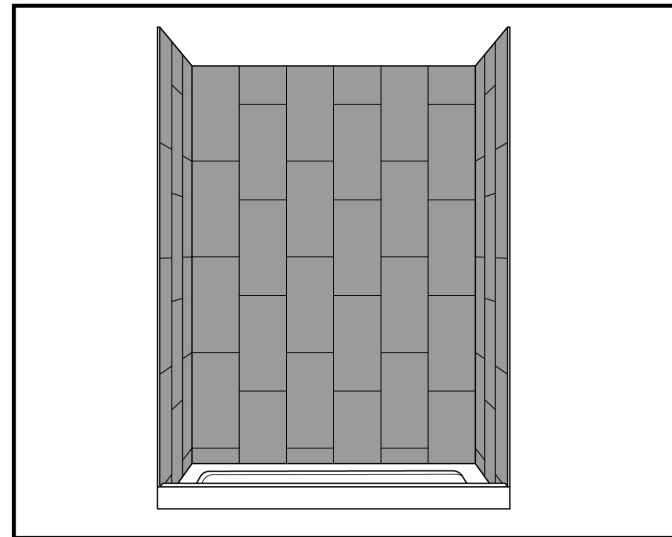

FINAL NOTE: Allow 24 hours to dry before use.

THERMAGLASS

NūVō™ SHOWER BASES

Item No.

NUV-BASE-/4836C/6032E/6036C/7236C/7836C CW

NUV-BASE-/4836C/6032E/6036C/7236C/7836C BL

NUV-BASE-/4836C/6032E/6036C/7236C/7836C GR

NUV-BASE-/4836C/6032E/6036C/7236C/7836C WH

NUV-THR-60 / NUV-THR-80 CW


NUV-THR-60 / NUV-THR-80 BL

NUV-THR-60 / NUV-THR-80 GR


NUV-THR-60 / NUV-THR-80 WH

NuVo Shower Base


Installation Guide

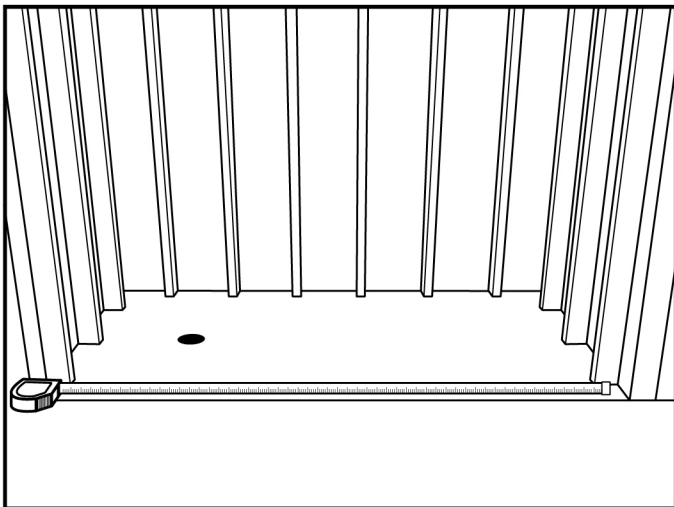


STEP 01: Measure length & depth. Verify floor is level. If needed use floor leveling product or mortar.

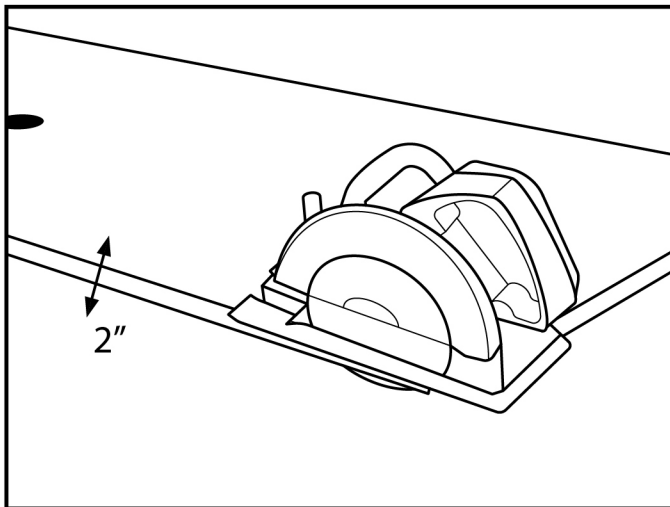


STEP 02: Cut base to fit using a carbide finishing blade. On center drain bases 2" can be cut from all sides. On end drain bases you can cut 2" from all side except for the end that has the drain on it.

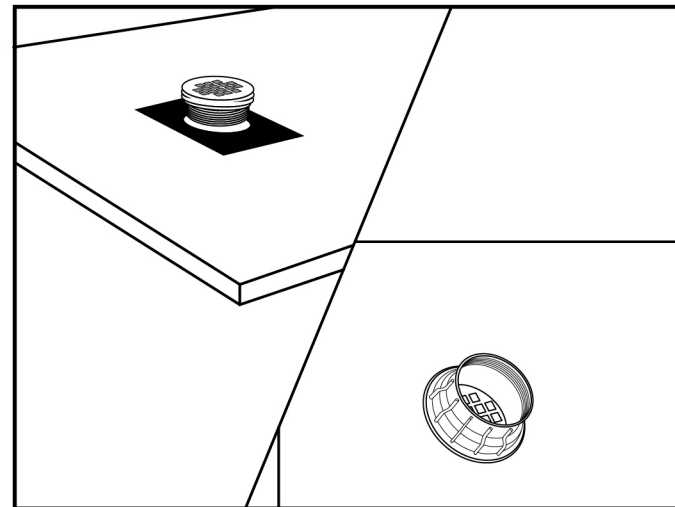


STEP 03: Drain not included with base. Apply silicone caulking to the underside of the drain flange and insert into base removing excess silicone. Install gaskets and tighten the nut on the bottom of the drain.

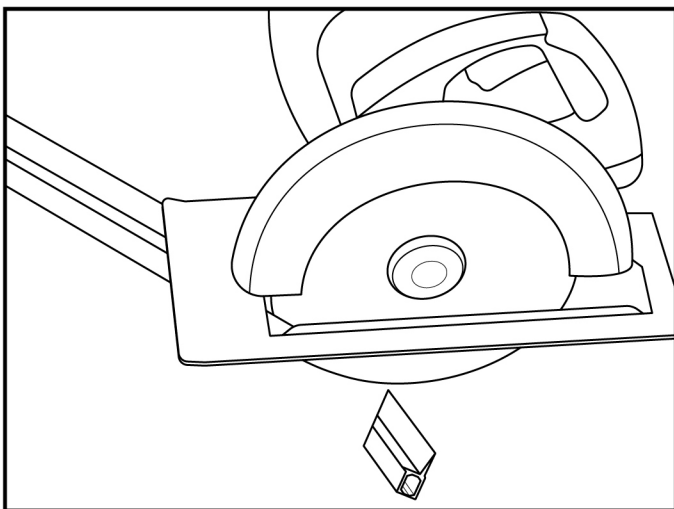

STEP 04: Cut back wall flange as needed making sure to maintain a 45° on cut.

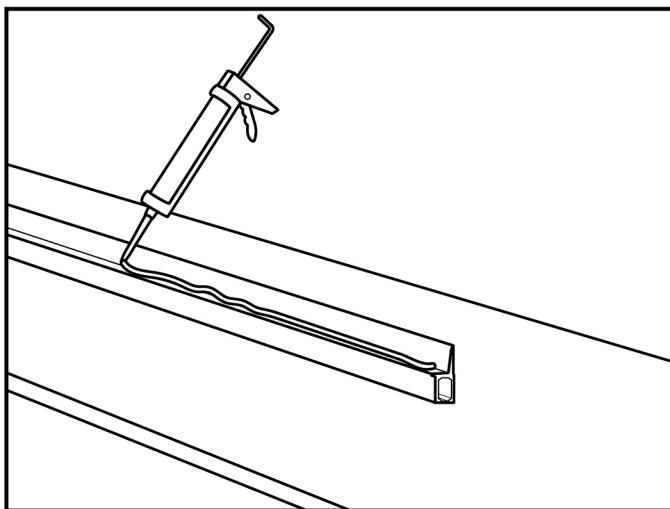


STEP 05: Apply silicone adhesive.

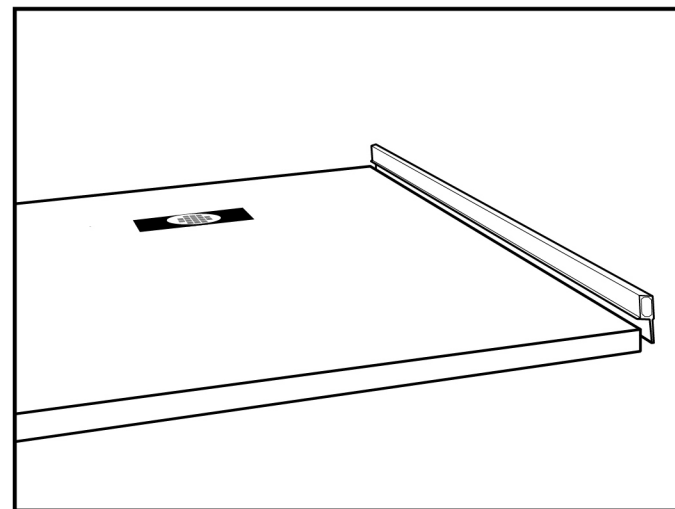


STEP 06: Attach back wall flange to shower base.


Installation Process

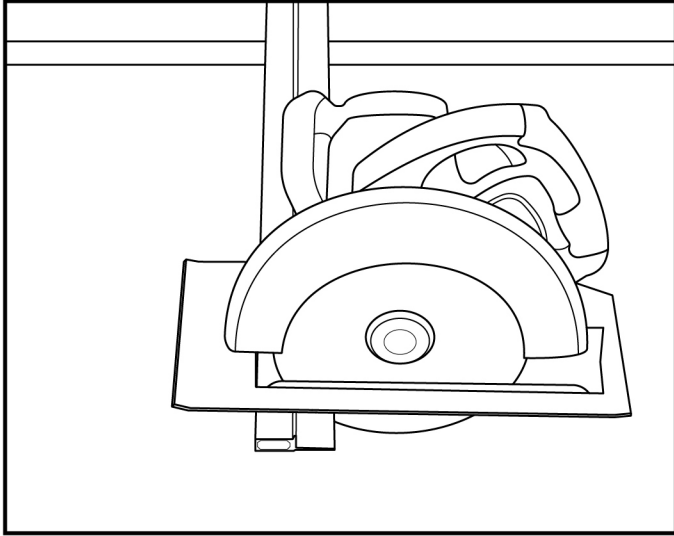


STEP 07: Cut side flanges as needed cutting only on the flat end not the angled end.

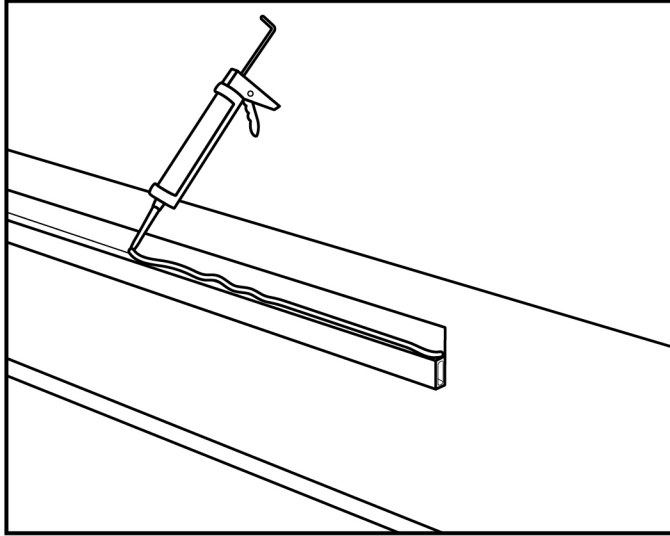


STEP 08: Apply silicone adhesive.

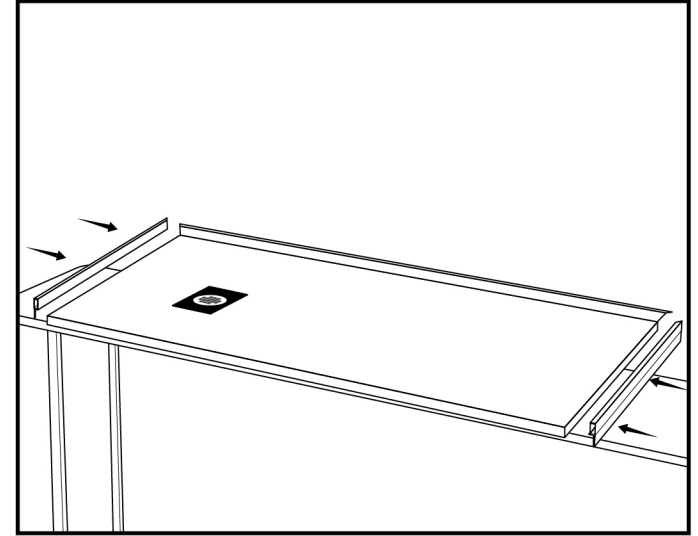


STEP 09: Attach side flanges to the shower base.

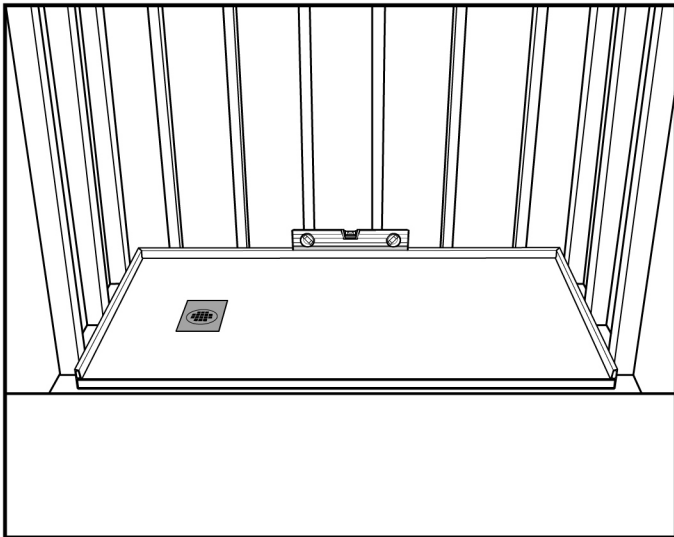

STEP 10: Install shower base. Check to see if base is level. If shimming is needed use level to determine the thickness of the shims. Apply shims to the underside of the base and re check the level.

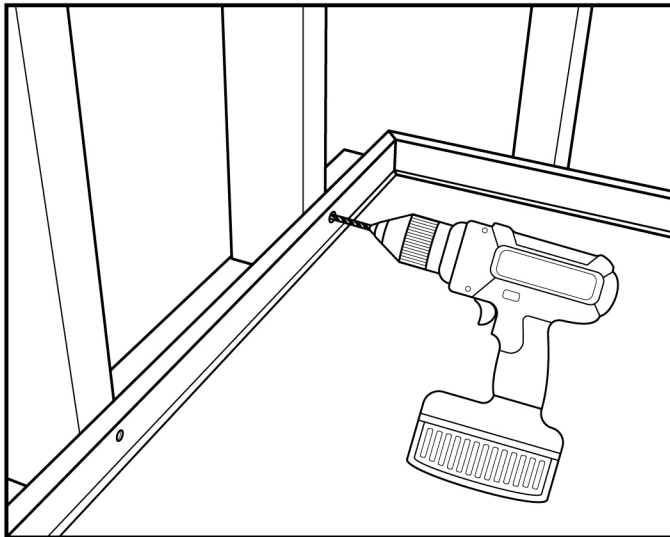


STEP 11: Drill pilot holes through the flange and into the studs.

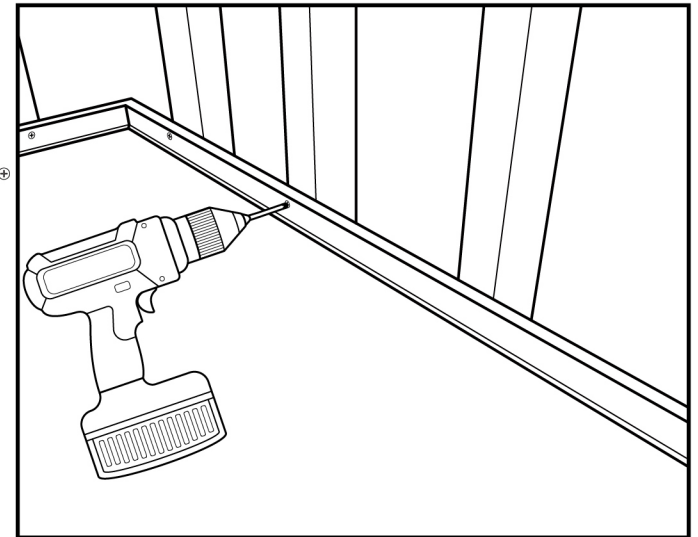


STEP 12: Insert screws and attach the shower base directly to the studs.

See Install Video at: www.nuvobath.com/installation-videos


Installation Process

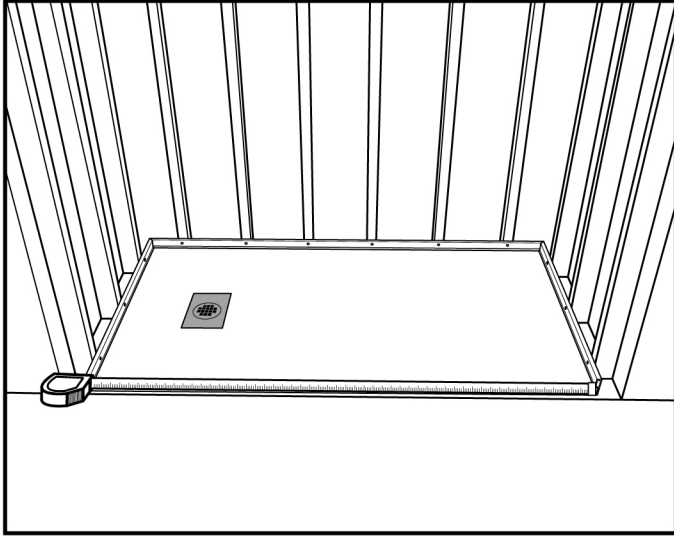


STEP 13: Measure in between the side tile flanges to determine overall length for the threshold.

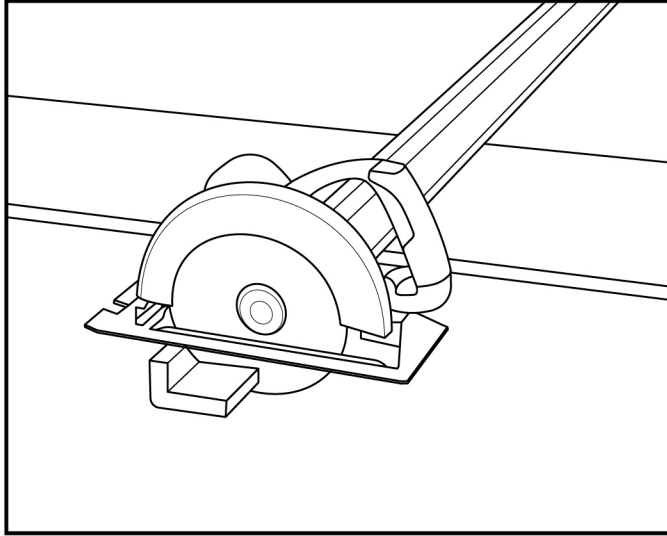


STEP 14: Cut threshold to fit.

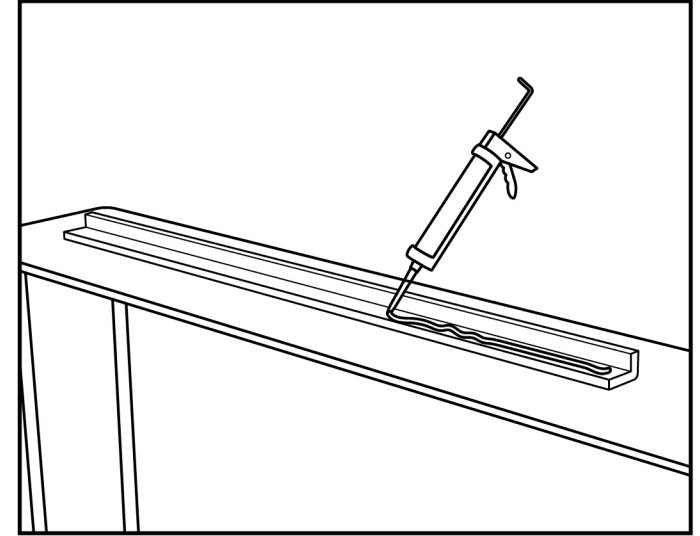


STEP 15: Apply silicone adhesive.

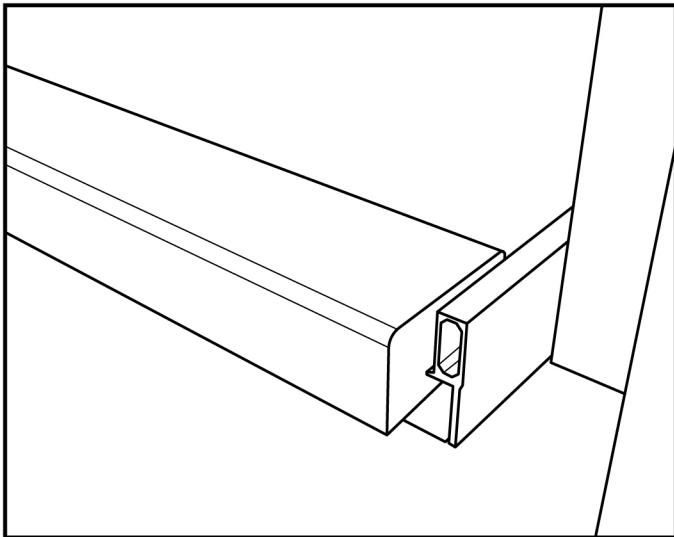

STEP 16: Attach threshold to shower base.

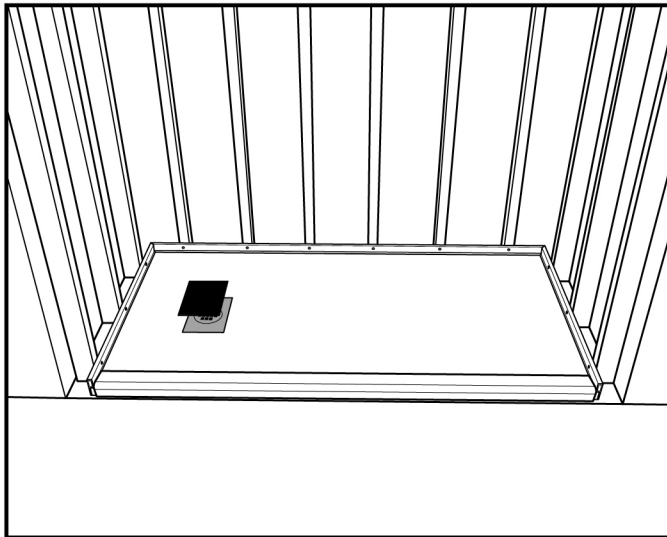

STEP 17: Add drain cover included with end drain bases only. Allow 24 hours to cure before use.

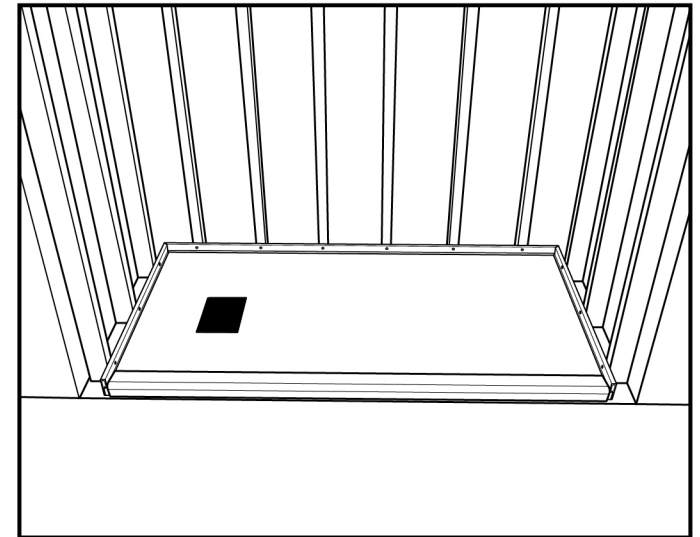

STEP 18: "Allow 24 hours to cure before use."