



**OLYMPIA FAUCETS, INC.**  
 3325 S. Garfield Ave.  
 Commerce, CA 90040  
 (888) 772-7701  
 www.olympiafaucets.com

# INSTALLATION

**Tools:**



**Model Number: H101X, H131X, H141X**



**Installation Steps:**


Bathroom Hardware

Series	'A'
H-1010, H-1013	3/8"
H-1014, H-1016	3/8"
H-1310, H-1313	1/2"
H-1314, H-1316	1/2"

(1) Please refer the 'A' distance on the chart and locate where to install based on the model you have then use a power drill to drill two 1/4" mounting holes.

Series	'B'
H-1010	23 1/16"
H-1013	17 3/16"
H-1310	22 13/16"
H-1313	16 15/16"
H-1410	22 15/16"
H-1413	17 1/16"
H-1015	7 11/16"
H-1315	7 11/16"
H-1415	7 11/16"

(2) Please refer the "B" distance on the chart to drill another two 1/4" mounting holes as step (1).

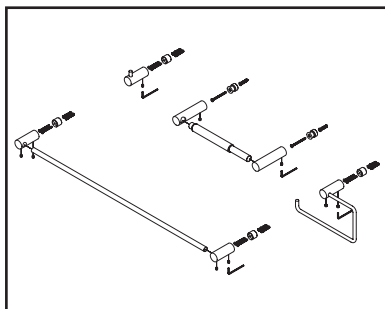

(3) Secure the bathroom hardware with the screw at the bottom. Do not overtighten.



For more care information or trouble shooting inquiries about your Olympia product, Please call:  
**OLYMPIA FAUCETS, INC.** (888) 772-7701  
 Monday-Friday 8 AM to 8 PM EST (5 AM to 5 PM PST)  
 www.olympiafaucets.com