

#### PIONEER INDUSTRIES, INC.

3325 S. Garfield Ave. Commerce, CA 90040 (800) 338-9468 www.pioneerind.com

# **INSTALLATION**

#### Tools:









Power Drill Silicone Sealant

Teflon Tape

## Model Number: 6DM400, 6MT400


### Warnings and Notes:

Check with local plumbing code requirements before installation. This product should be installed by a local listed plumber.


Do not use plumbers putty on threads.




Handheld Shower Set



1) Make sure distance between two mounting plates is as following: For 6DM400, 6AM400 - 25-1/8", For 6MT400 - 26". Drill four 1/4" holes as shown in the drawing. Use a hammer to tap plastic anchors into the holes and flush with the wall. Secure the mounting plates on wall with mounting screws.



(2) Place top brass mount on the mounting plate, tighten mounting screw on the top of brass mount. Place slide bar to top brass

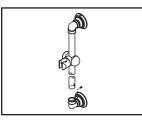

(3) Place slide bar to bottom brass mount. Place bottom brass mount on mounting plate, tighten mounting screw on the bottom of brass mount. Align the notch on the bottom of slide bar to face back on bottom brass mount, tighten Allen screws on both brass mounts to secure slide bar.




(4) Apply Teflon tape to the pipe nipple stretching out from the wall, attach drop ell to pipe nipple. Install vacuum breaker to drop ell. Connect 60" stainless steel hose to vacuum breaker. Use silicone sealant to caulk around drop ell to create water tight seal. Turn on water and check for any leaks. Turn off water and connect handheld showerhead to 60' stainless steel hose.

## **Exploded Drawing: (6DM400)**

\* Note: Please specify finish/color when ordering.

|   | ITEM#      | DESCRIPTION                           |
|---|------------|---------------------------------------|
| Α | X-4600048* | 1.75 GPM Handheld Showerhead          |
| В | X-4600006* | 60" SST Hose                          |
| С | X-4600005* | Vacuum Breaker                        |
| D | X-4600004* | Drop Ell                              |
| Е | X-5600001  | Mounting Kit                          |
| F | X-4600001* | Del Mar Brass Mounts                  |
| G | X-4600003* | Slide Bar                             |
| Н | X-4900024  | 3/32" Allen Wrench                    |
| 1 | X-4600002  | Mounting Screw                        |
| 2 | X-4900002  | 3/32" Allen Screw                     |
| 3 | OP-460025  | Washer                                |
|   |            | · · · · · · · · · · · · · · · · · · · |

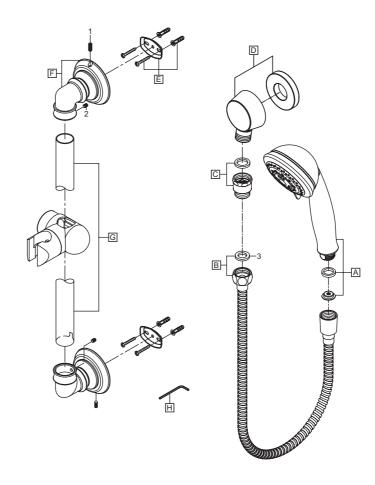




For more care information or trouble shooting inquiries about your Pioneer product, please call: Pioneer Industries, Inc. (800) 338-9468 Monday-Friday 8 AM to 8 PM EST (5 AM to 5 PM PST) www.pioneerind.com

## **Exploded Drawing : (6MT400)**

|   | ITEM#      | DESCRIPTION                  |
|---|------------|------------------------------|
| Α | X-4900112* | 1.75 GPM Handheld Showerhead |
| В | X-4600006* | 60" SST Hose                 |
| С | X-4600005* | Vacuum Breaker               |
| D | X-4600015* | Drop Ell                     |
| Е | X-5600001  | Mounting Kit                 |
| F | X-4600016* | Brass Mounts                 |
| G | X-4600003* | Slide Bar                    |
| Н | X-4900024  | 3/32" Allen Wrench           |
| 1 | X-4600002  | Mounting Screw               |
| 2 | X-4900002  | 3/32" Allen Screw            |
| 3 | OP-460025  | Washer                       |

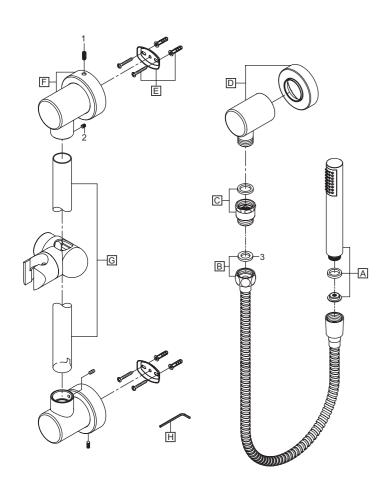



For more care information or trouble shooting inquiries about your Pioneer product, please call:

Pioneer Industries, Inc. (800) 338-9468

Monday-Friday 8 AM to 8 PM EST (5 AM to 5 PM PST)

www.pioneerind.com

<sup>\*</sup> Note: Please specify finish/color when ordering.