INSTALLATION

OLYMPIA FAUCETS, INC.
3325 S. Garfield Ave.
Commerce, CA 90040
(888) 772-7701
www.olympiafaucets.com

Tools:

Adjustable Wrench

Plumbers Putty

Teflon Tape

Rags

Model Number: P-1230, P-1232, P-1250
P-3230, P-3240, P-3250

Warnings and Notes:
Check with local plumbing code requirements before installation.
This product should be installed by a local listed plumber.
Do not use plumbers putty on threads.

Installation Steps:

Two & Three Handle Tub / Shower Set

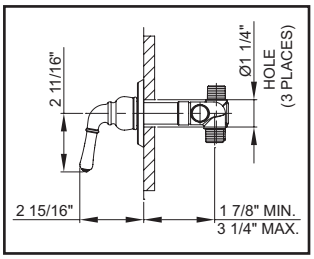

(1-a) Determine the location of the valve to be installed for new installation. For existing installation look at the installation drawing and ensure there is enough room to install the valve.

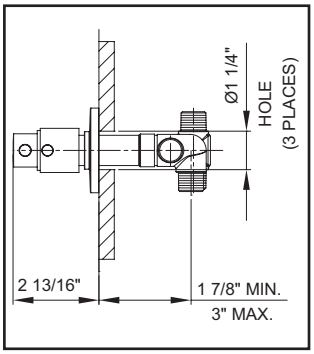

(1-b) **For B1, B2, B3, B4, M1 Installation:-** Determine the location of the valve to be installed for new installation. For existing installation look at the installation drawing and ensure there is enough room to install the valve.

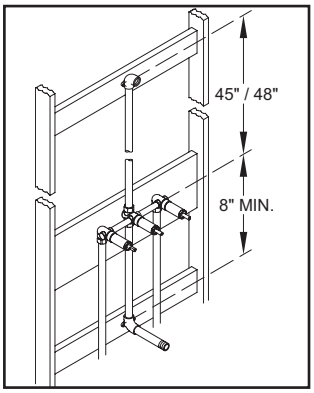

(2) Important: Do not use PEX or CPVC between the valve and tub spout.
※Distance between valve body and diverter tub spout should be minimum 8" to maximum 18".
※Distance between valve body and showerhead outlet should be minimum 45" to maximum 48".

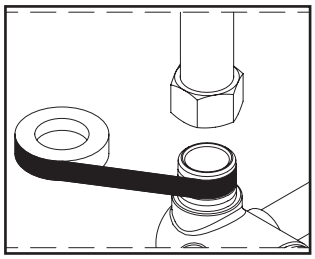

(3) For IPS connection:- Apply Teflon tape on valve's inlet and outlet port, before connect water pipes, make sure which one is the inlet port of the valve, connect water pipes to inlet and outlet ports, cap the unused outlet port if there is any.

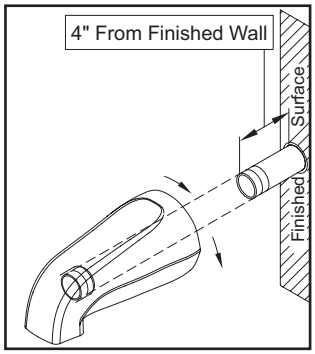

(4) The 1/2" pipe thread nipple must be kept with the length of 4" from finished wall. Apply Teflon tape at thread end, screw tub spout onto pipe thread nipple and tighten by strap wrench.

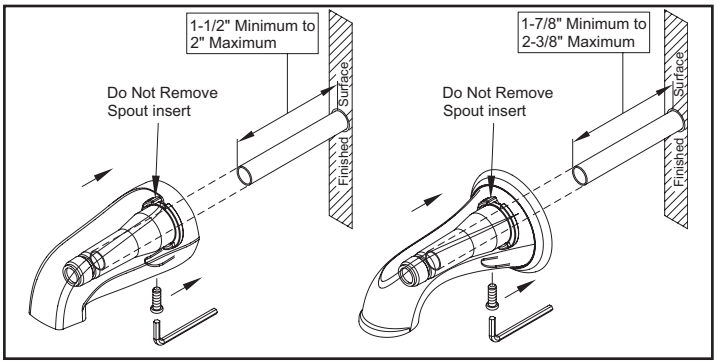

(5a) **For B1, B2, B3, B4, M1 Installation:-**
-Consult Distance Charts: Refer to the distance charts on the provided drawing to ensure accurate installation of standard and extended spouts.
-Pipe Preparation: -Chamfer the copper pipe's end to remove burrs and prevent damage to the O-ring and cone-shaped gasket inside the tub spout.
-Sand the outside surface of the copper pipe to eliminate any nicks or scratches.
-Escutcheon Installation (If Included): If the spout escutcheon is part of the series, slide it over the copper pipe.
-Spout Attachment: -Press and twist the tub spout until it sits flush against the finished wall.
-Secure the spout by tightening the set screw.

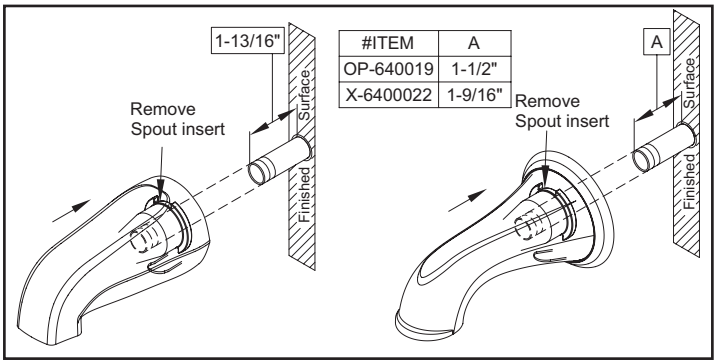

#ITEM	A
OP-640019	1-1/2"
X-6400022	1-9/16"

(5b) **For B1, B2, B3, B4, M1 Installation:-**
-Preparation:
-Remove the spout insert.
-Apply Teflon tape to the nipple threads.
-Distance Chart Reference: Use the installation distance charts to ensure proper alignment.
Ensure all connections are tight and free of leaks before usage.

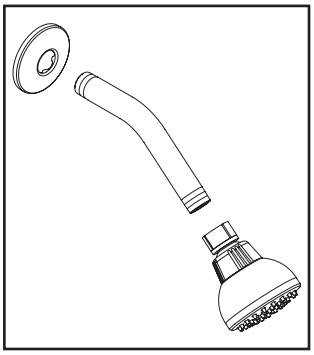

(6) Use silicon to caulk the back of shower arm flange. Slide shower arm flange on shower arm. Apply Teflon tape on both thread ends of shower arm, install shower arm to elbow and tighten with help of strap wrench. Press shower arm flange against finished wall. Turn on water to flush the system. Turn off water and attach showerhead to shower arm.

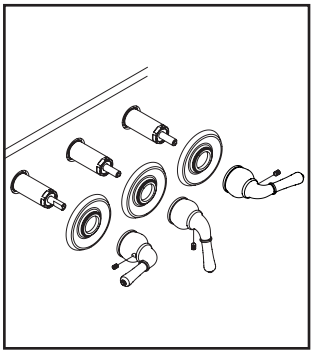

(7) Install valve escutcheon. Install handles to the valve with the help of 3/32" Allen wrench.

Exploded Drawing:

* Note: Please specify finish/color when ordering.

	ITEM #	DESCRIPTION
A1	OP-140009*	Lever Handle (For P-123X, P-3230)
A2	OP-190015C*	Lever Handle (For P-1250, P-3250)
A3	OP-140013C, H, V	Acrylic Handle (For P-3240)
B	OP-440037*	Escutcheon
C	OP-440036*	Sleeve
D	OP-440035	Stem Extension
E	OP-340006C, H	Cartridge-Cold,Hot
F	OP-490041	Springs & Seats
G	OP-340007	Diverter Stem Unit (For P-32X0)
H	OP-490011	3/32" Allen Wrench

	ITEM #	DESCRIPTION
I	OP-640053*	1.5 GPM Showerhead
J	OP-640002*	Shower Arm
K	OP-640001*	Shower Arm Flange
L	OP-640015*	Diverter Tub Spout (For P-12X0)
M	OP-640014*	Tub Spout (For P-32X0)
N	OP-440017	Protective Cover
1	OP-490029	Allen Screw
2	OP-490012C, H, V	Acrylic Handle Button Cold, Hot, Diverter (For P-3240)
3	OP-490025	Handle Screw (For P-3240)

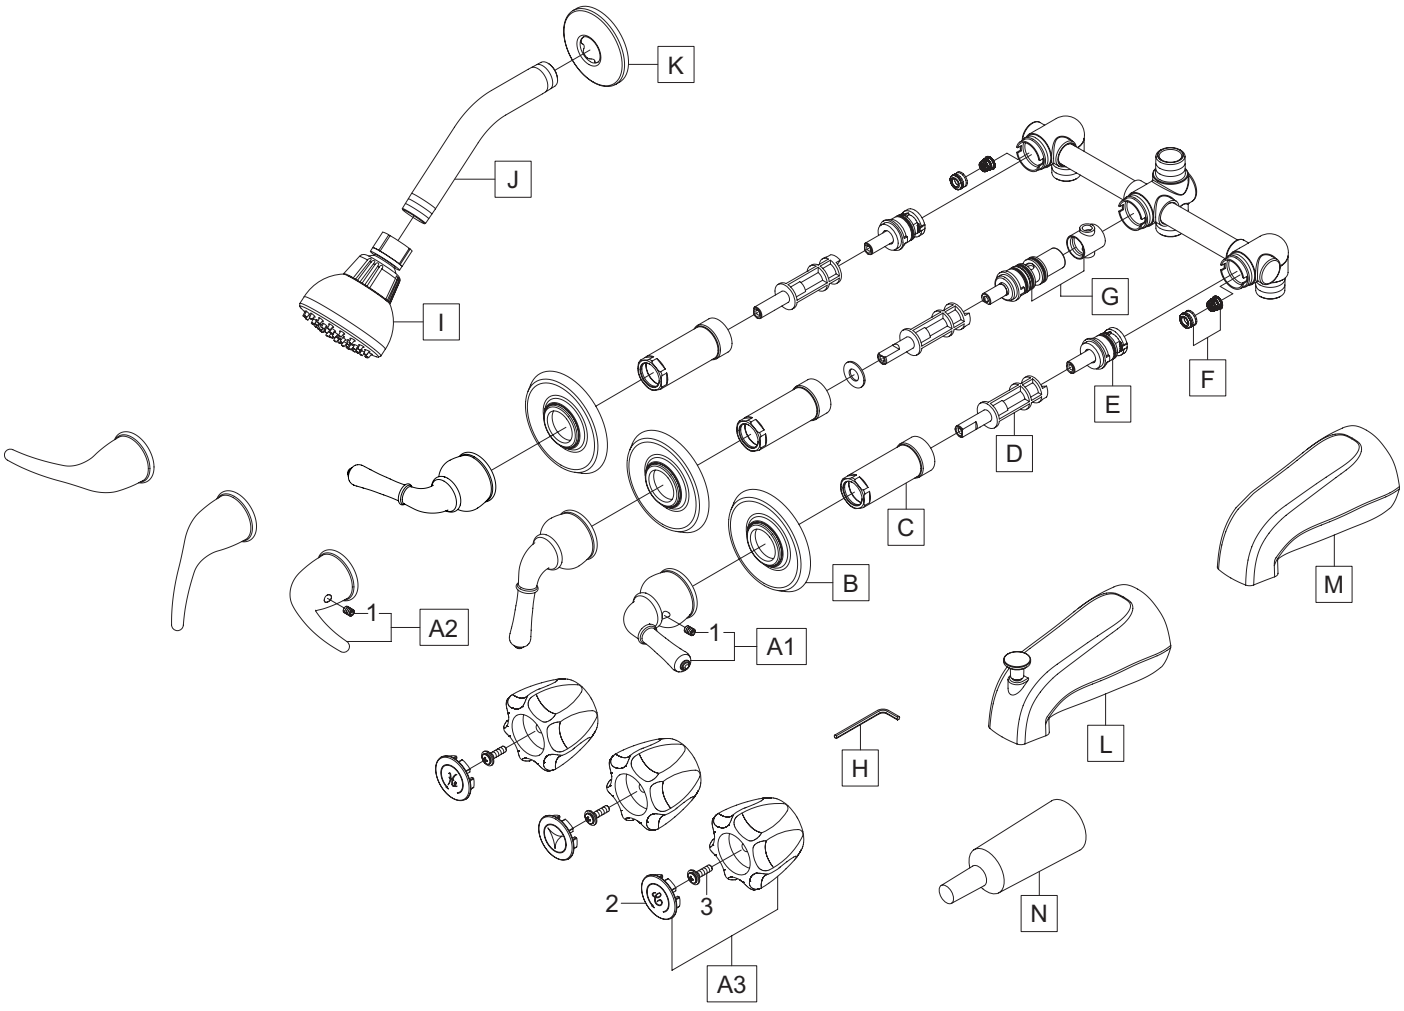

Exploded Drawing: (B1, B2, B3, B4, M1 Suffix)

* Note: Please specify finish/color when ordering.

	ITEM #	DESCRIPTION
A1	X-1300006*	Handle Kit (For “M1” Suffix)
A2	X-1900009C.H.P*	Handle Kit (For “B1” Suffix)
A2	X-1900010C.H.P*	Handle Kit (For “B2” Suffix)
A3	X-1900011C.H.P*	Handle Kit (For “B3” Suffix)
A4	X-1900012C.H*	Handle Kit (For “B4” Suffix)
B1	CS-64005*	Handle Escutcheon (For “M1” Suffix)
B2	X-4300030*	Handle Escutcheon (For “B1-B4” Suffix)
C	OP-440036*	Sleeve
D	OP-440035	Stem Extension
E	OP-340006C, H	Cartridge-Cold,Hot
F	OP-490041	Springs & Seats
G	OP-340007	Diverter Stem Unit (For P-3230)
H	OP-490011	3/32" Allen Wrench
I1	OP-640038*	1.75 GPM Shower Head (For P-3230)
I2	OP-640035*	1.75 GPM Shower Head (For P-123X)
J	OP-640002*	Shower Arm
K	OP-640001*	Shower Arm Flange

	ITEM #	DESCRIPTION
L	OP-640007*	Diverter Tub Spout (For P-1230-M1)
M	OP-6400019*	Tub Spout (For P-3230-M1)
N	OP-640008*	Spout Escutcheon (For “M1” Suffix)
O	X-6400021*	Diverter Tub Spout (For P-1230-B1-B4” Suffix)
P	X-6400022*	Tub Spout (For P-3230-B1-B4” Suffix)
Q	X-4400002*	Spout Escutcheon (For “B1-B4” Suffix)
R	OP-440017	Protective Cover
1	X-4900002	3/32" Allen Screw (For “M1, B4” Suffix)
2	X-4900044*	Hole Cover (For “M1” Suffix)
3	X-4900061	Handle Screw (For “B1, B2, B3” Suffix)
4	X-4900042C, H, P*	Button-C, H, P (For “B1, B2” Suffix)
5	X-4900062C, H, P*	Button-C, H, P (For “B3” Suffix)
6	OP-640058	Gasket

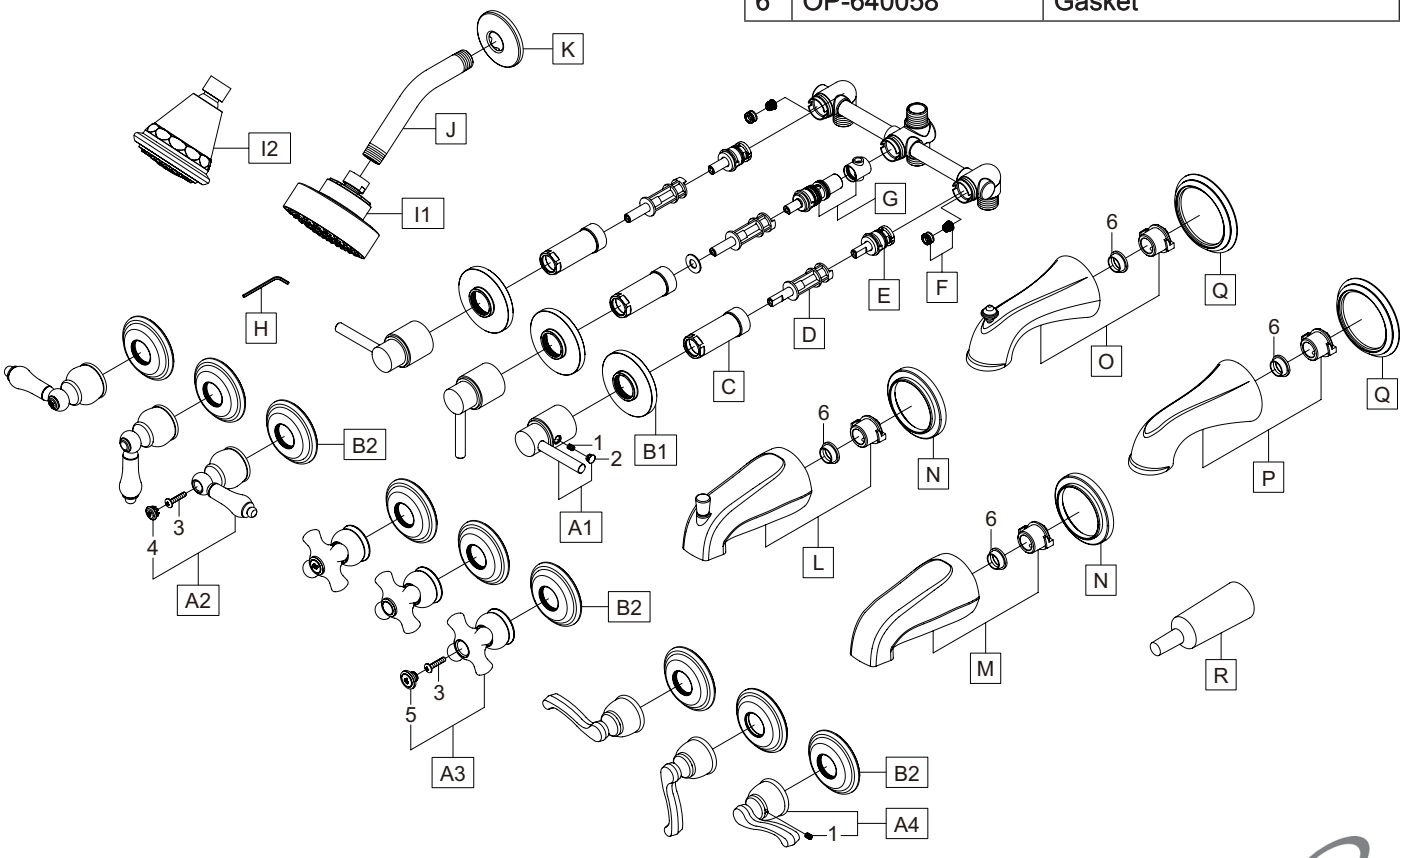

OLYMPIA

For more care information or trouble shooting inquiries about your Olympia product, Please call:
OLYMPIA FAUCETS, INC. (888) 772-7701
Monday-Friday 8 AM to 8 PM EST (5 AM to 5 PM PST)
www.olympiafaucets.com