



12400 Earl Jones Way
Louisville, KY 40299
rev-a-shelf.com
Customer Service: 800-626-1126



449 BASE ORGANIZER

1"
2"
Reference for scale

Top left hand slide

21-5/8"
(549.5 mm)

(3) screw hole locations



ESTIMATED ASSEMBLY TIME:

20 MIN

CARE AND MAINTENANCE:

Clean with a damp cloth and wipe parts dry.

PARTS LIST

- A. (6) #8 x 5/8" Flat head screws for 1/8" spacer
- B. (6) #8 x 1" Flat head screws for 1/4" spacer
- C. (6) M5X14.5MM Flat head Euro Screws*
- D. (6) M5X20MM Flat head Euro Screws*
- E. (4) #6 x 1/2" Door mounting screws
- F. (6) 1/8" slide side spacer
- G. (6) 1/4" slide side spacer
- H. Double-sided tape

* For use with system holes

Fig. 1


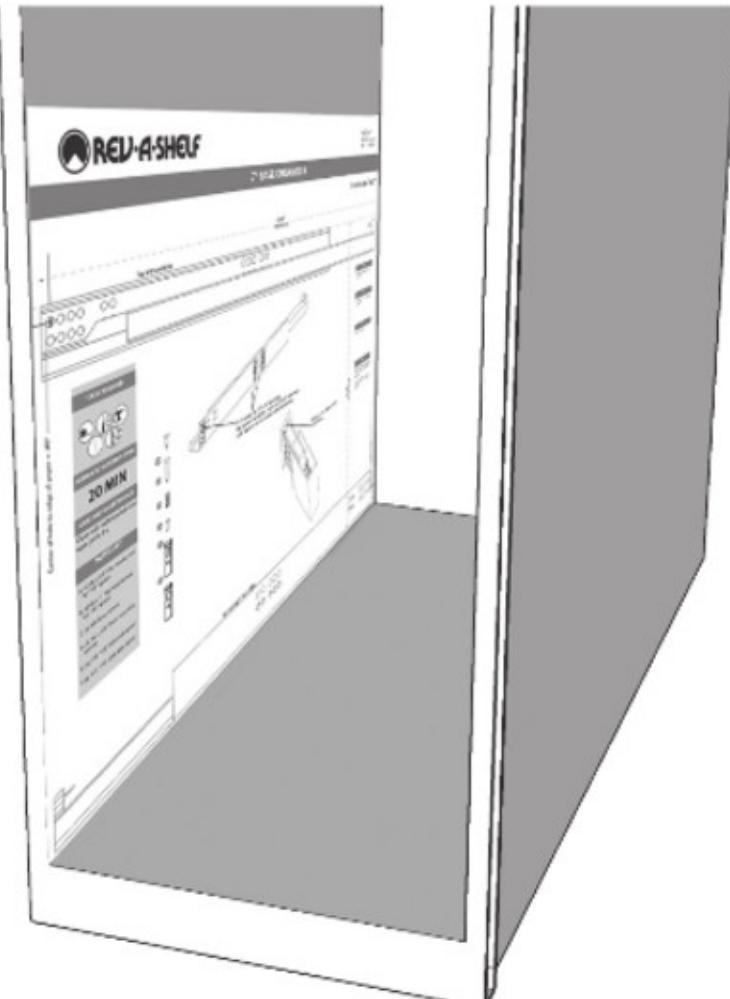


Fig. 2

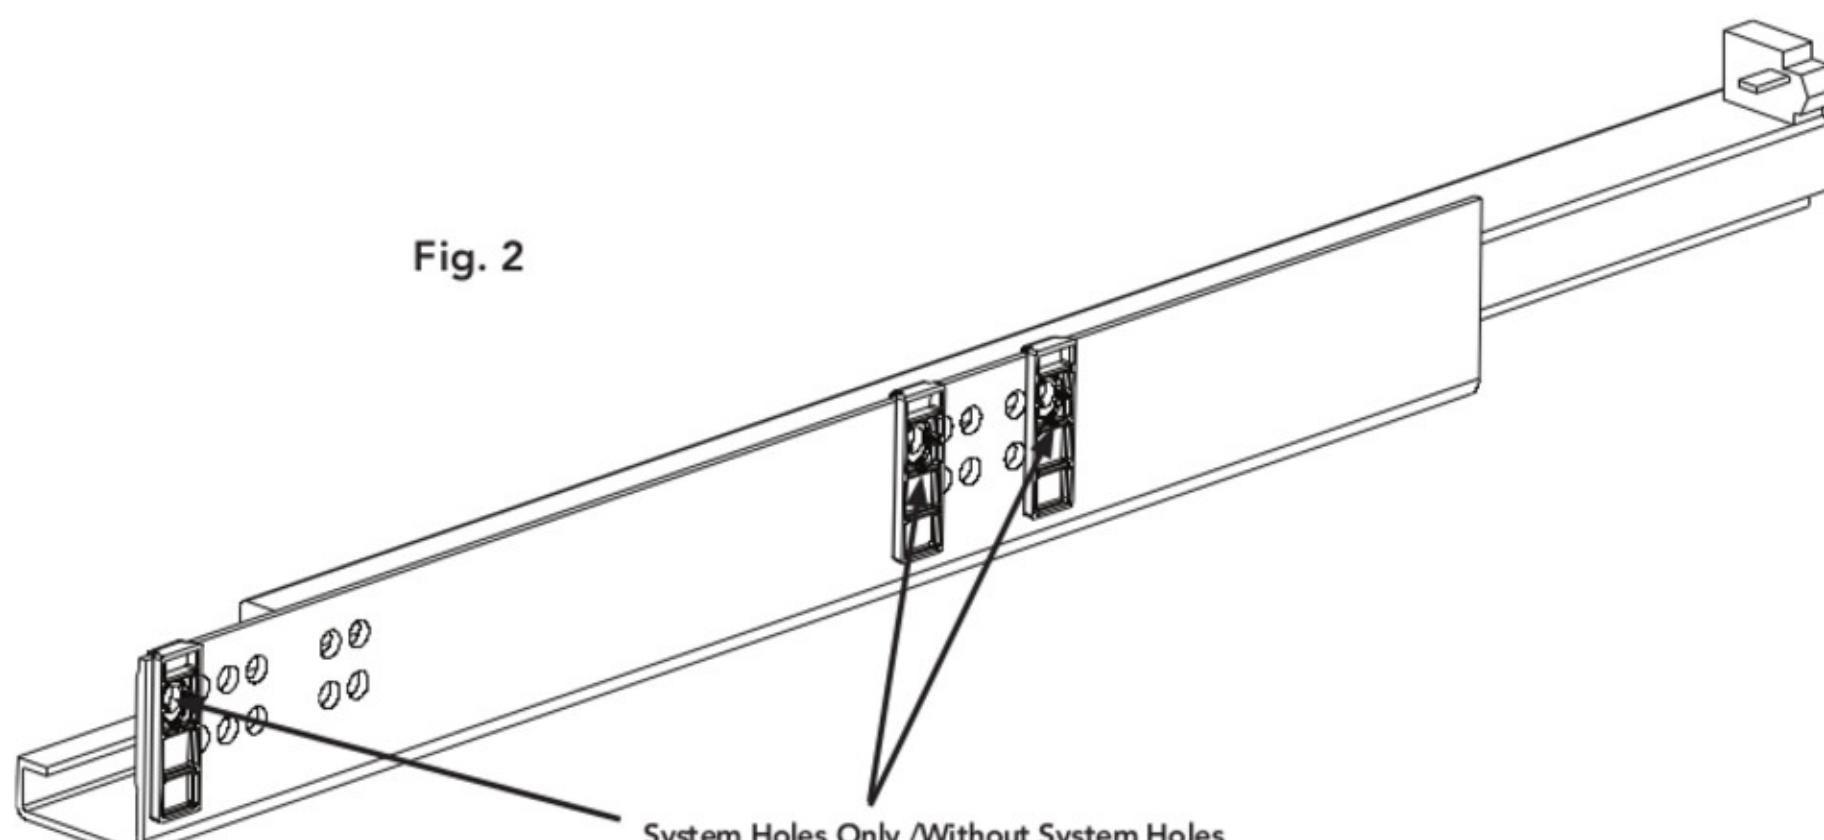

FRAMELESS SIDE WALL THICKNESS	With System Holes	Without System Holes	CORRESPONDING BLUM SPACER
3/4"	M5 x 11.5MM	#8 x 5/8"	N/A
5/8"	M5 x 14.5MM	#8 x 5/8"	1/8" Spacer
1/2"	M5 x 20MM	#8 x 1"	1/4" Spacer

Fig. 3


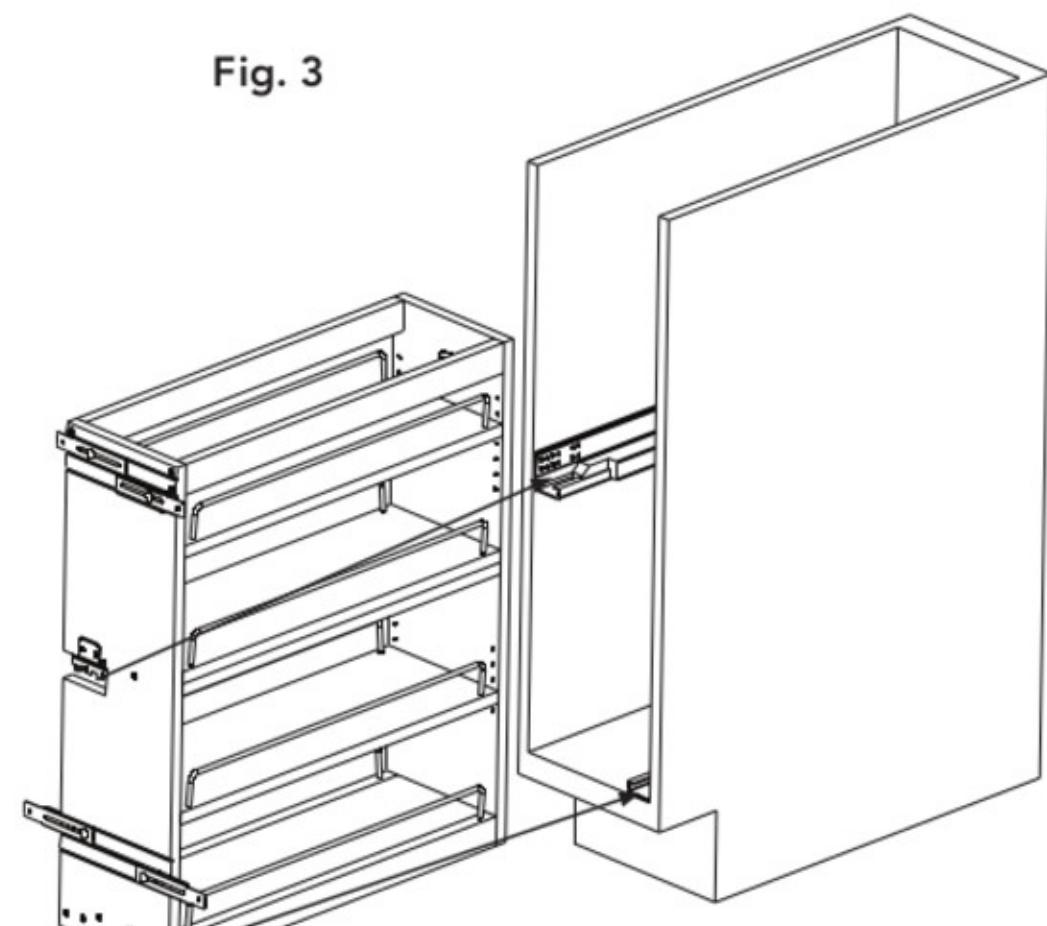


Fig. 4

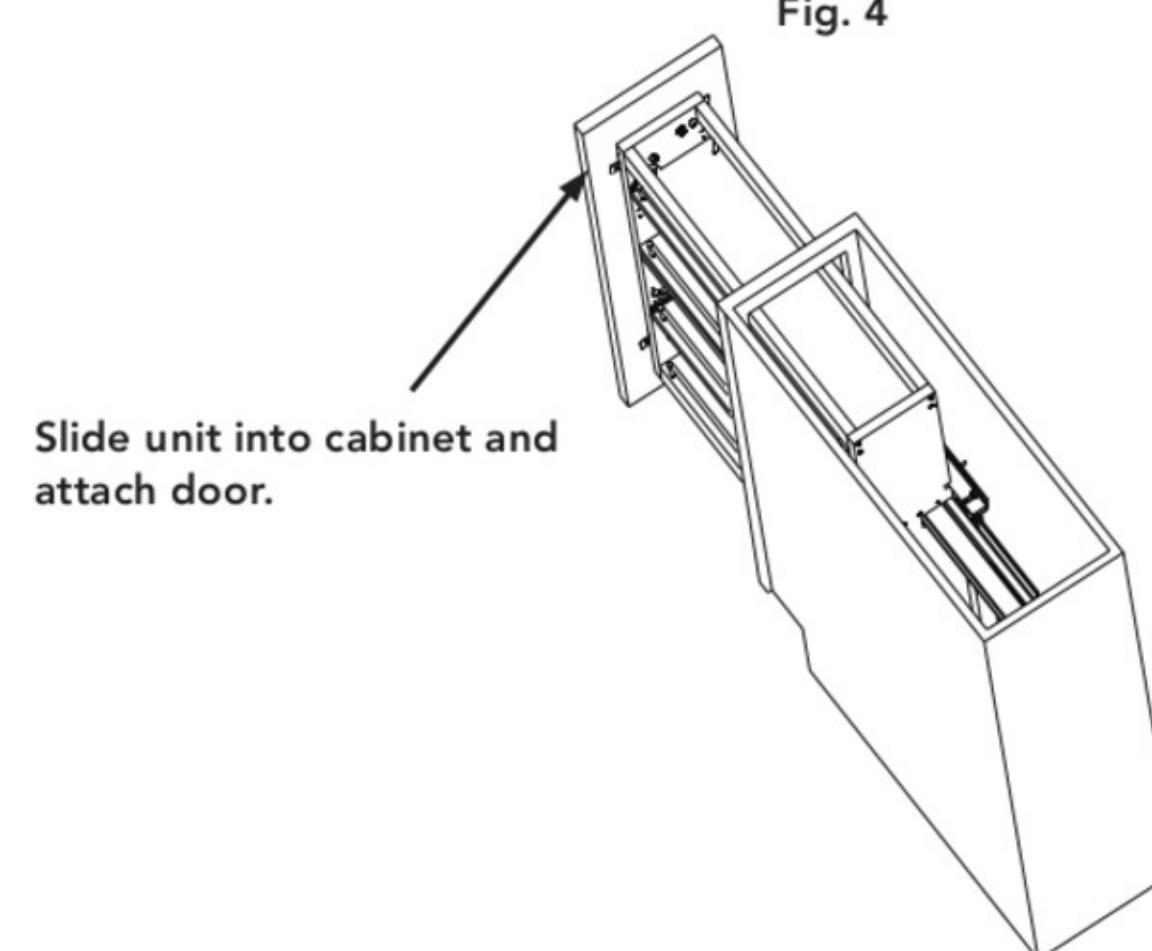

Slide unit into cabinet and attach door.

Bottom right hand slide

(3) screw hole locations

STEP 1

Place template and mark hole locations for the top left hand slide (See Figure 1). Flip the template and do the same for the bottom right hand slide.

STEP 2

Attach slides to side and bottom of cabinet using (6) corresponding flat head screws (See Figure 2).

STEP 3

Attach unit to slides (See Figure 3).

STEP 4

Slide the unit into the cabinet and attach door using (4) #6 x 1/2" flat head screws (See Figure 4).

Note: Align adjustable mounting brackets to the thickest portion of the door. Double-sided tape may be used.

Right Side: Align edge of paper with edge of cabinet.