


INSTALLATION INSTRUCTIONS

WOOD BOTTOM MOUNT WASTE CONTAINER

TOOLS REQUIRED:

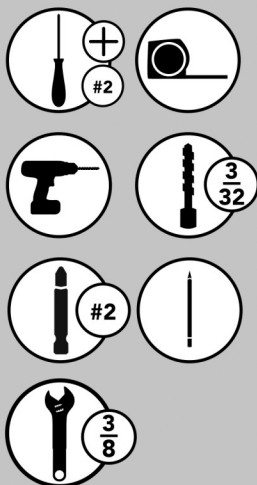

ESTIMATED ASSEMBLY TIME:

30 MIN

CARE AND MAINTENANCE:

Clean with a damp cloth and wipe parts dry.



Parts List

No.	Description	Qty
1	Slide Straps	2
2	Slide Feet	4
3	Right & Left Slide	1 each
4	Locking Devices	2
5	Bottom Mount Frame	1
6	#6 x 1/2" Flat Head Screws	6
7	#6 x 1/2" Pan Head Screws	4
8	#6 x 1" Flat Head Screws	8
9	35 qt. Waste Containers	2
10	35 qt. Green Lid	1

