





12400 Earl Jones Way, Louisville, KY 40299
rev-a-shelf.com - Customer Service: 800-626-1126









HIGH TECH

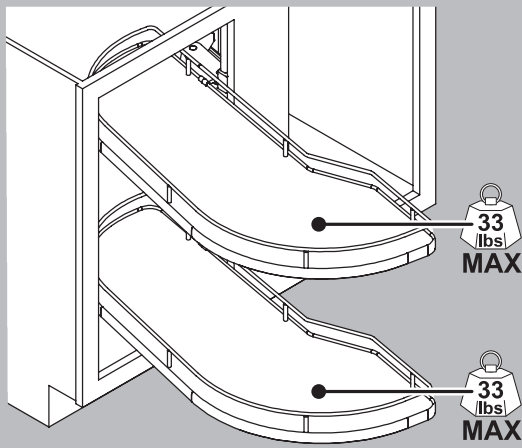


A30ISTR1226 12/2023

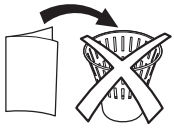

x1

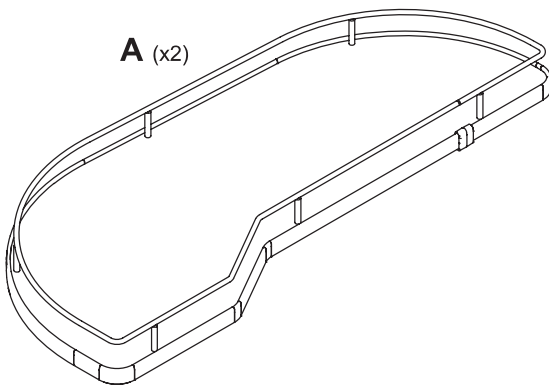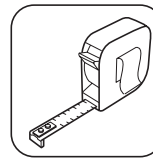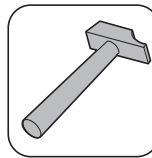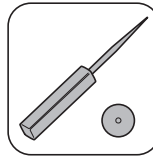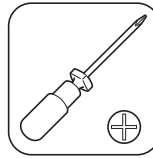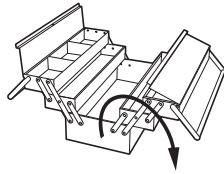


A (x2)

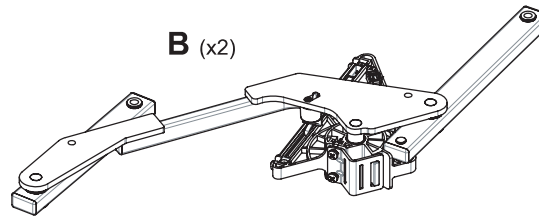


B (x2)


C (x1)




D (x4)

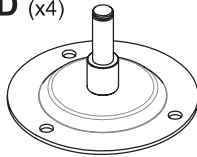

E (x2)

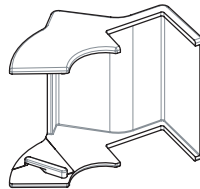

F (x1)

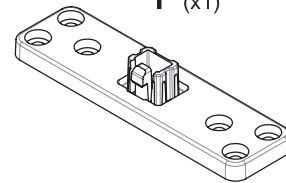


6.3x13




G (x12)

4.8x9.5



H (x1)

4x16



I (x8)

M4x6




J (x2)




K (x4)


L (x1)

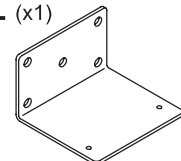


1

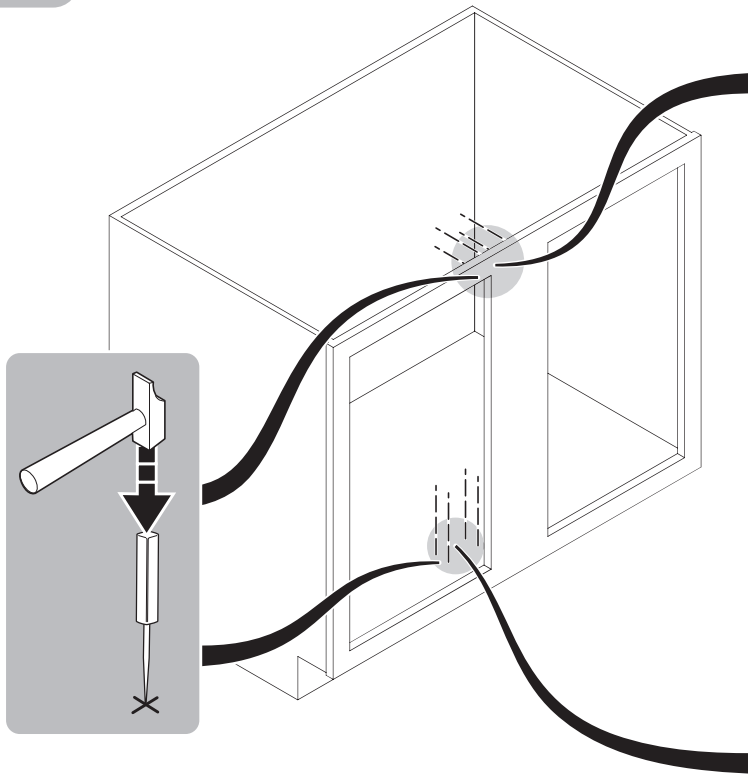


*Frameless applications use frameless template to ensure clearance of hinge/door.

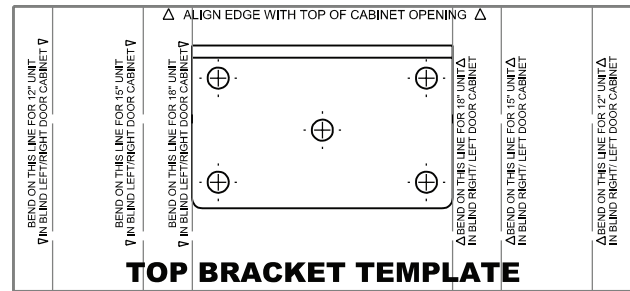

BOTTOM BRACKET TEMPLATE


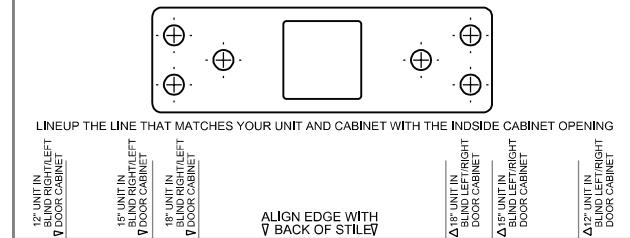


2







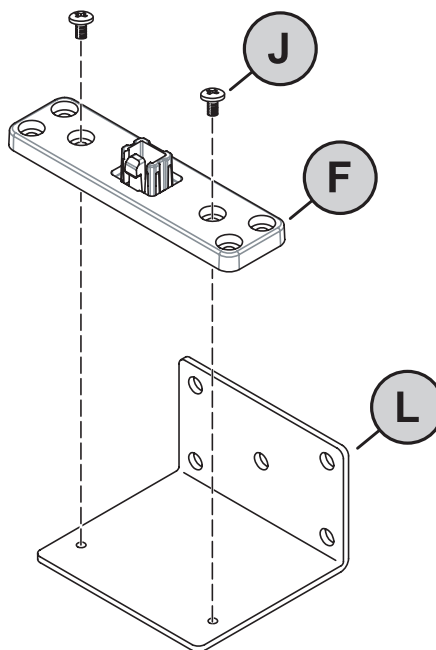


*Skip this step if using frameless template. Attach the Top Post Bracket (F) directly to top of cabinet in step 6, omitting post support bracket (Part L).


3

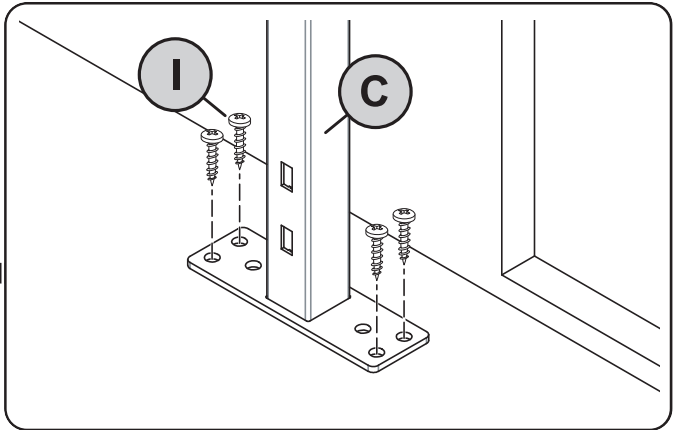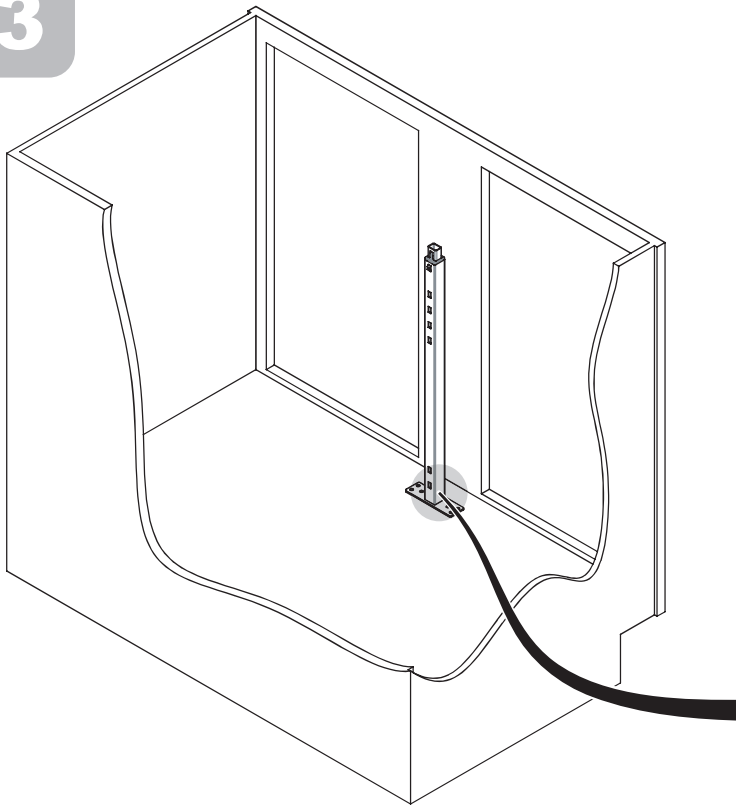



4

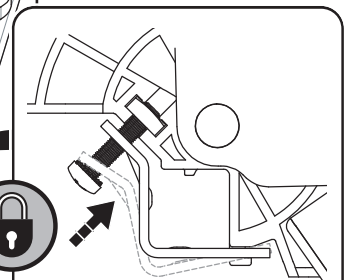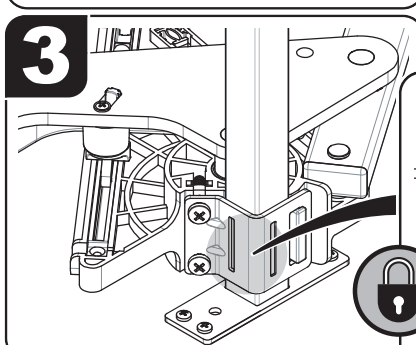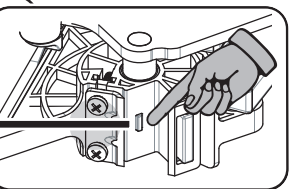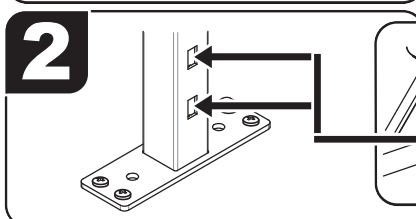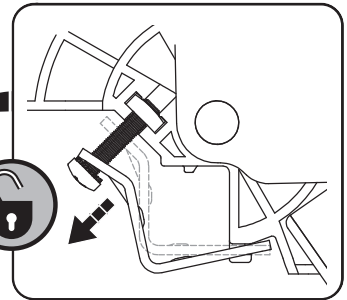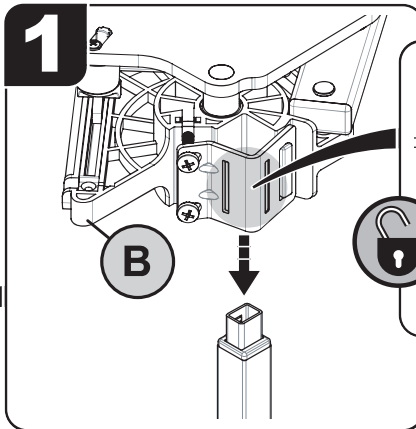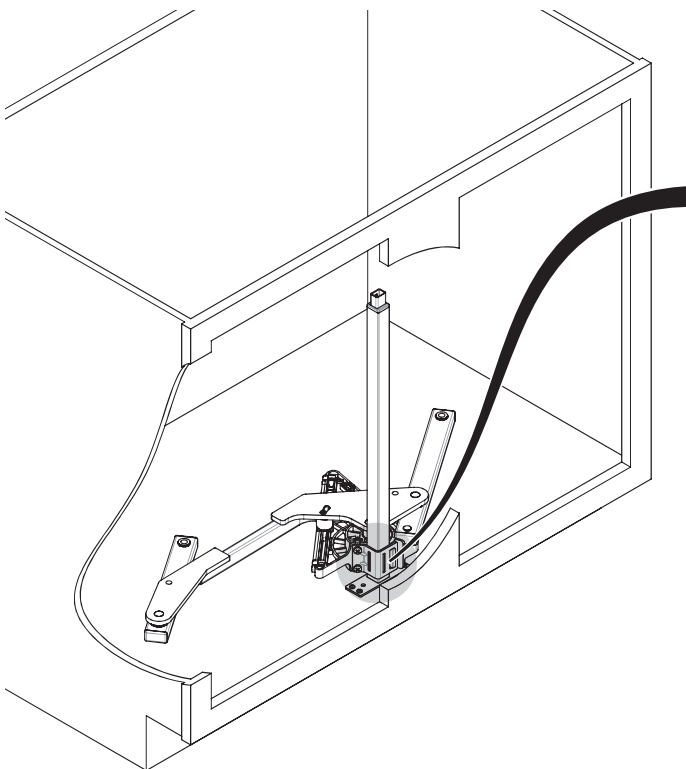



5

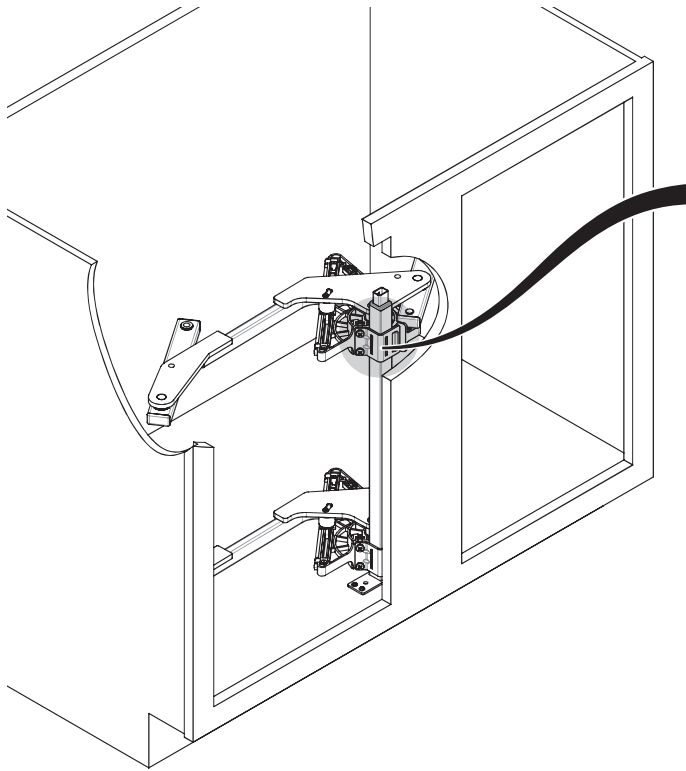



1

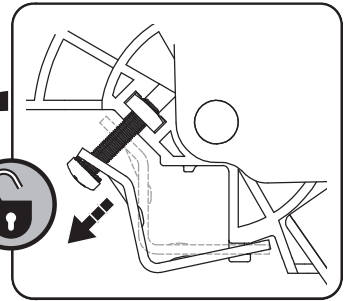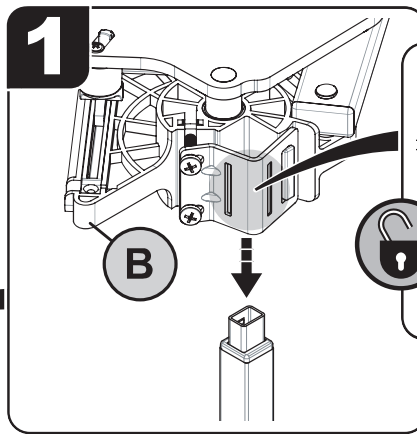


2

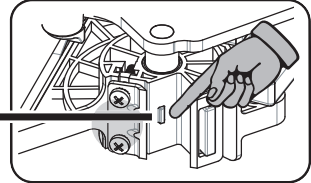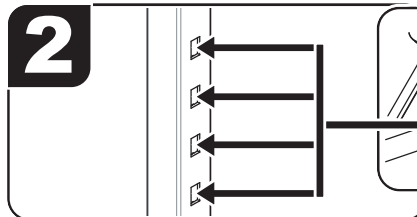

3

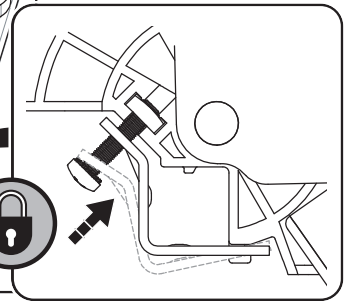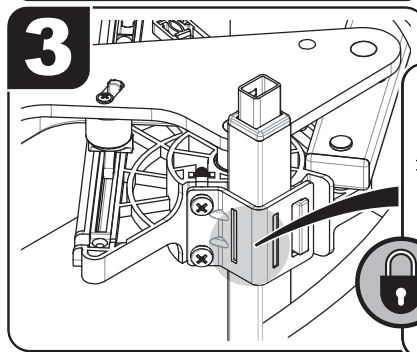


6

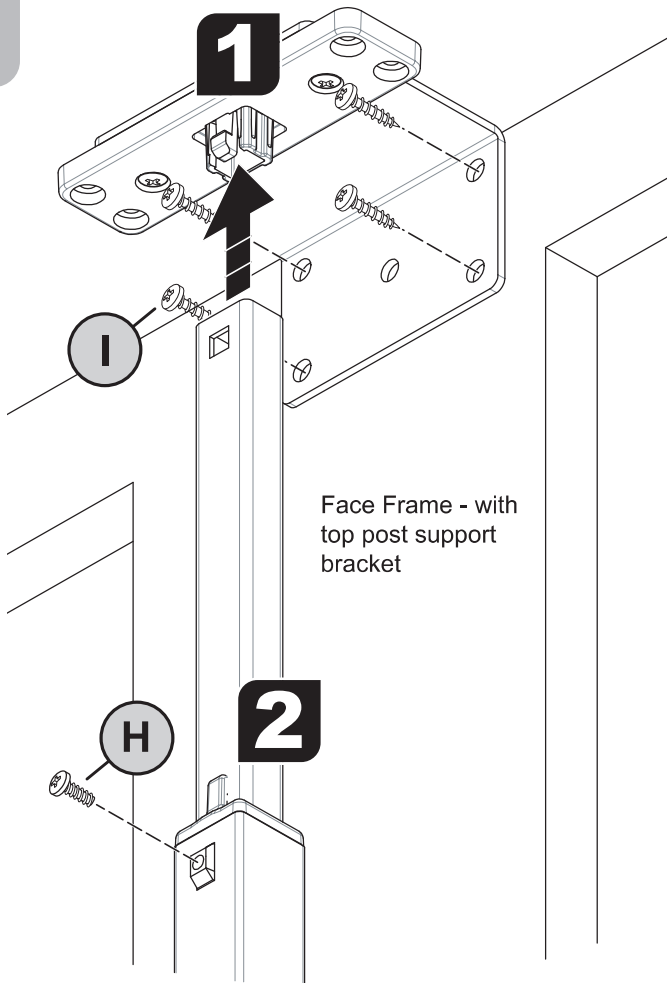

Face Frame - with top post support bracket

H

2

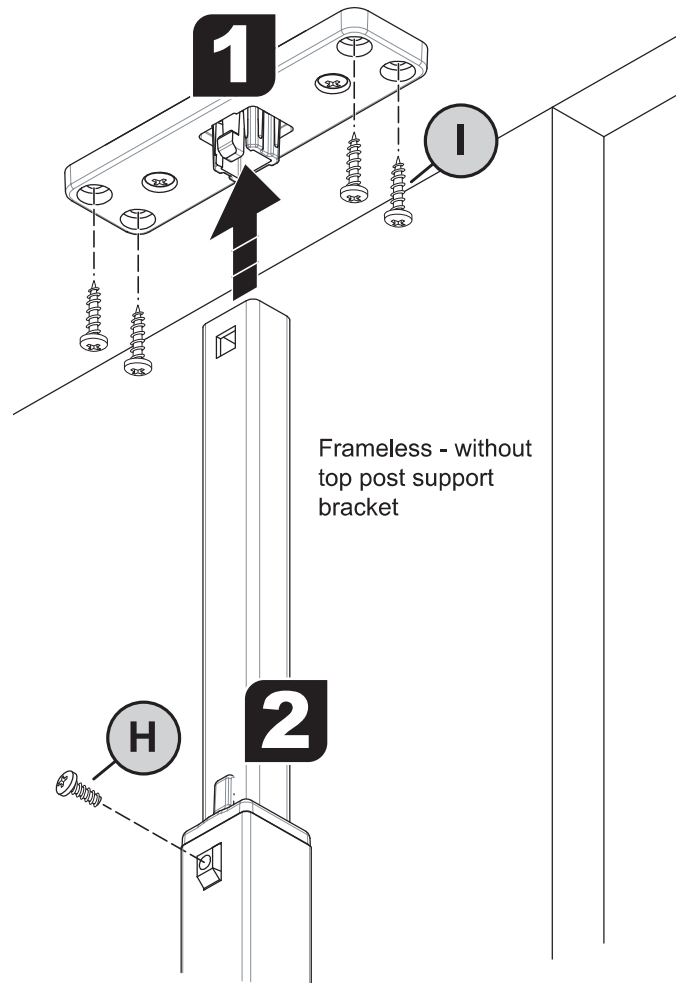


Frameless - without top post support bracket

H


2

7

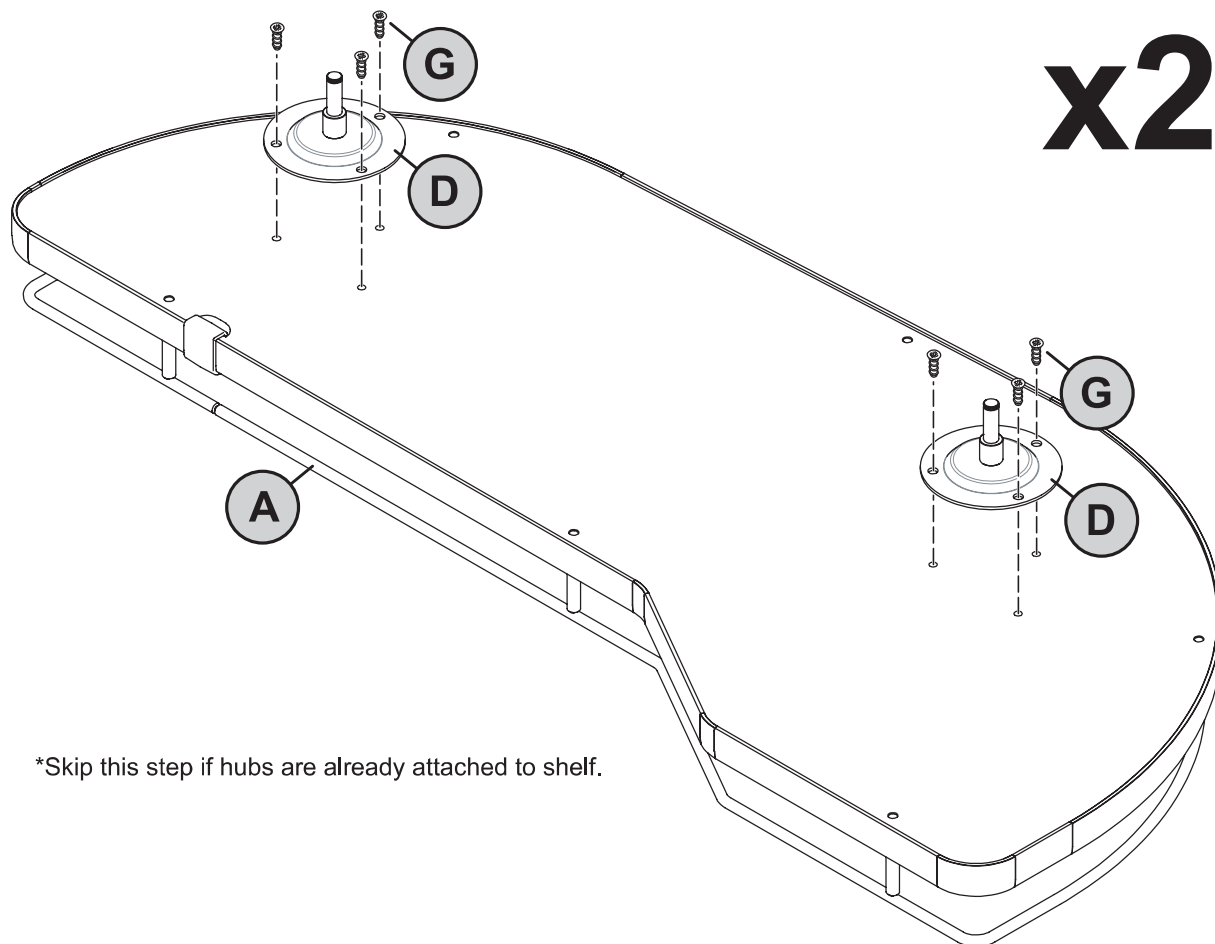



*Skip this step if hubs are already attached to shelf.

8

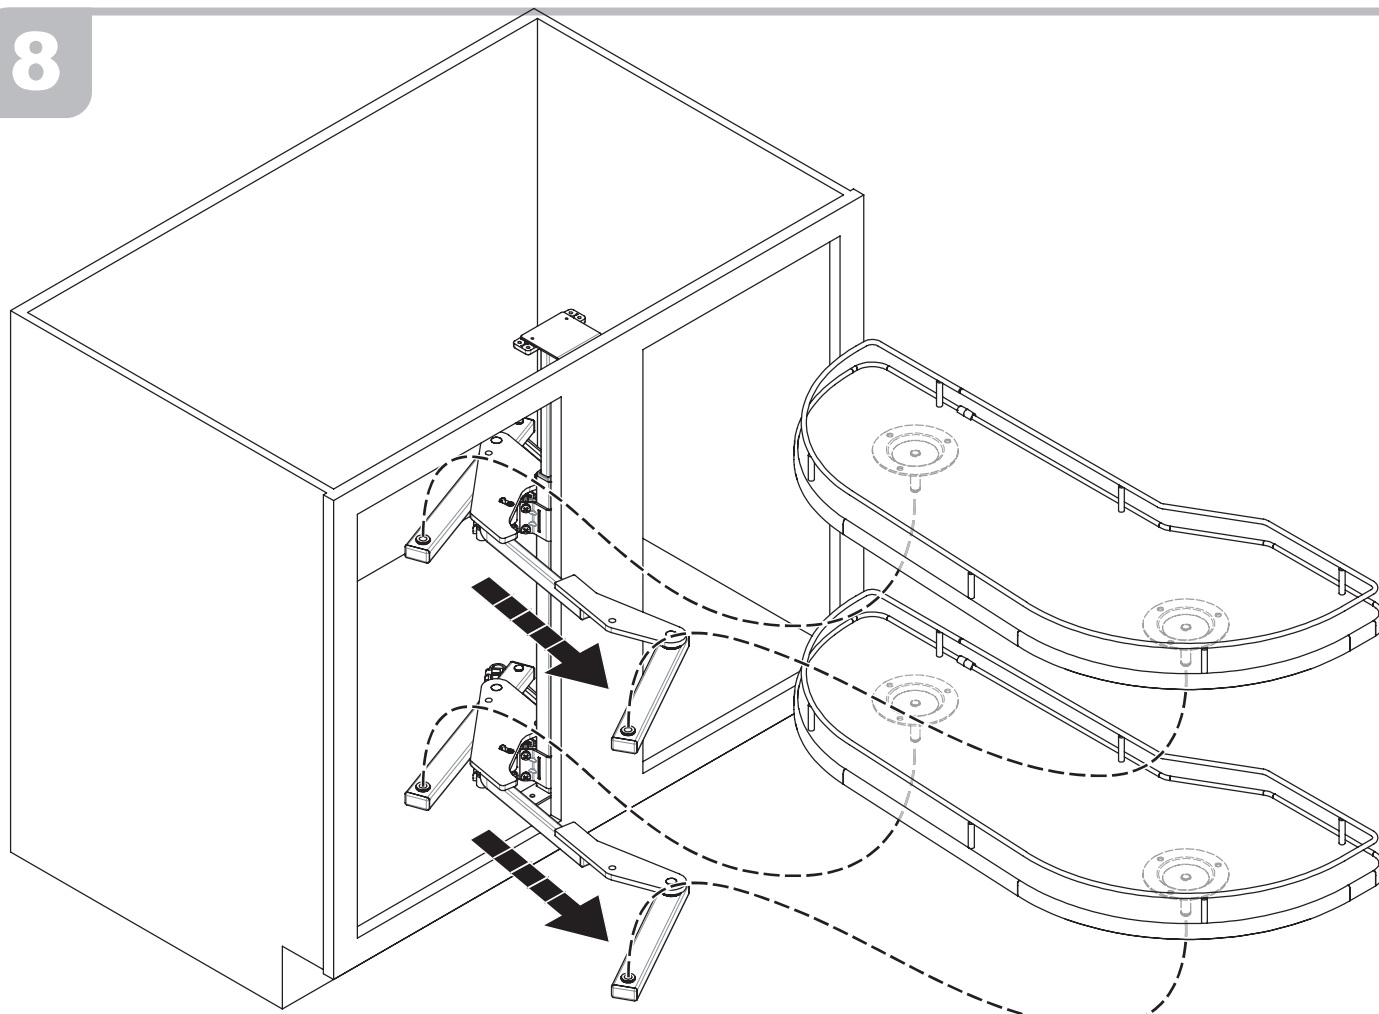

9

x4

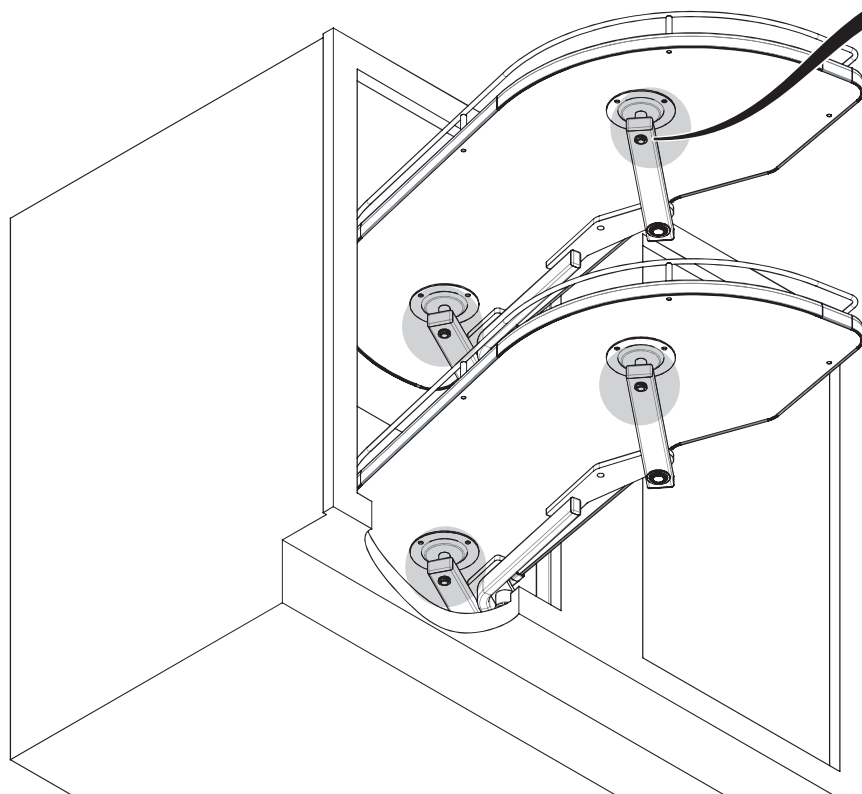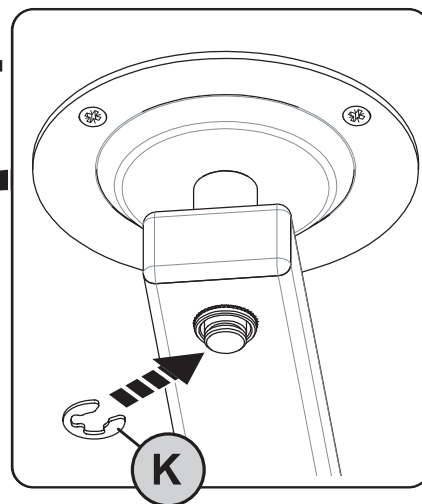

10

