


## INSTALLATION INSTRUCTIONS

### TRIMMABLE WOOD DRAWER INSERT

#### TOOLS REQUIRED:

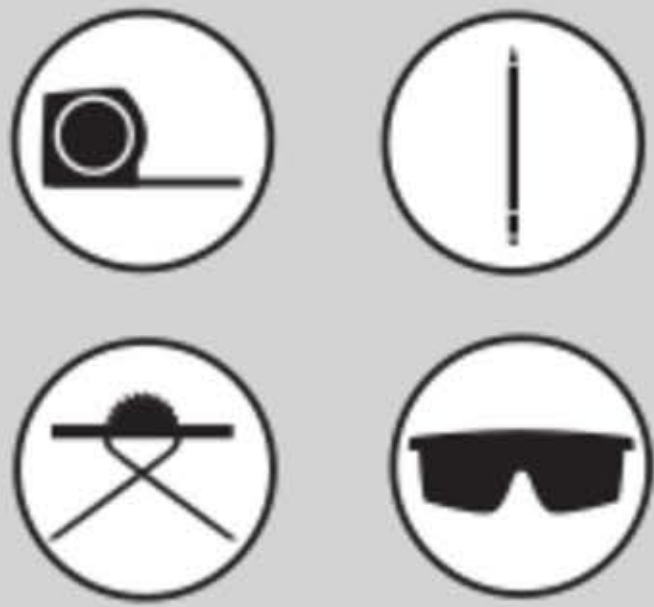


#### ESTIMATED ASSEMBLY TIME:

**15 MIN**

#### CARE AND MAINTENANCE:


Clean with a damp cloth and wipe parts dry.

**1. Measure drawer opening.**

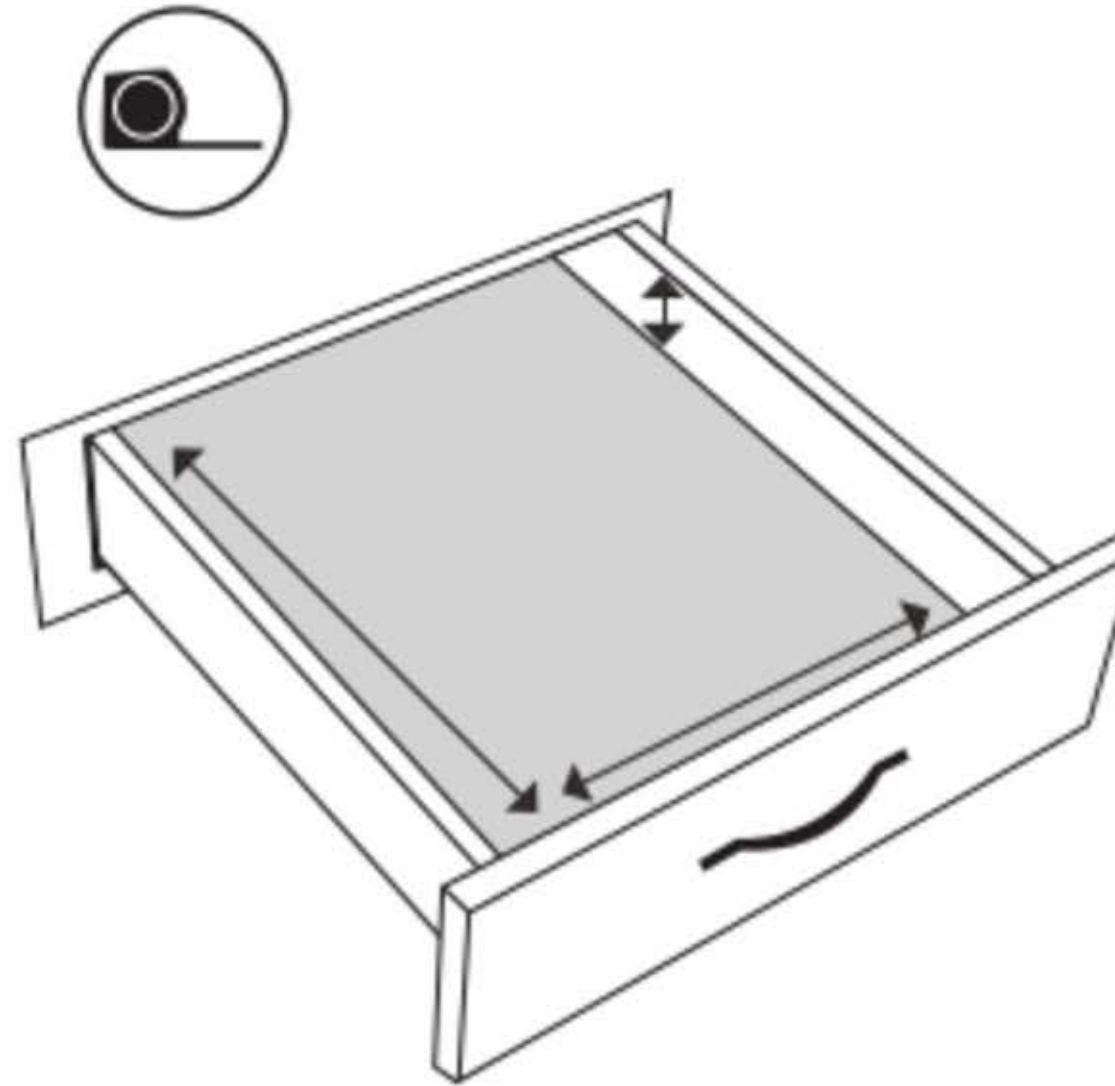


**2. Measure insert and mark cutting line.**

*See next page for special cutting instructions*

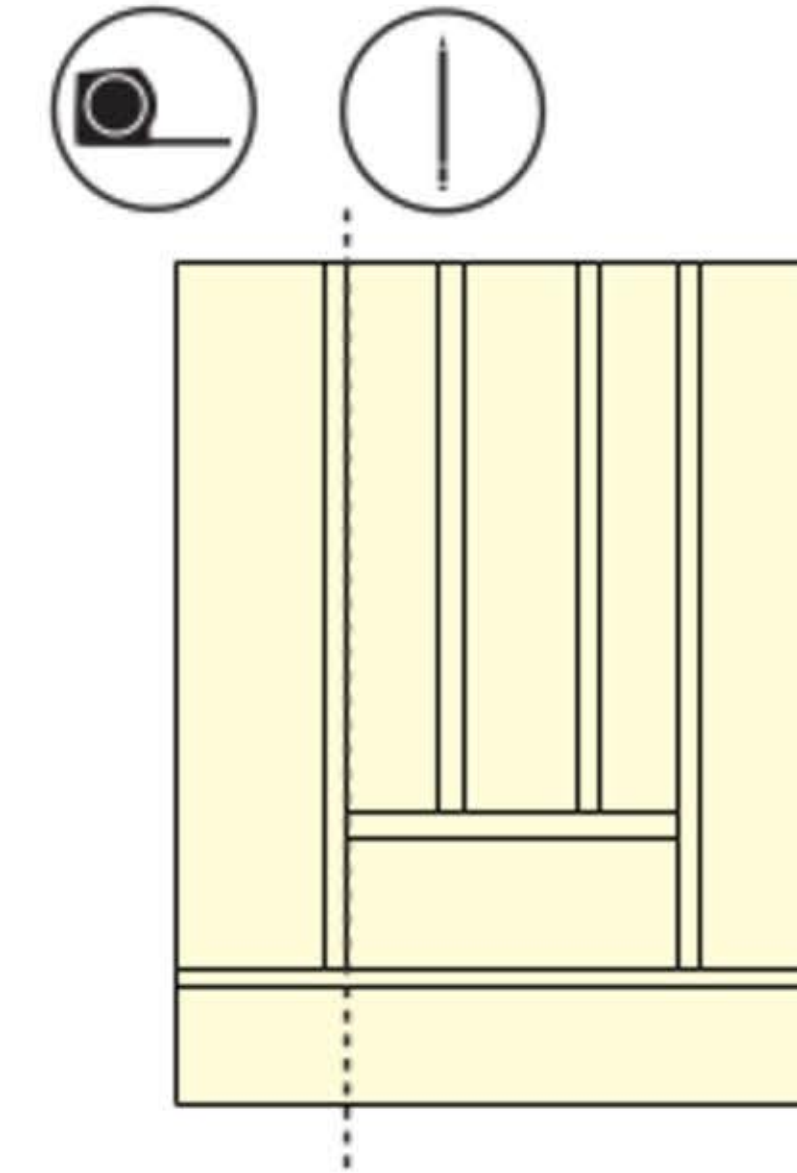

**3. Cut insert to fit inside of drawer.**

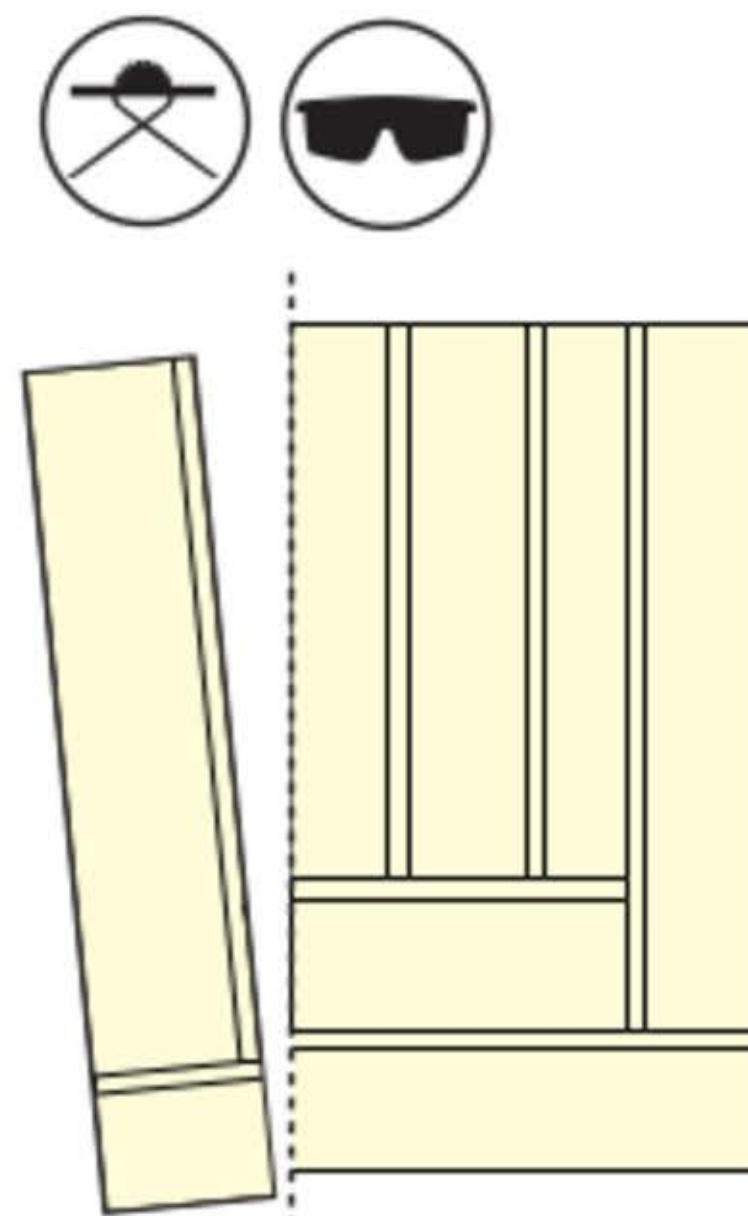

**4. Simply drop in drawer.**

