



IRONING BOARD INSTALLATION INSTRUCTIONS

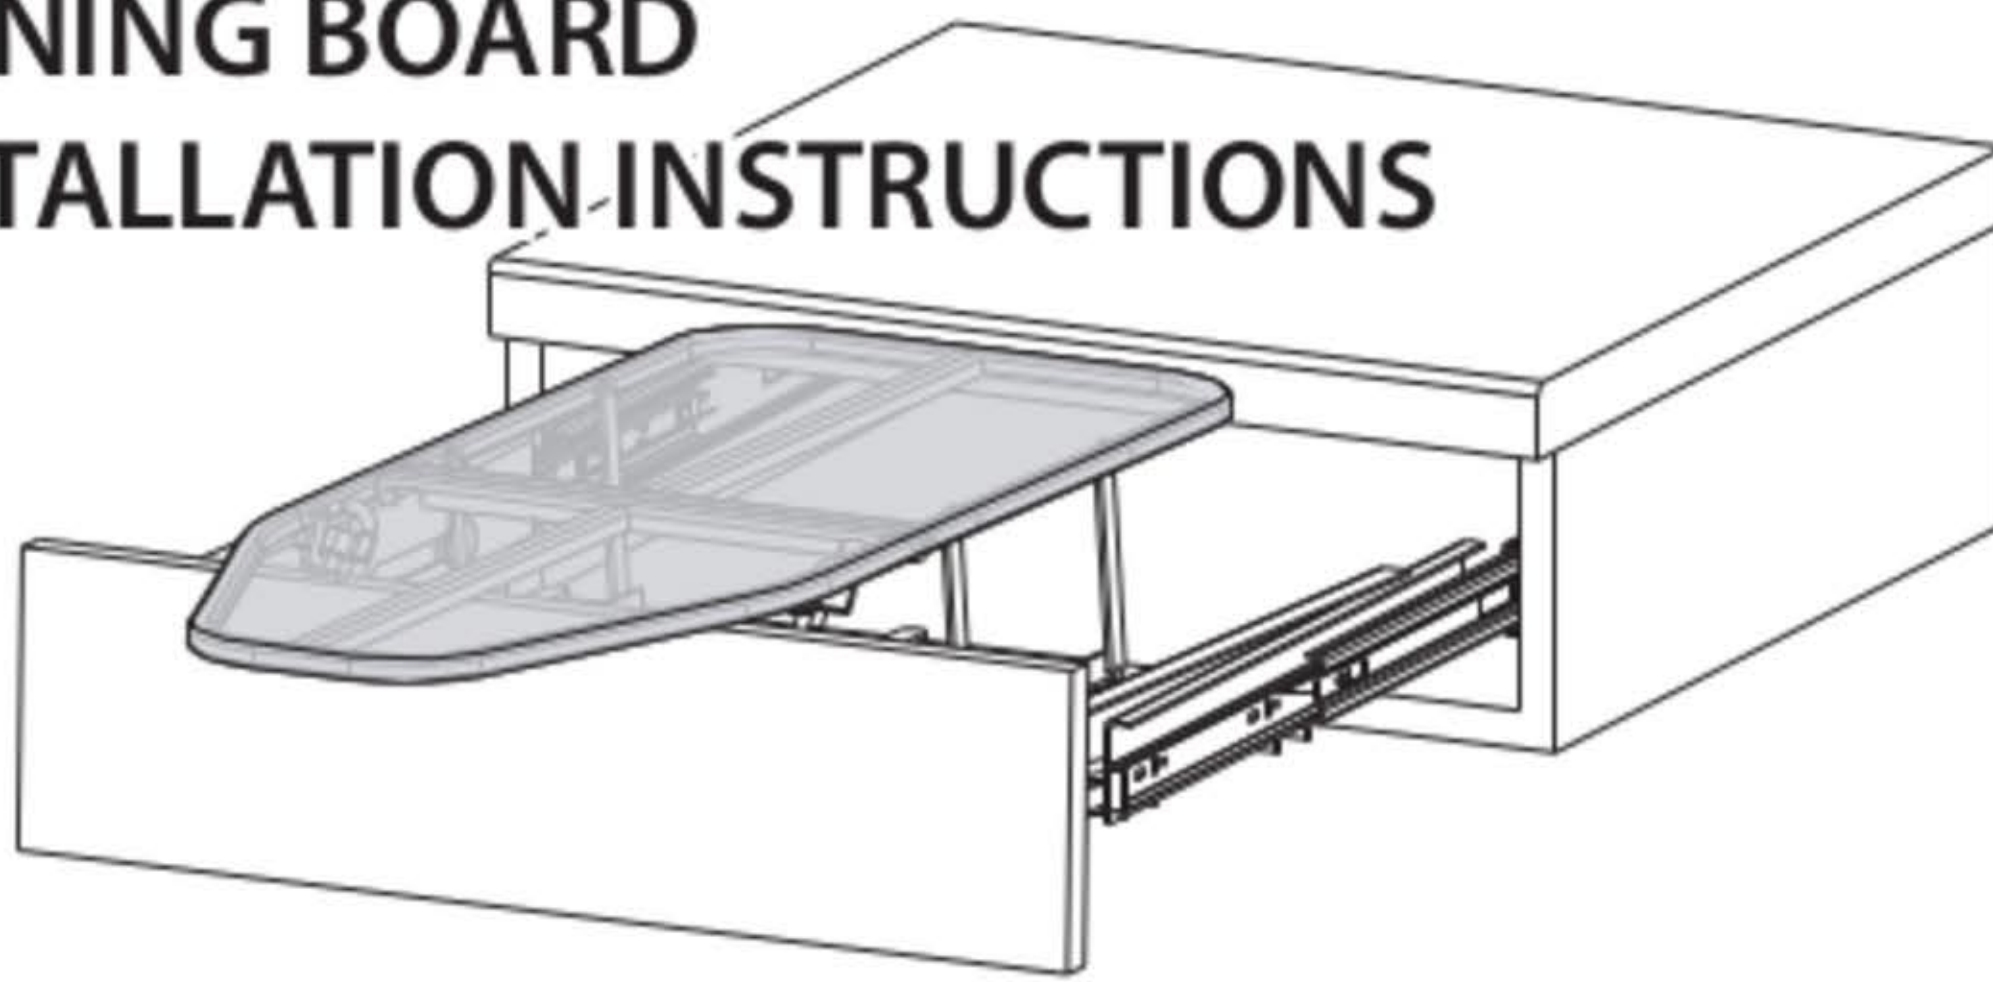


Tools Needed for Installation:
10mm Open/Boxed end wrench
Phillips Screwdriver
Tape Measure
Marking Pen
5mm Allen Wrench (Included)
Double Sided Tape (Included)
(18) #8x1/2" Flat Head Mounting Screws (Included)

The Ironing Board is designed to mount in closet and vanity cabinets with widths between 14-1/4" and 21", as well as depths of at least 16" for the IB-16-CR, and 20" for the IB-18-CR.

Step 1. Remove Ball Bearing slides from unit, by extending them fully, depressing the black release lever, and pulling apart from the remainder of the slide assembly.

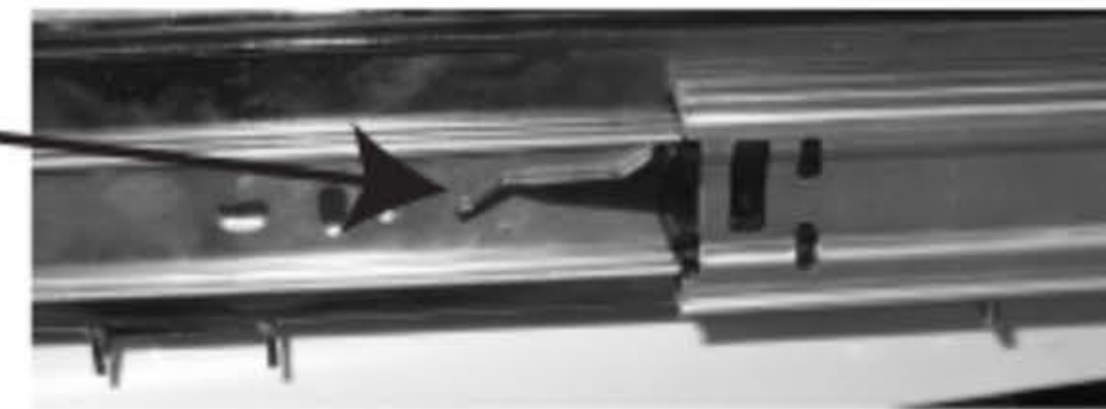

Step 2. For face frame cabinet installation create a pair of side spacers by cutting a piece of wood at least 2 1/2" tall, and as thick as the distance the face frame protrudes from the inside edge of the cabinet. Install it into the inside of the cabinet parallel with front opening. This is not necessary with frameless cabinet designs.

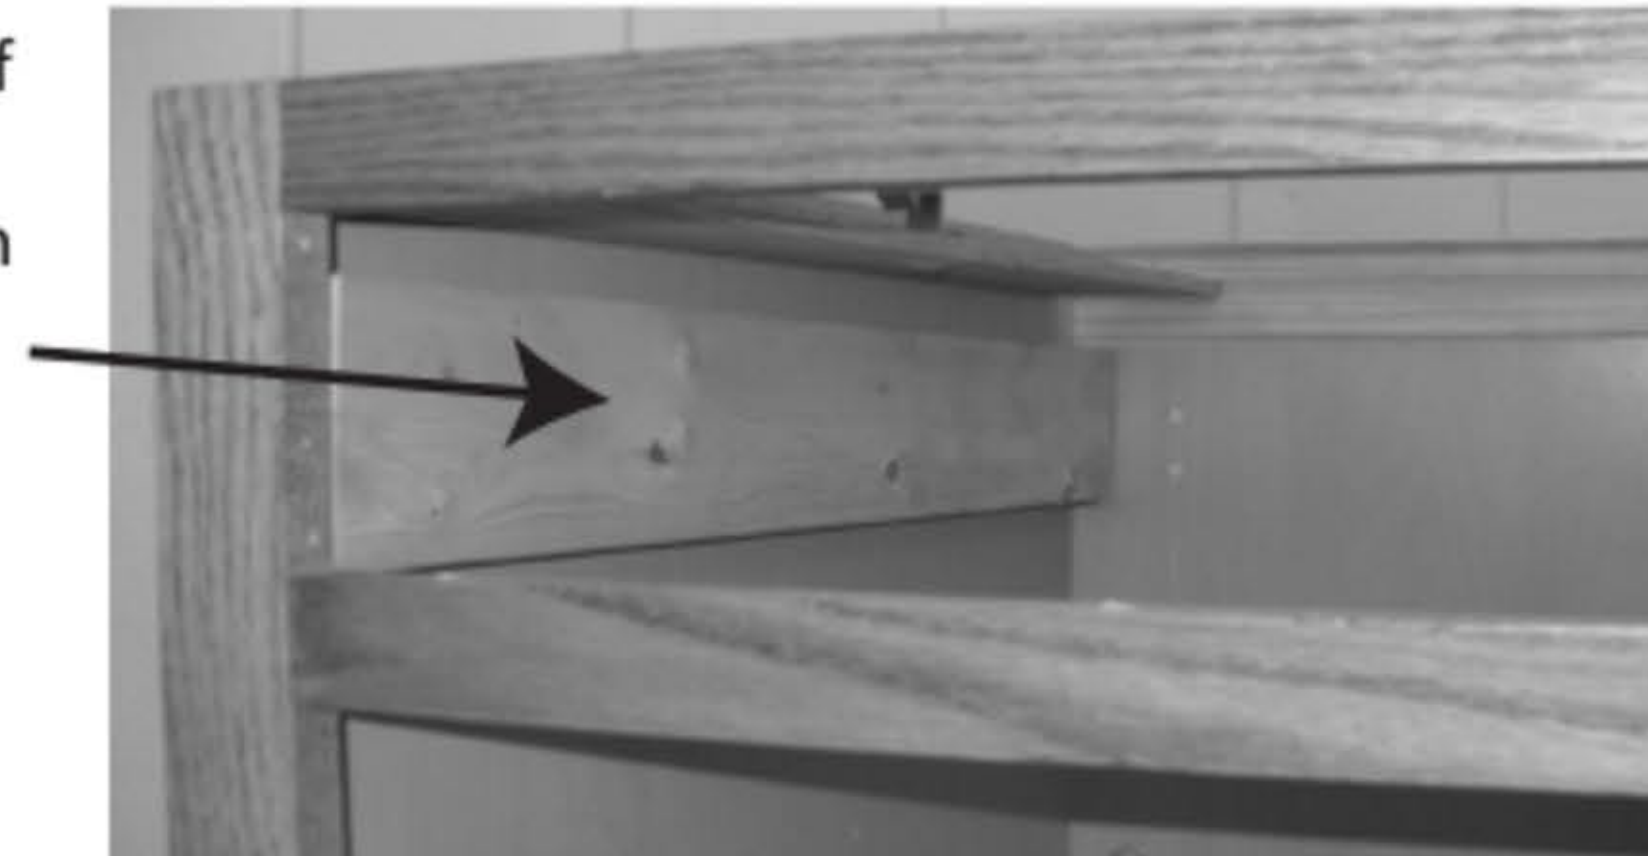

Step 3. Mark the location of the front mounting hole by measuring UP 1 3/4" from the LOWEST point of your opening and BACK 1/4" from the front of the opening. Once marked install slides to side of cabinet insuring they are level.



Step 4. Using the 5mm Allen wrench, and 10mm wrench, remove the board and front support from the friction slide units.

Step 5. Once the ironing board, and front support is removed. Re-assemble the slides as shown.

