


# 18" PIE-CUT TRAY TEMPLATE

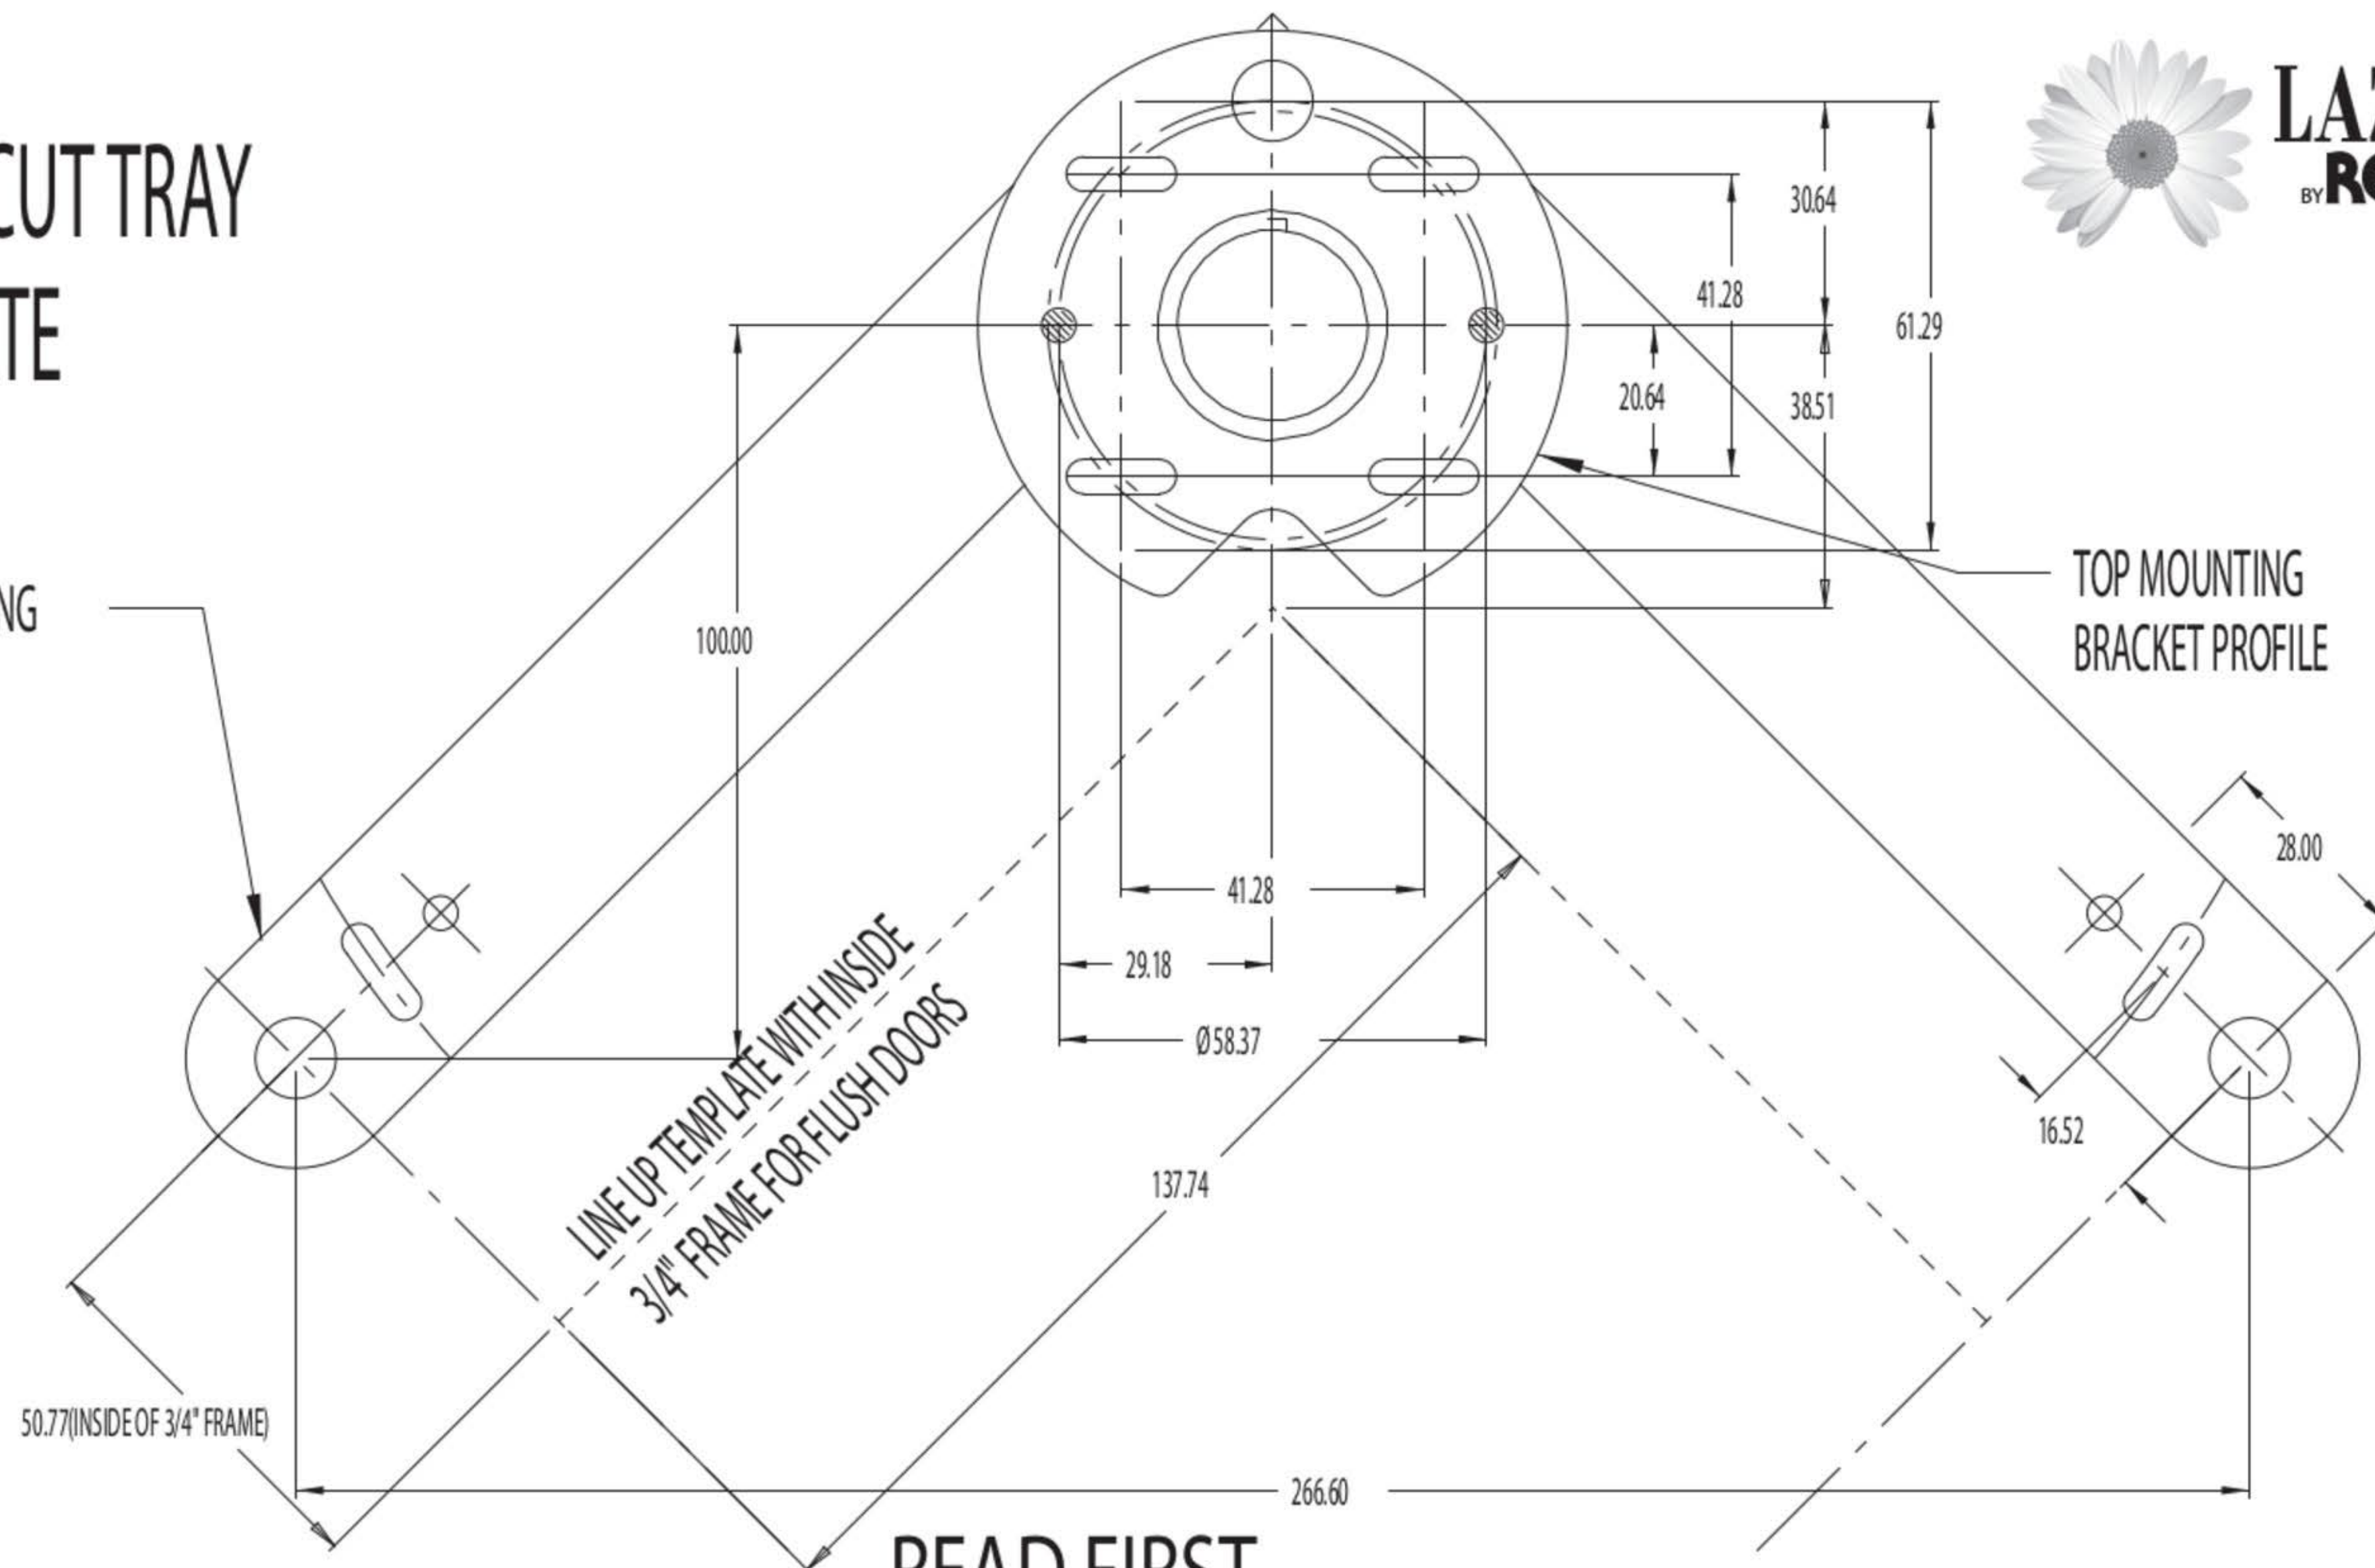

BOTTOM MOUNTING  
BRACKET PROFILE

TOP MOUNTING  
BRACKET PROFILE



LINE UP TEMPLATE WITH INSIDE  
3/4" FRAME FOR FLUSH DOORS

## READ FIRST

1. CHOOSE DESIRED DOOR MOUNT (SUCH AS FLUSH OR LIP)
  2. CUT TEMPLATE ALONG DOTTED LINE.
  3. LINE UP AND TAPE DOWN/UP TEMPLATE, THEN DRILL PILOT HOLES RELATED TO TOP OR BOTTOM MOUNTING BRACKETS.
- \* TEMPLATE BASED ON 3/4" DOORS.