


ASSEMBLY INSTRUCTIONS FOR YOUR

Jonathan Adler

SPUTNIK FLUSH MOUNT/ SCONCE

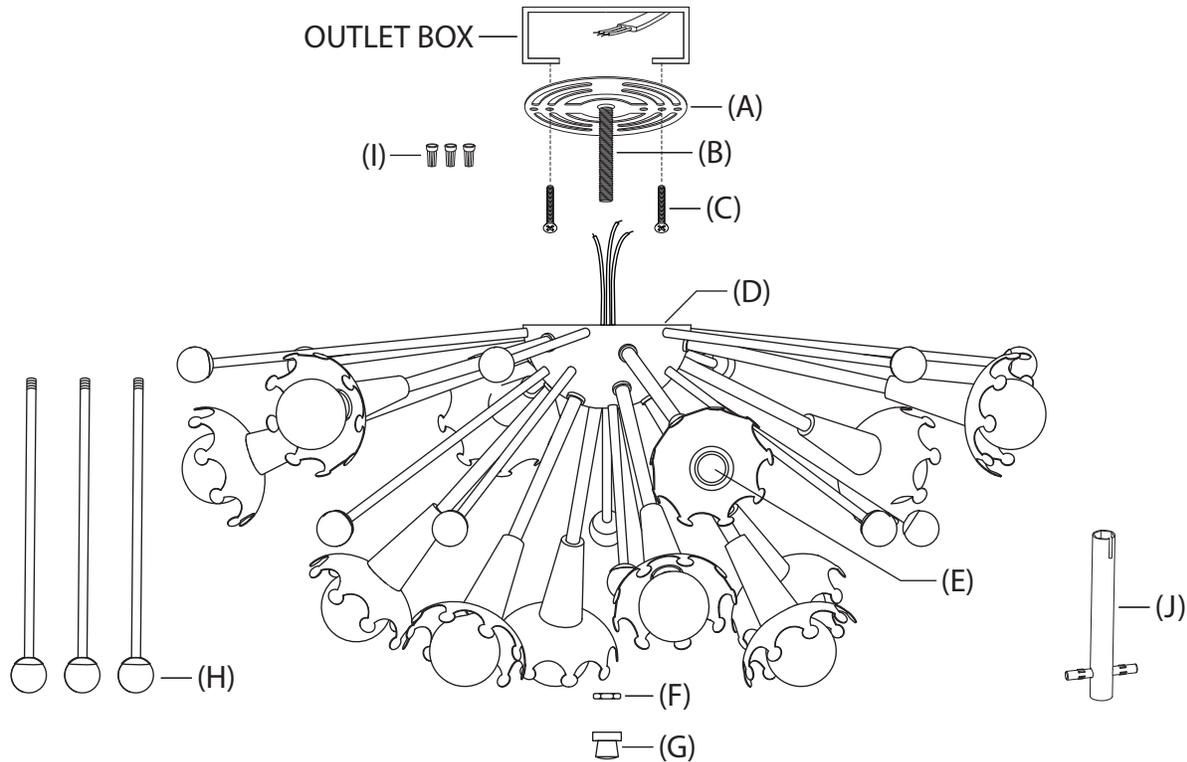

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety.
- * It is very important that they are read completely before beginning the installation of your fixture.
- * **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- * Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton and discard packing materials.
3. Place parts on a level surface. Remove mounting plate (A) from canopy (D) by unthreading nut (F) and finial (G). Set nut and finial aside.
4. Carefully pull wires from the outlet box and thread them through mounting plate (A).
5. Affix mounting plate (A) to outlet box with mounting screws (C) provided.
6. Lift the fixture to the mounting plate and make the proper electrical connections noted in steps 7 through 9.
A LICENSED ELECTRICIAN IS RECOMMENDED.
7. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
8. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
9. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
10. Gently push wires back into the outlet box.
11. Place canopy (D) over mounting plate (A). Threaded tube (B) will protrude through the center of canopy (D).
12. Make sure canopy (D) sits flush to mounting surface. Thread nut (F) onto the exposed portion of tube (B) to secure the fixture to the mounting surface. Use wrench (J) to tighten nut (F). Thread finial (G) over nut (F). Carefully thread arms (H) into holes in canopy (D).
13. Install (12) 40W MAX. G16.5 candelabra base bulbs into sockets (E).
14. Reconnect main electrical supply at the fuse box/ circuit breaker and test the fixture.

** To clean, use soft cloth only. Do not use any chemical or abrasive cleaners. **