


ASSEMBLY INSTRUCTIONS FOR YOUR VALERIE FLOOR LAMP

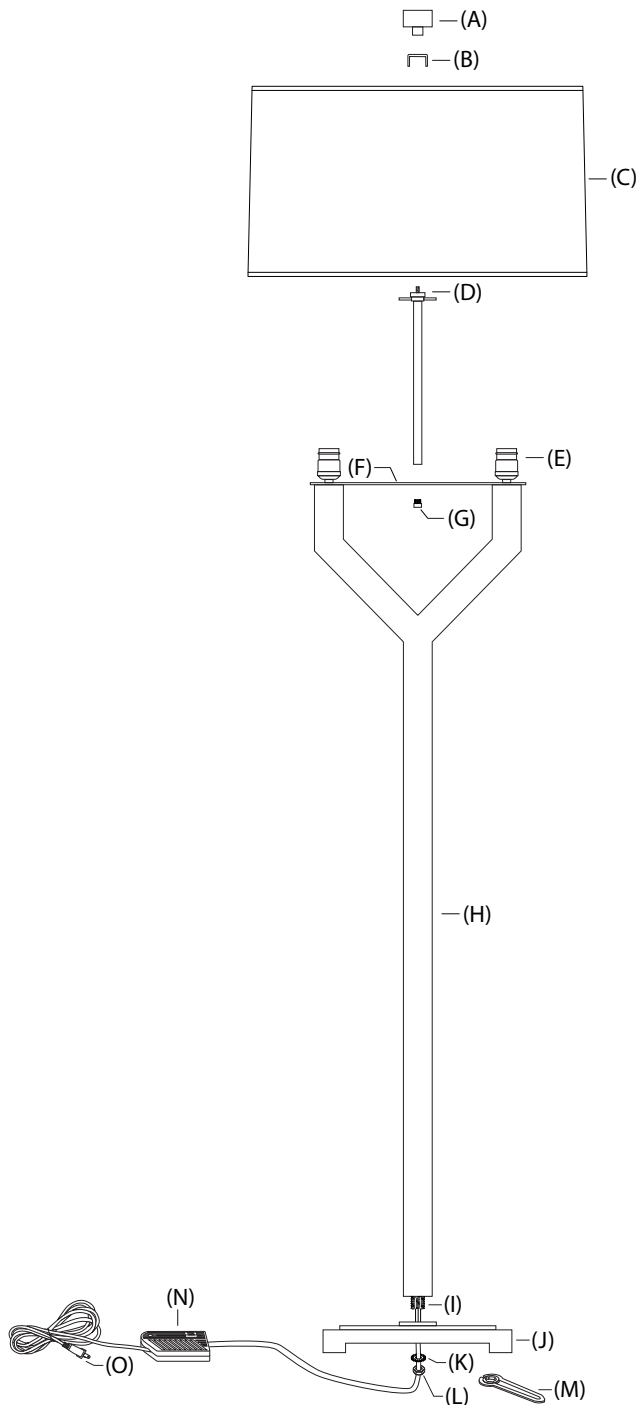

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptacle.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.
- * This lamp is UL rated for dry locations.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials. Place lamp base on a level surface.
2. Align column (H) with base (J). Place threaded tube (I) through hole in the center of base (J). Pull cord taut from below base (J) to prevent damage to the wire.
3. Hold column (H) and base (J) together and carefully turn the lamp onto its side. Slide washer (K) onto threaded tube (I). Thread nut (L) onto tube (I) and tighten with wrench (M).
4. Carefully turn lamp into upright position.
5. Insert screw (G) through the bottom side of the opening in bracket (F). Thread shade riser (D) onto shade riser nut (G).
6. Remove finial (A) and shade lock (B) from shade riser (D).
7. Place shade (C) onto shade riser (D). Slide shade lock onto shade riser and shade. Thread finial (A) back onto shade riser to secure shade lock and shade.
8. Install two 100W max., type A, medium base bulbs into the sockets (E).
9. Remove protective plastic from plug (O).
10. Insert plug (O) into wall outlet. Control power to lamp by using full range dimmer (N).

****To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.****