
ROSETO

W5.5" H15" E6" L1

Installation instructions:

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Insert screws (P2) in side of top unit the mounting bracket.
- 6.Put the canopy (P3) on the mounting bracket(P1) and use the screw(P4) to screw tighten.
- 7.Install E12 light source, no include bulb.
- 8.Install the shade (P14) to the bulb.

The end!

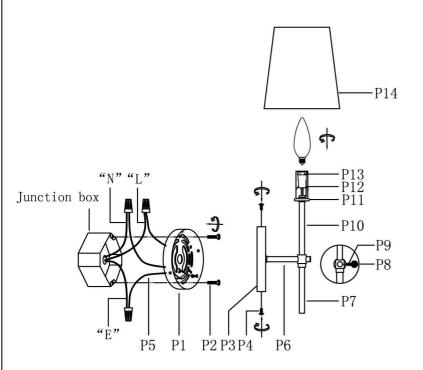

PARTS LIST

| part | picture | Description | Qty | Check | list |
|------|-------------|--|-----|-------|------|
| P1 | (b) | D4.3" Mounting bracket | 1. | | |
| P2 | <u> </u> | 5/32-32 Screw | 2 | | |
| Р3 | | D4.75" Canopy plat | 1 | | |
| P4 | > | Screw | 3 | | |
| P5 | ~ | Power Cord L2' 1332 18AWG Black&White | 1 | | |
| P6 | 4 8 | L3.66" Arm | 1 | | |
| P7 | — 0 | L3.66" Decorative tube | 1. | | |
| P8 | 0 | Cap nut | 1 | | |
| Р9 | | Screw | 1 | | |
| P10 | d | L4. 5" Rod | 1 | | |
| P11 | | Check ring | 1 | | |
| P12 | | D0.87"*L2.1" Candle cover | 1 | | |
| P13 | 口 | E12 Socket | 1 | | |
| P14 | M | D5.5"*H6" Lamp shade | 1. | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

"L" = Hot wire
"N" = Neutral wire

"E" = Ground wire