





TRILLIANE 5852- \_\_ \_\_ A

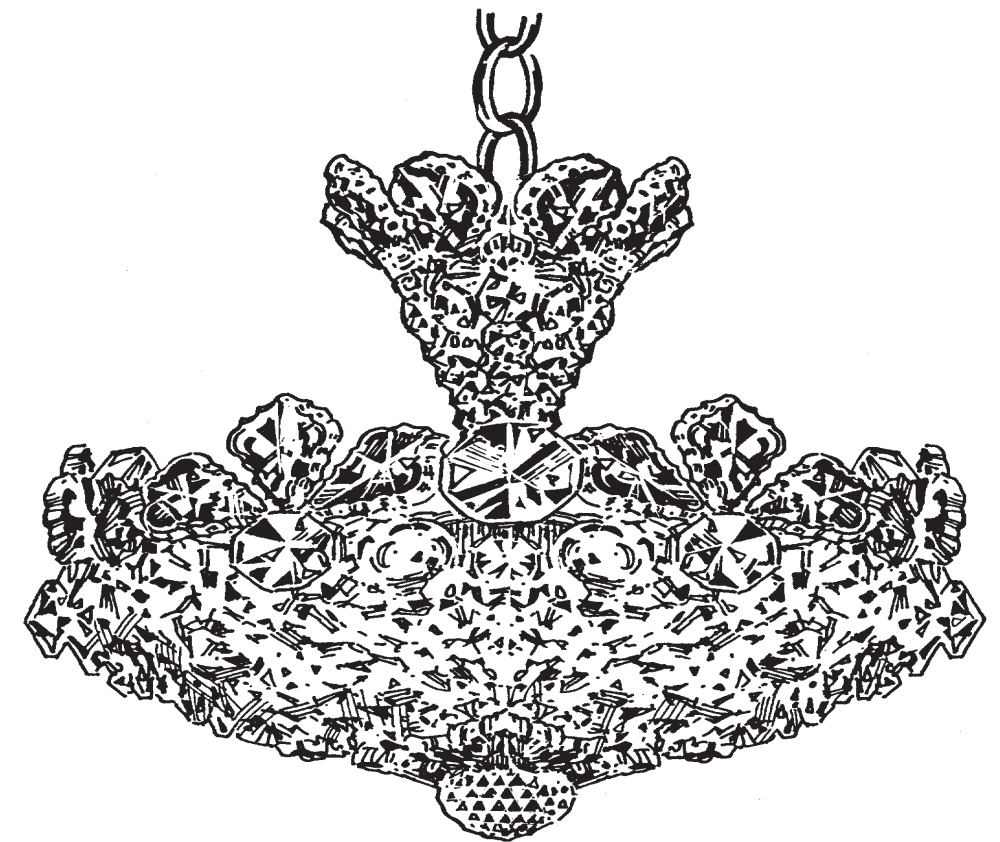


**T**HIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
SWAROVSKI LIGHTING, LTD.

4 Lights  
Diameter: 11"  
Body Length: 10-1/2"  
Hanging Weight: 8lbs.

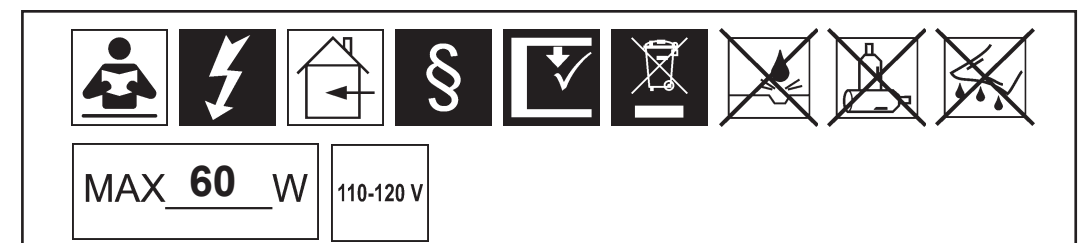


SCHONBEK® is a member of the Swarovski group.


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

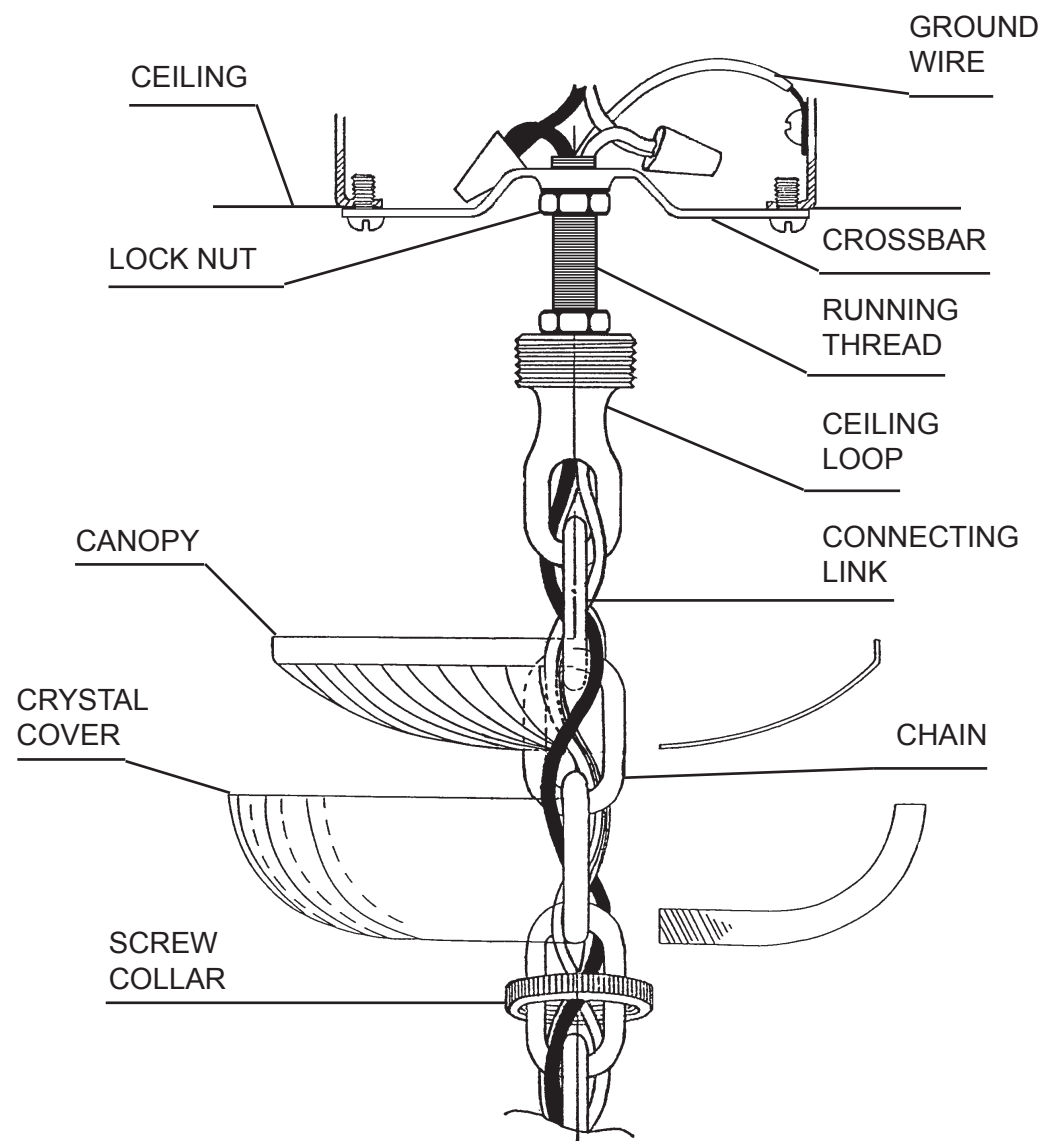

- 1 MAKE SURE POWER IS DISCONNECTED!!**
- 2** Attach crossbar to outlet box.
- 3** Slip screw collar, crystal cover and metal canopy over chain and then determine at what length the fixture is to be suspended. Join the required length of fixture chain to connecting link on stem of fixture and loop attached to ceiling canopy at other end.
- 4** Feed stem wires through chain, through loop at canopy end, and attach to power wires in outlet box. Fixture **MUST** be grounded.
- 5** Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.
- 6** Attach canopy to ceiling with screw collar, thereby retaining complete assembly against ceiling. Screw bulbs into all sockets. Test power to insure proper wiring before hanging trim from fixture.

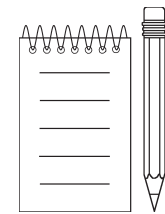

## Installation of Crystal "J" and "K"

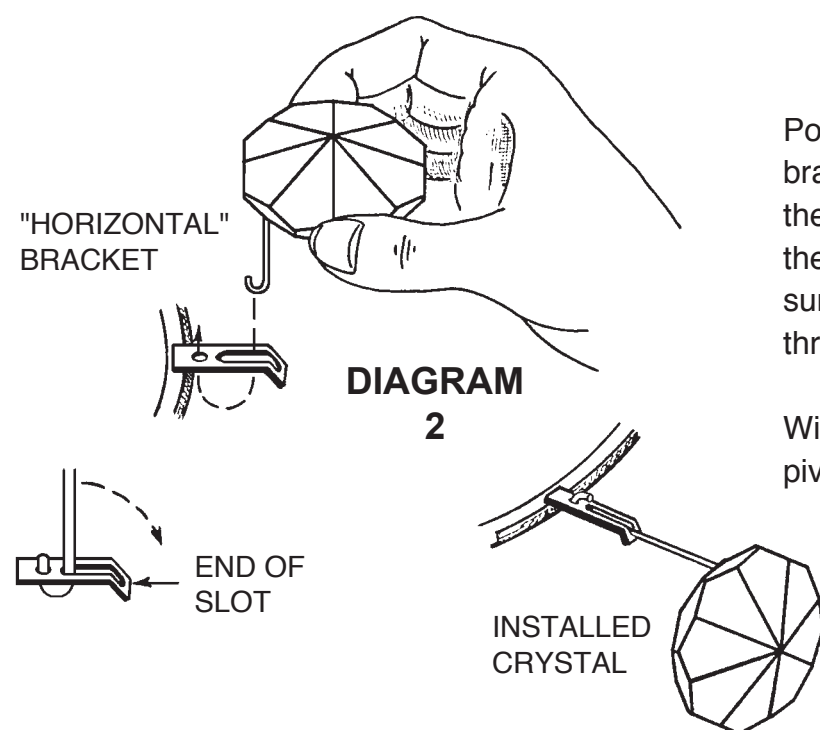


Position the crystal above the "horizontal" bracket so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the hole, in line with the slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the outer slot.









## Installation of Crystal "B"

Pendaloques are installed in much the same manner. Slide the end of the hook through the slot of the bracket and up through the hole. Pivot the Pendaloque until the hook rests in the end of the slot.

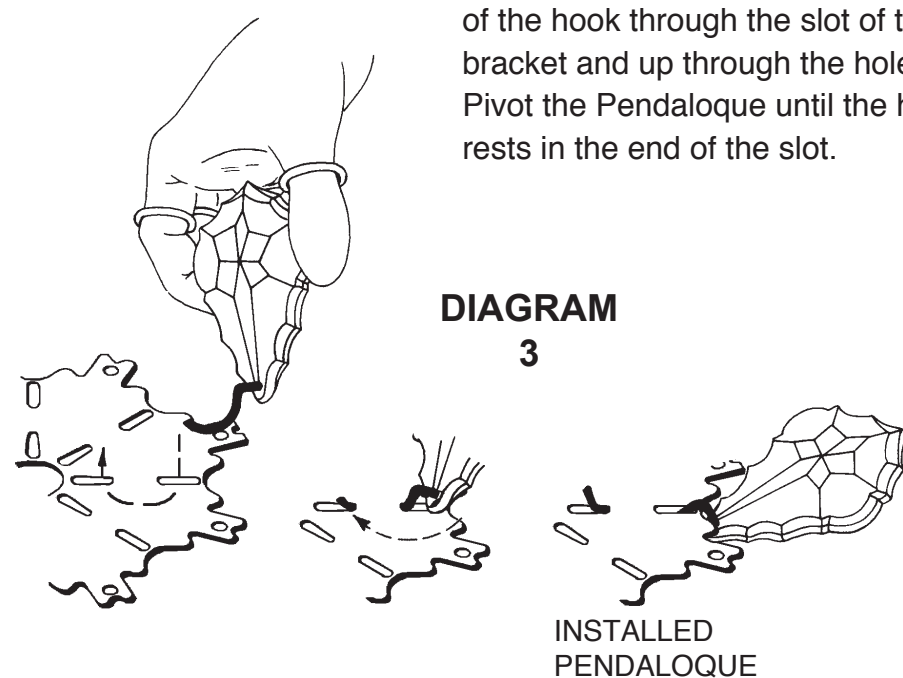


**Cleaning Instructions:**  
Chains "A":  
DO NOT REMOVE! The lower washer moves freely, allowing enough slack to clean the crystals.

Pendaloques "B":  
To remove, it is necessary to gently lift the outer end of the pendaloque up while pressing down on the end of the hook.

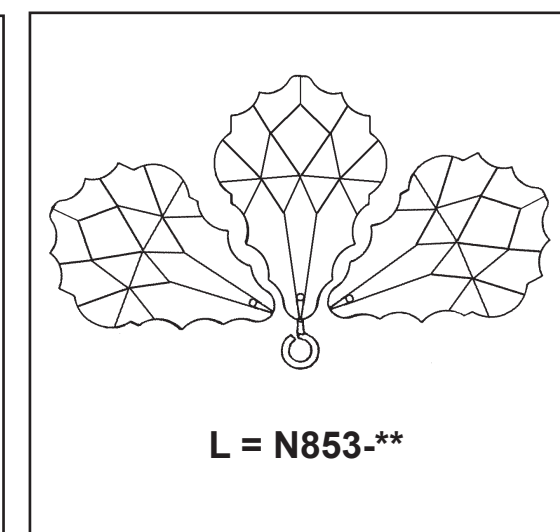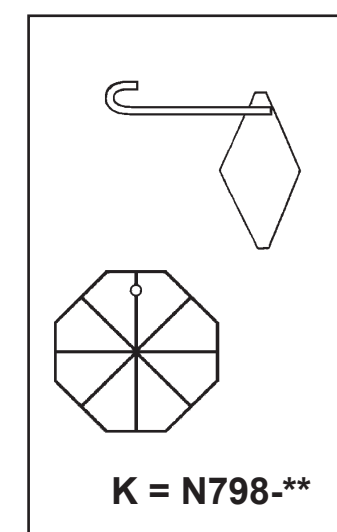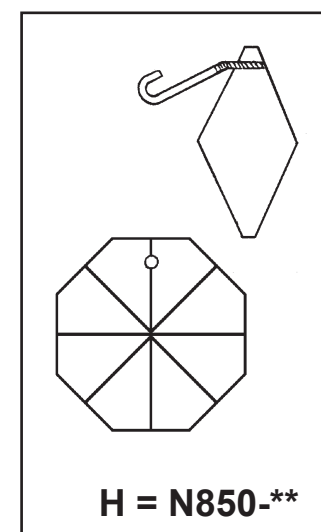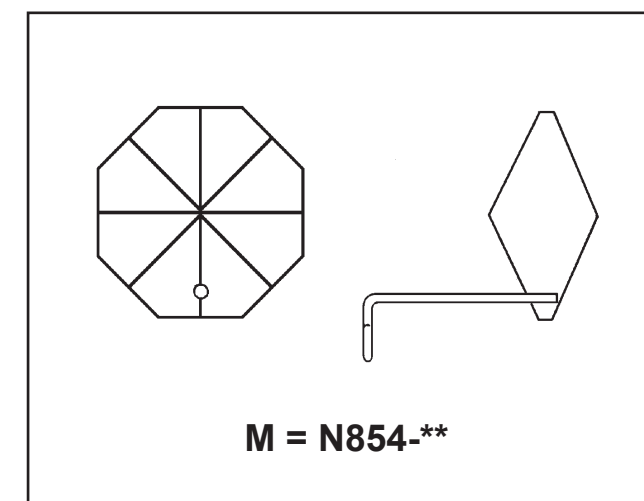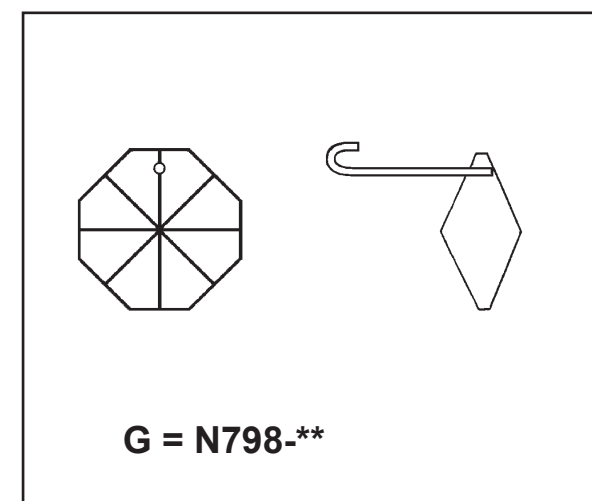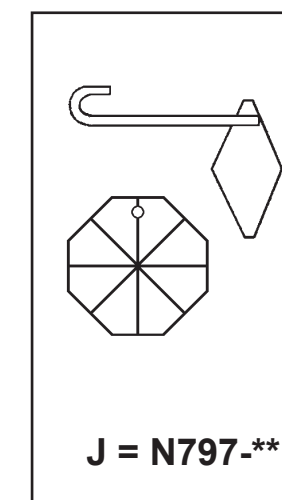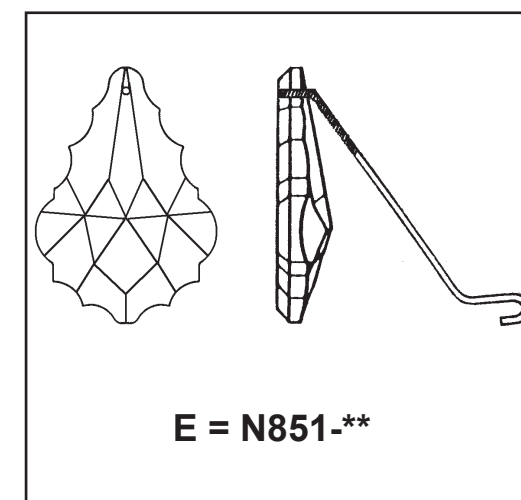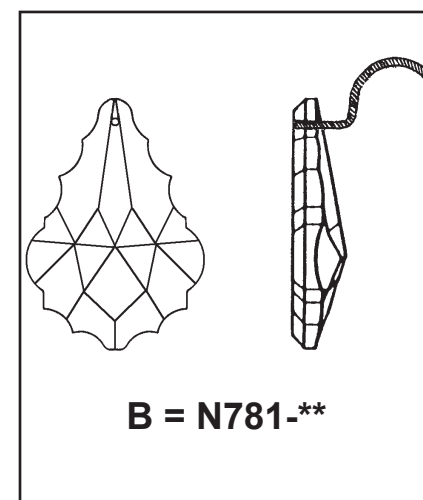

7

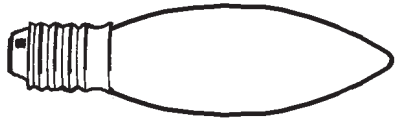

You will need 4 - B10  
25 Watts Recommended  
60 Watts Max


**Install bulbs and be sure to  
test fixture BEFORE trimming.**



**8** Carefully remove packing material protecting Chains "A".

**9** Hook Crystal "B" into the every bracket of the crown at the top.  
See diagram 3 on page 6.

**10** Screw Ball "N" onto the bottom of the  
frame. Tighten set screw with supplied tool  
to lock ball into position.

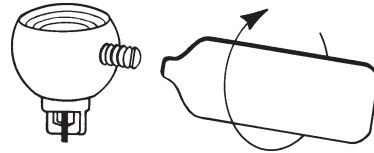

**11** Hook Pendalques "E" into the holes from the inside of brackets  
located under the body.  
Hook Drops "F" into the holes of Ring 1. Hook Drops "F" into the holes  
of Ring 3.  
Hook Jewels "G" into the holes from the inside of Ring 2.  
NOTE: Jewels "G" are identical to Jewels "K".  
Hook Jewels "H" into the holes from the inside of Ring 4.

**12** Hook Jewels "J" into Ring 5 brackets located directly above  
Jewels "H". See Diagram 2 on page 6 for detailed instructions.  
Hook Jewels "K" into the remaining Ring 5 brackets. Jewels "K" will  
be between Jewels "H" and Jewels "J". See Diagram 2 on page 6 for  
detailed instructions.

**13** Remove the knurled knobs attached to screws on the inside of  
the outer ring 5.  
Install Fan Ornaments "L" to every second screw of Ring 5. Slide the  
loop of the hook over the screw and secure in place, using the knurled  
knobs. See diagram 1.  
Slide the loops of the hook of Jewels "M" over the remaining screws of  
Ring 5 and secure in place, using the knurled knobs. See diagram 1.

