

Important: Label on back contains important information on your crystal. Please save in case you ever need to order matching crystal.

Trim Diagram Ac0203A Trendant Refrax "Pendant Ac0505A

SCHONBEK®




Swarovski Lighting, LTD., 61 Industrial Blvd., Plattsburgh NY 12901-1908
Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

©2015 SWAROVSKI LIGHTING, LTD.



Trim Diagram Refrax™ Pendant RE0505A

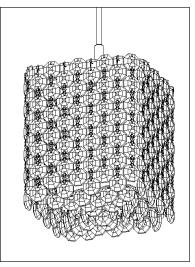


1 Light Length: 5", Width: 5", Height: 5"

This design is the proprietary trade dress/trademark of Swarovski Lighting, LTD.

Please save your trim diagram for future reference.


IMPORTANT: Label on back contains important information on your crystal. Please save in case you ever need to order matching crystal.

SCHONBEK® is a member of the Swarovski group.

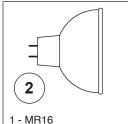


1 - MR16 (Wide Flood) 35 Watts Recommended (supplied - Schonbek # : MR16-FMW-G) 50 Watts Max.




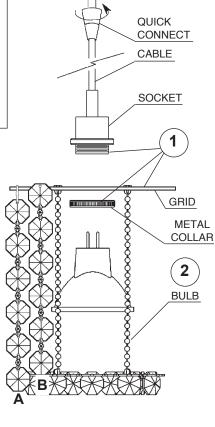


QUICK CONNECT

ADAPTER

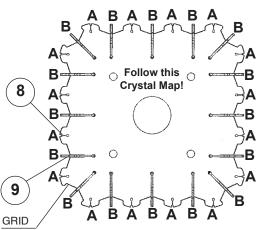

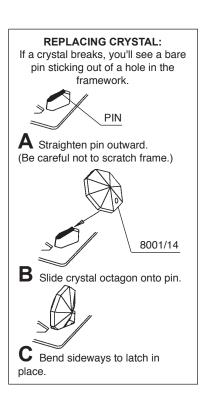

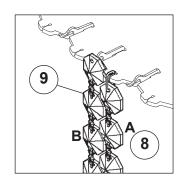


How to Install MR16 Bulb and Refrax[™] Pendant:

Pendants may be mounted to monorail systems, monopoints or line voltage track by coupling to the quick connect transformer adapter. Attached to the socket is a cable that may be cut on site during installation to any length (see instructions below).


1 Position the pendant grid against the socket and secure in place by screwing the metal collar onto the socket.

2 Plug bulb carefully but completely into socket. Use only an MR16 glass covered lamp bulb.


How to Shorten the Cable:

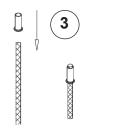


3 Cut the cable cleanly with wire cutter to desired length, and slide brass collar over wire. Position collar so that a small section (1/16") of braided wire protrudes from the top of the collar.

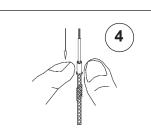

4 Grasping the collar, slide braided outer wire back to expose inner wire. Trim 1/8" of insulation from the inner wire with wire stripper.

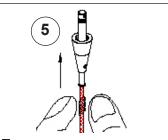

5 Feed inner wire into quick connect adapter until it reaches top set screw. Feed braided outer wire and brass collar into quick connect.

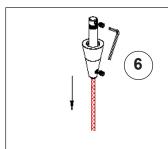

6 Tighten top set screw first, then lower set screw snugly. Smooth out any bulges in braided wire.

7 Screw quick connect into quick connect adapter until it seats. If you adjust the orientation of the pendant, be careful not to loosen the connection.

8 Hang A chains first, following the crystal map. Hook the connectors into the pinholes located towards the outside of the grid. See illustration to the left.

9 Hang B chains by sliding the octagon with an open hole onto the pin. Chains B will nest into position between A chains. See illustration to the left.