




TRILLIANE 5854- __ __ A




THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SWAROVSKI LIGHTING, LTD.

12 Lights
Diameter: 20-1/2"
Body Length: 15-1/2"
Hanging Weight: 26lbs.

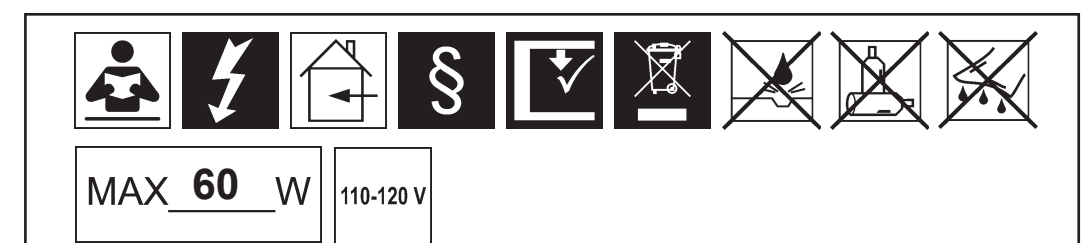


SCHONBEK® is a member of the Swarovski group.

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

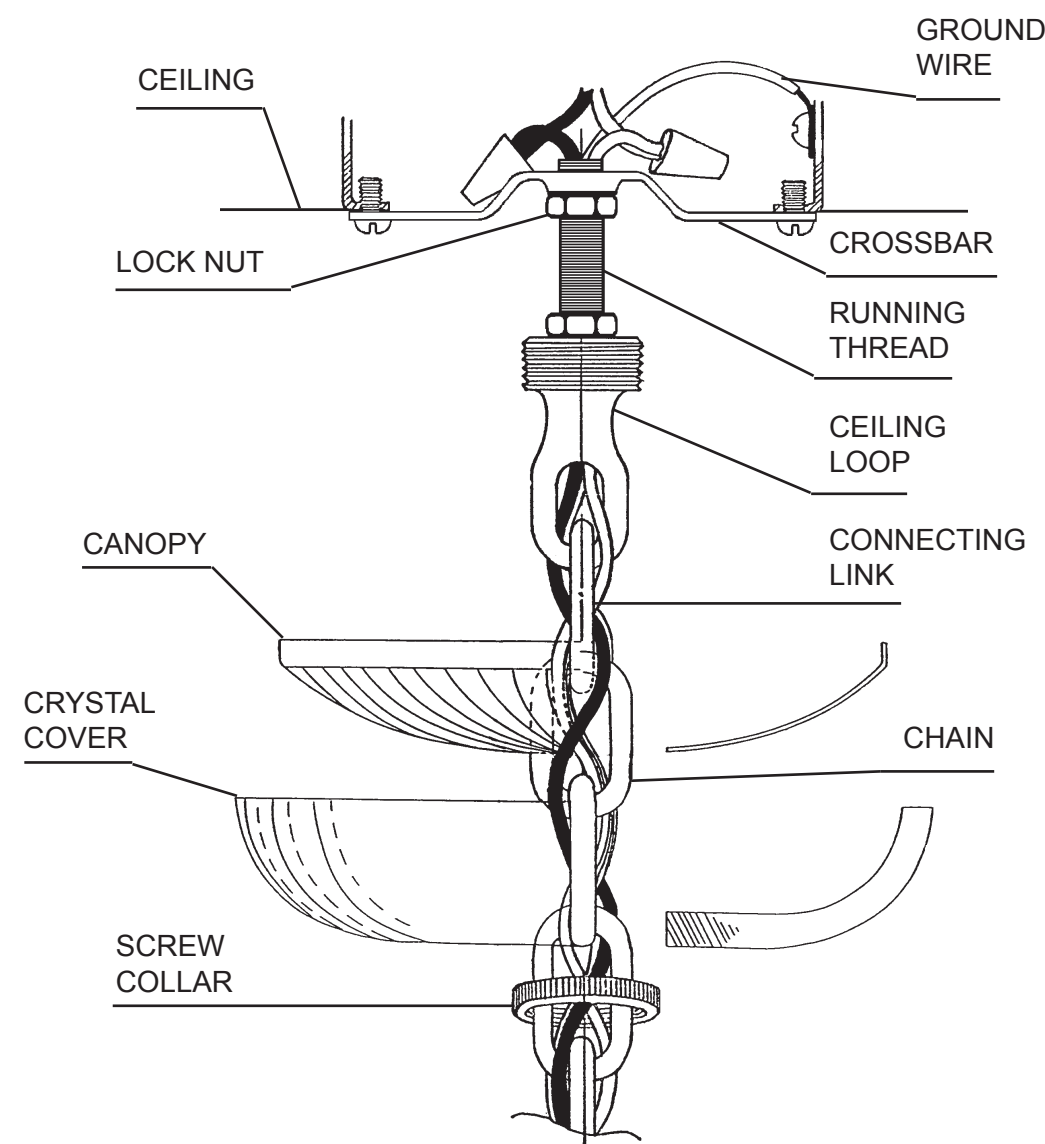

- 1 MAKE SURE POWER IS DISCONNECTED!!**
- 2** Attach crossbar to outlet box.
- 3** Slip screw collar, crystal cover and metal canopy over chain and then determine at what length the fixture is to be suspended. Join the required length of fixture chain to connecting link on stem of fixture and loop attached to ceiling canopy at other end.
- 4** Feed stem wires through chain, through loop at canopy end, and attach to power wires in outlet box. Fixture **MUST** be grounded.
- 5** Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.
- 6** Attach canopy to ceiling with screw collar, thereby retaining complete assembly against ceiling. Screw bulbs into all sockets. Test power to insure proper wiring before hanging trim from fixture.

DIAGRAM 8

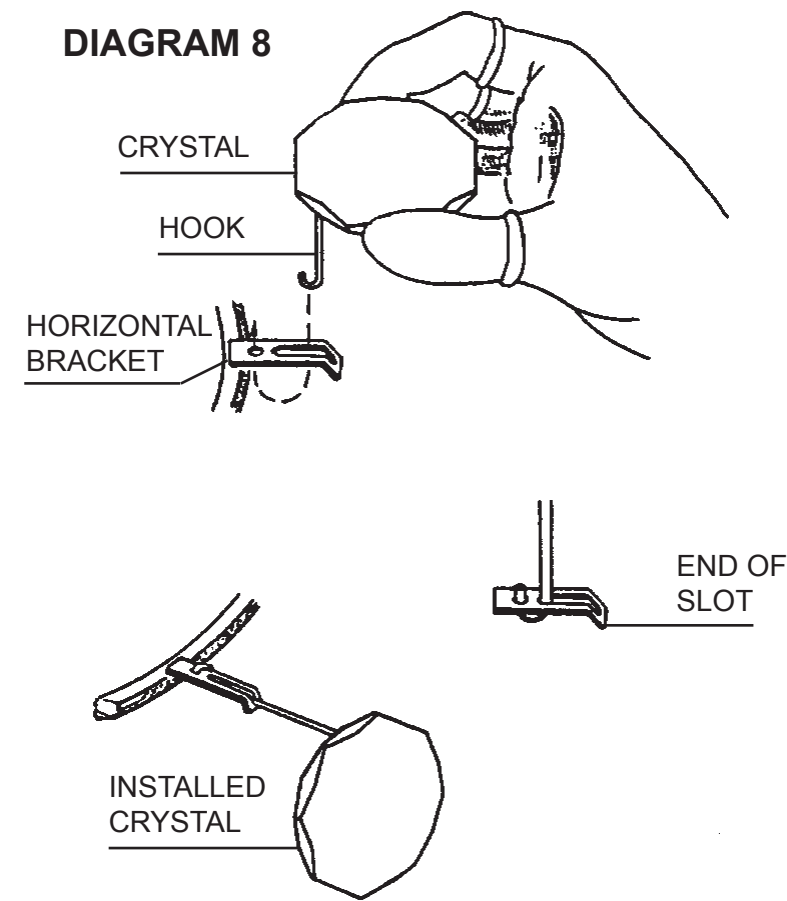

Installation of Crystal "K", "L" and "M"

Hold crystal by the sides between thumb and forefinger. Position the crystal above the bracket so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the hole, in line with the slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the slot.


Cleaning instructions for Crystal "A", "C", "D" & "N"

The crystals, with the exception of Chains "A" & "A1", should be removed before cleaning. Keep each similar crystal (each letter) together for ease of retrimming fixture.


Chains "A" & "A1" should not be removed to clean the crystals. The lower washer moves freely, allowing enough slack to clean the crystals.

Crystals "C" & "D" need to be gently removed. Do this by lifting the outer end of the crystal up while pressing down on the end of the hook.

Crystal "N" were shipped assembled, ready to be installed. One of the hooks may come loose during cleaning. Tighten the nut with wrench.
NOTE: Hold the wire in position and do NOT hold the crystal!
If any of the crystals should need replacing, the reference number **MUST** be used. The new crystal can be replaced in the same manner as tightening a loose crystal.

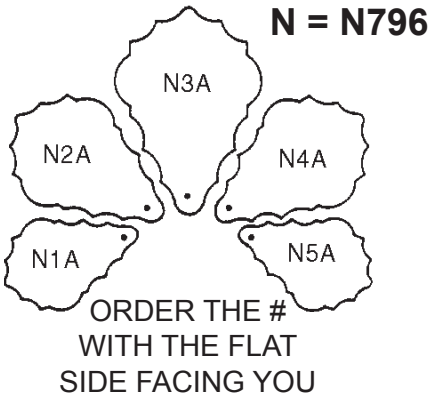

Installation of Crystal "B1"

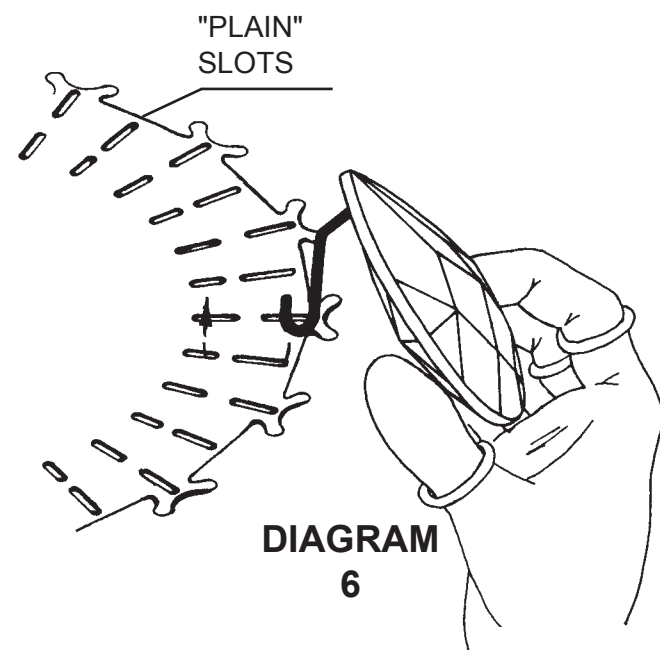


Position the crystal above the "plain" slots so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the inner slot, in line with the outer slot.

With the hook in the inside slot, as shown, pivot the crystal downwards so that the hook rests in the end of the outer slot.





DIAGRAM 7

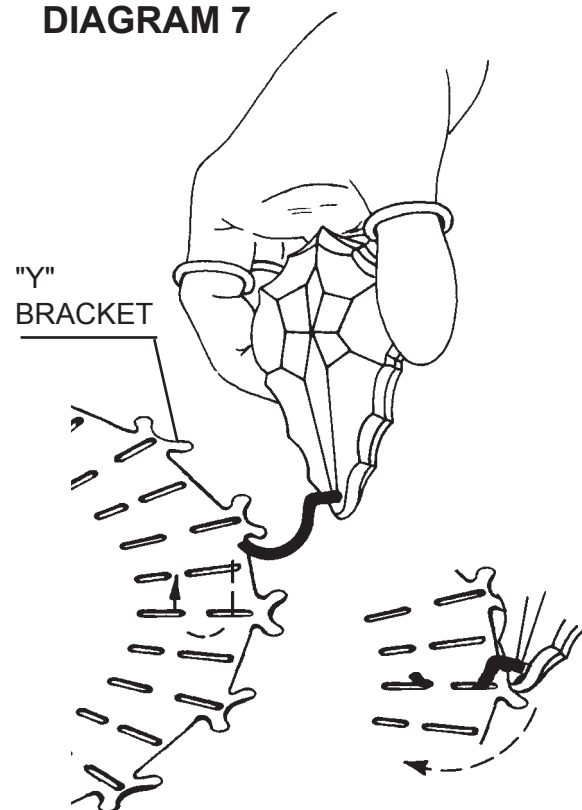


Installation of Crystal "C" and "D"

Position the crystal above the "Y" bracket so that the end of the hook enters the long slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the short slot, in line with the slot.


With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the long slot.

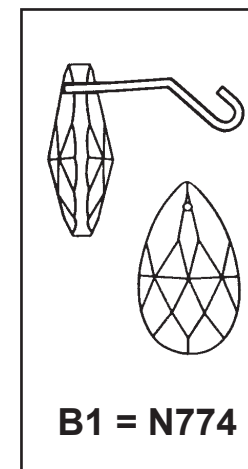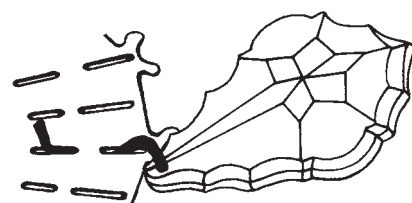


B1 = N774

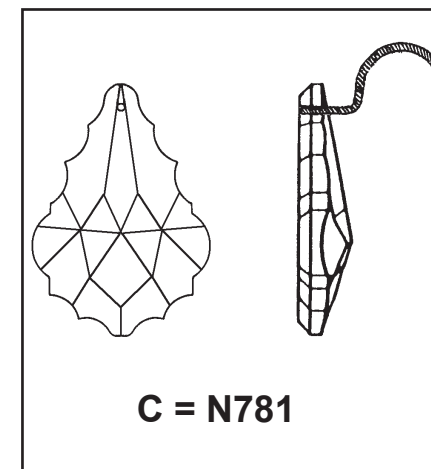


C = N781

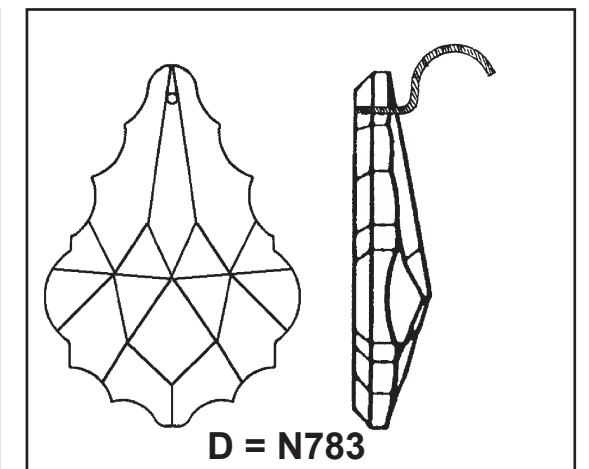


D = N783

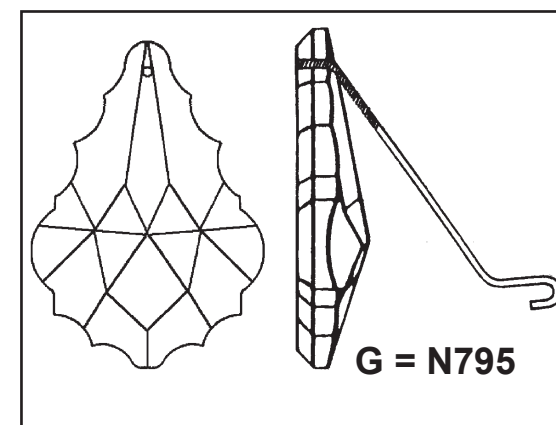


G = N795

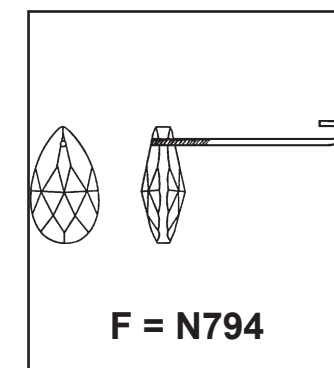


F = N794

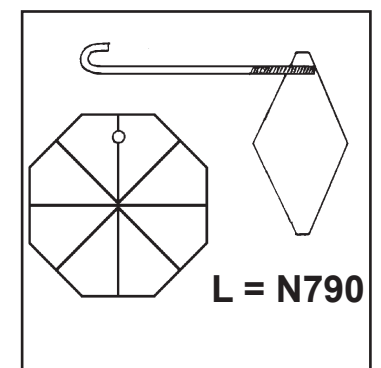


L = N790

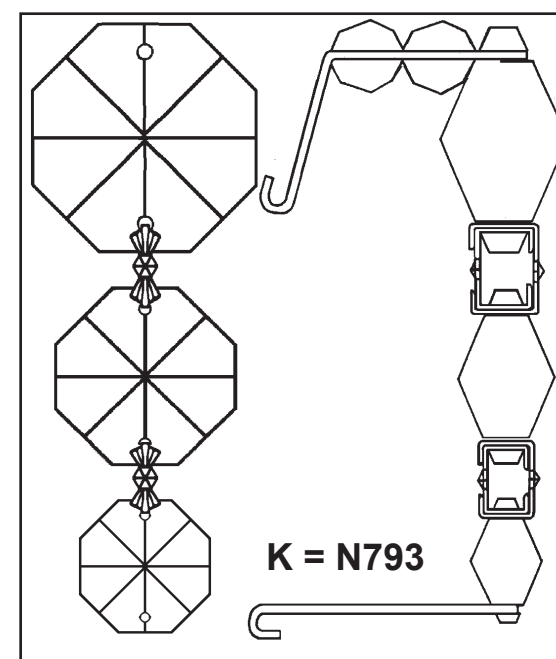

K = N793

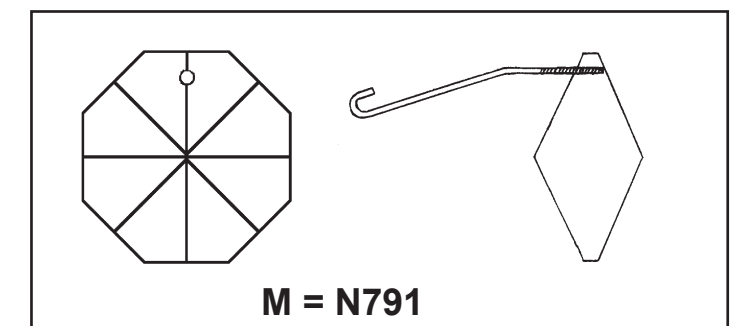

M = N791

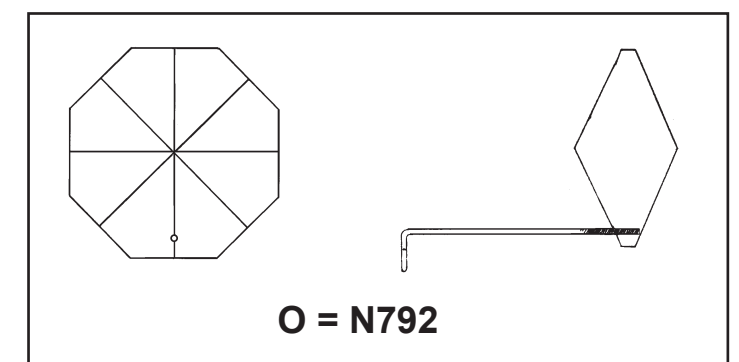

O = N792

