


Instructions for electrician STEPS 2 - 18




WARNING:

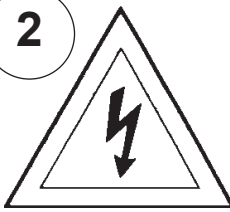

Electrical Danger

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

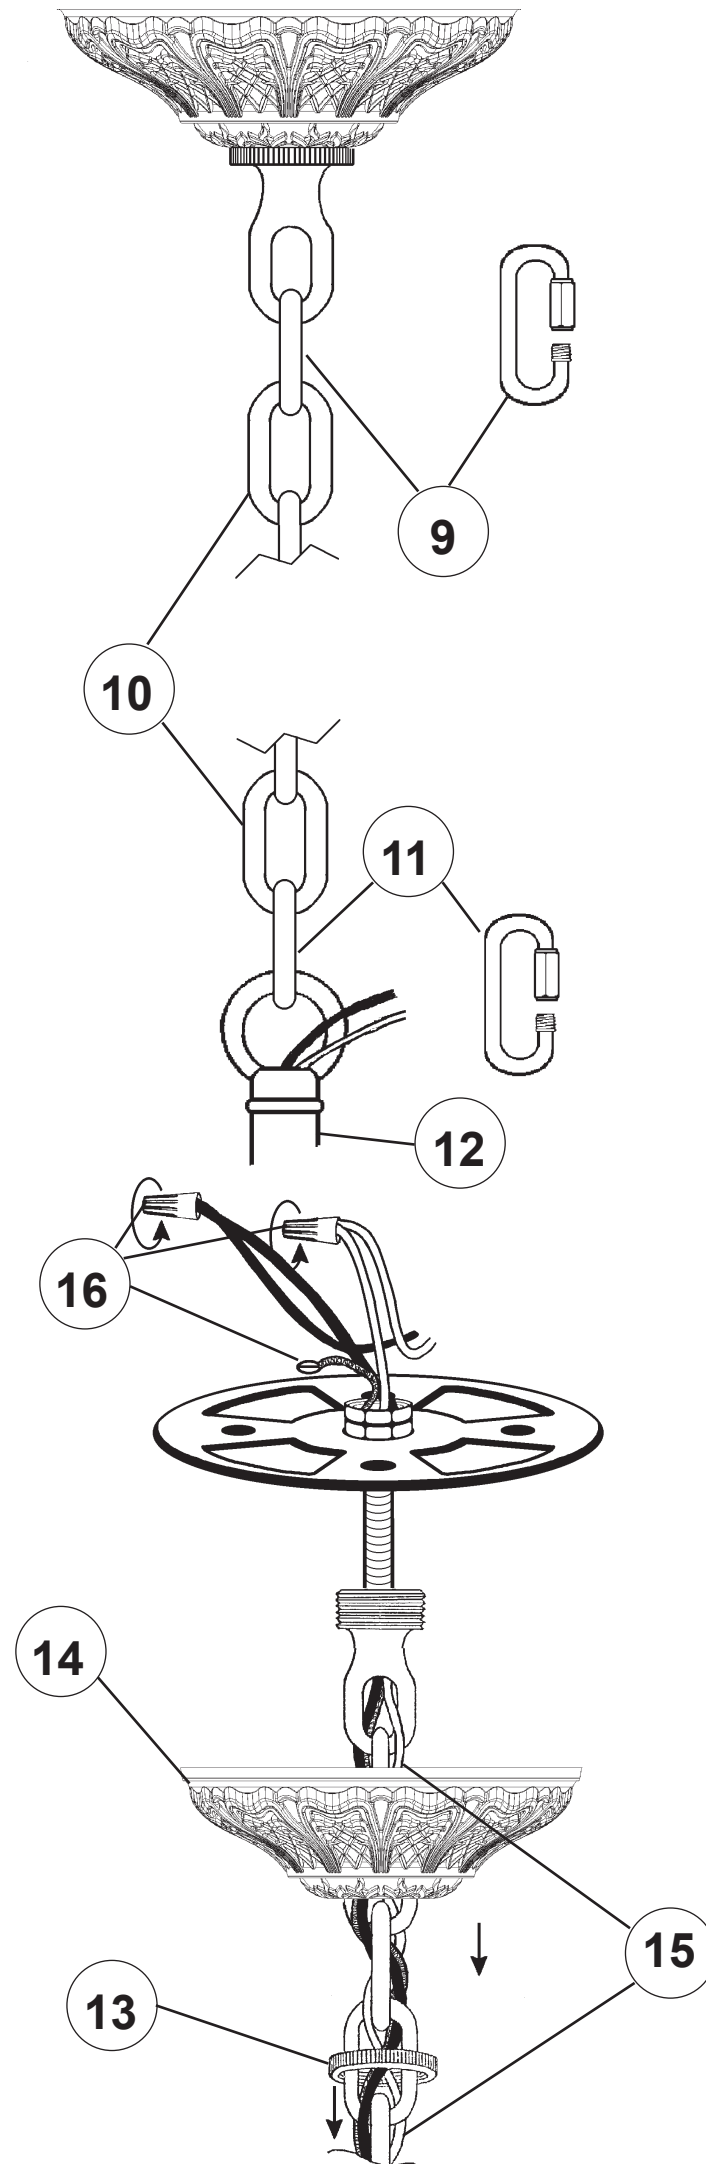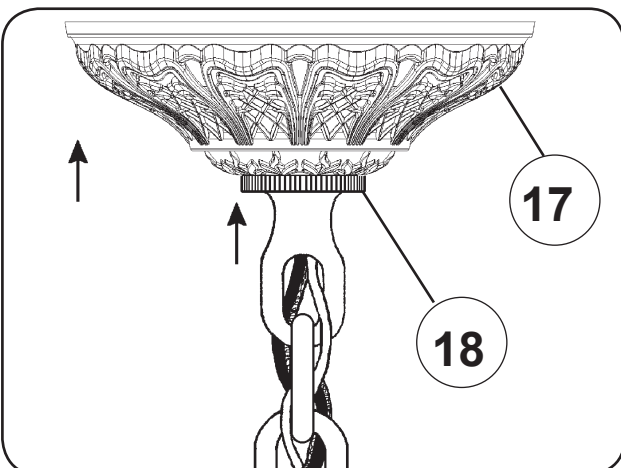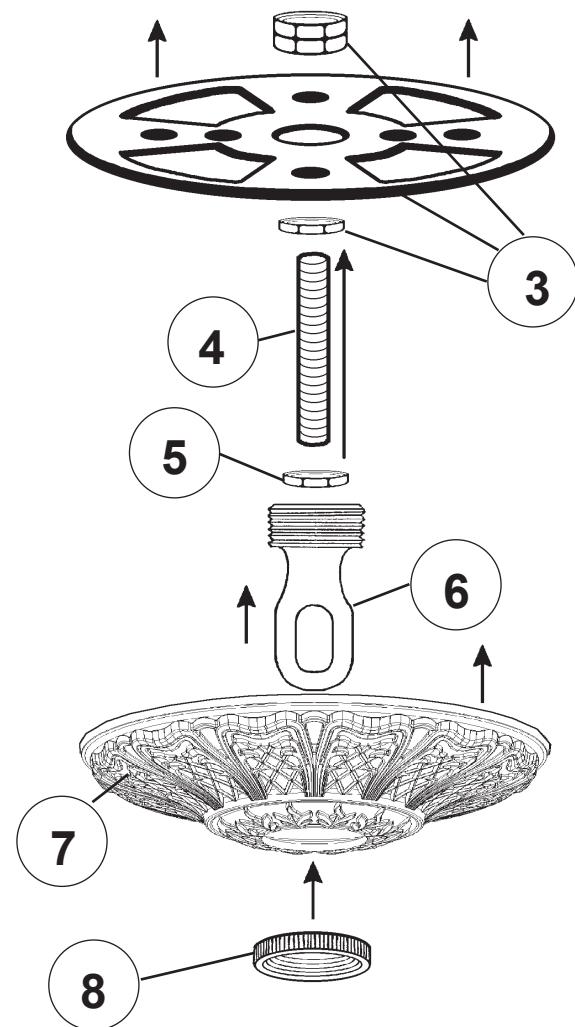

CHANDELIER 6962-

(Finish Option)

(Trim Option)

TRIM DIAGRAM



THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SWAROVSKI LIGHTING, LTD.

16 + 8 Lights
Diameter: 50"
Body Length: 47-1/2"
Hanging Weight: 135 lbs.

SCHONBEK®


See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

1

IMPORTANT
Person who opens carton should record the
following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

Instructions for crystal trimming
STEPS 19 - 38

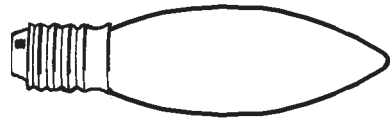

You will need 24 - B10
25 Watts Recommended
60 Watts Max

20


Install bulbs and be sure
to test fixture **BEFORE**
trimming.

19

Connect arm
wires to the center column
using plug-in connectors.
Screw in three screws
per arm. See detailed
illustration.

Install bulbs, connect power
and test the fixture before
trimming. If any of the bulbs
do NOT light - **DISCONNECT POWER**.
Double check the wire connections.

DIAGRAM 1

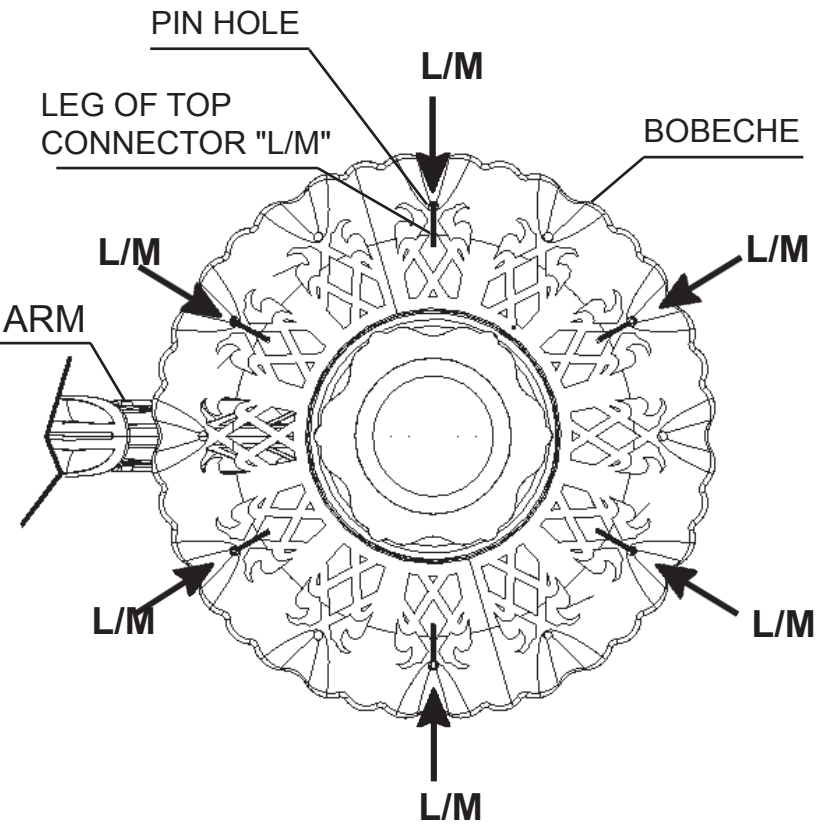

When trimming arm bobeche with letter "L/M", insert
leg of top connector into pin hole from under bobeche.
Hang in every other pin hole starting on either side of
the arm (refer to Diagram 1)

