

CORREIA SHOWER PANEL

INSTALLATION INSTRUCTIONS

SKU: 931424

BEFORE YOU BEGIN

Before installing, read entire shower system installation instructions. Observe all local building and safety codes.


Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-866-855-2284. If you need assistance or have questions while installing your shower, contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing or for personal injury during installation.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- Before you begin, the main water supply to your home should be shut off.

TOOLS AND MATERIALS:

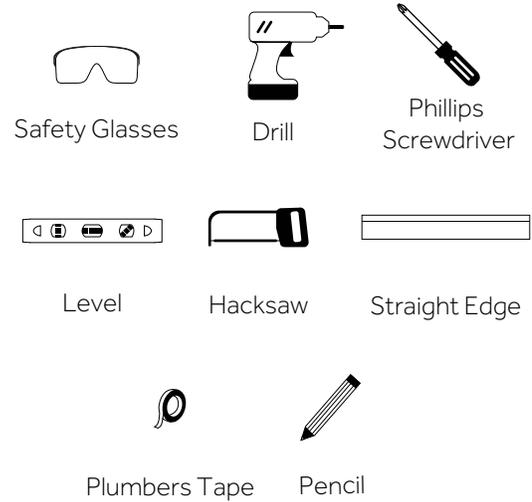

REVISED 02/07/2019


CORREIA SHOWER PANEL

INSTALLATION INSTRUCTIONS


SKU: 931424

INSTALLATION


1. Install hot and cold 1/2" female IPS water supplies in the wall with a 6" distance between them, approximately 41" from the floor.

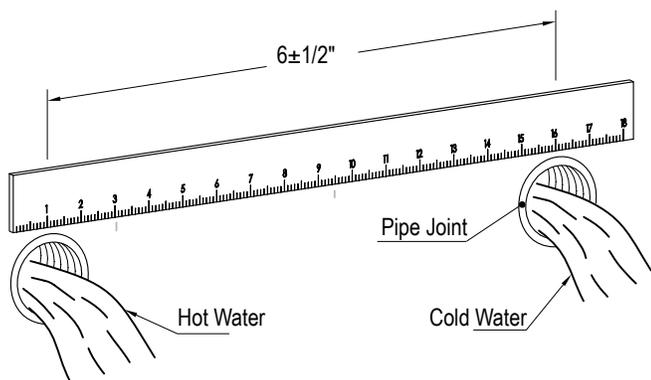


2. Remove the M4 screws, M6 screws, S-connector set and leveling plate from the valve body.

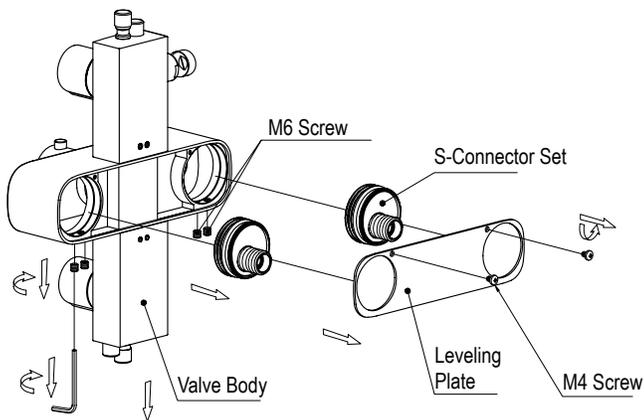

3. Measure the thread depth of the pipe joints with your ruler. Your fittings should be flush with the finished wall.

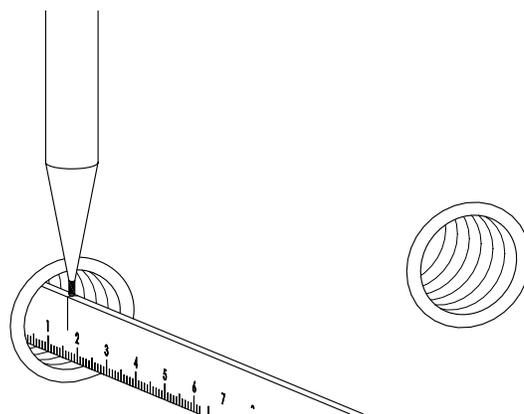

4. Wrap the S-connectors with plumber's tape.

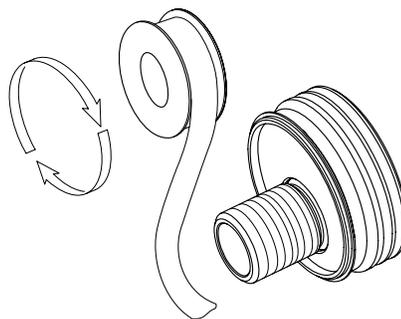


CORREIA SHOWER PANEL


INSTALLATION INSTRUCTIONS

SKU: 931424


5. Put the S-connectors through the leveling plate and screw into the pipe inlet. Tighten the screw with a 12mm hex wrench.

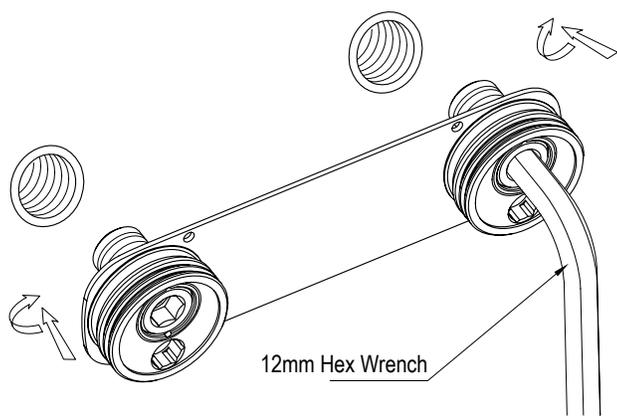


6. Using the leveling plate and a level, adjust the S-connector set as necessary for proper alignment

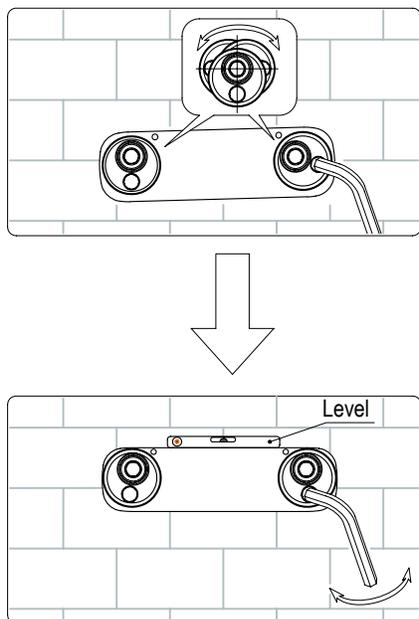

7. After adjustments have been made, tighten the screw joints with your 12 mm hex wrench.

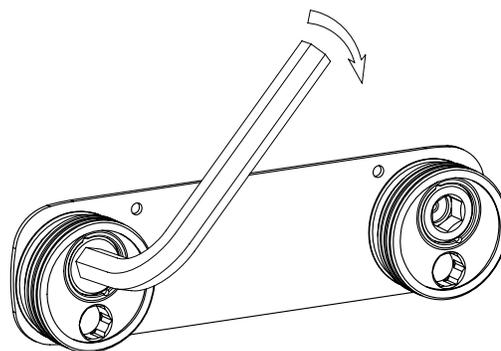

8. Take out the lower shower riser and remove the M5 set screws.

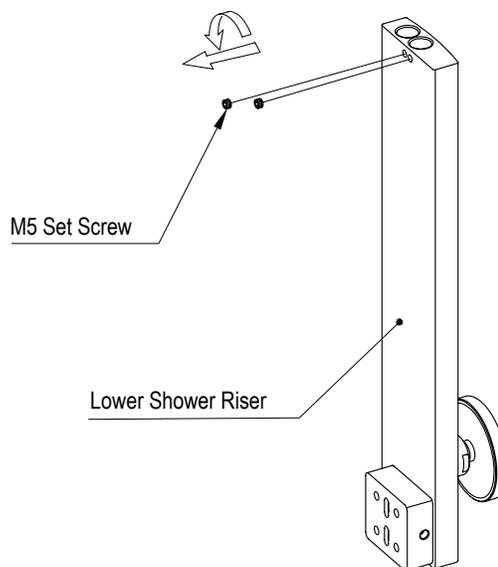


CORREIA SHOWER PANEL


INSTALLATION INSTRUCTIONS

SKU: 931424


9. Take out upper shower riser and remove the M5 set screw.

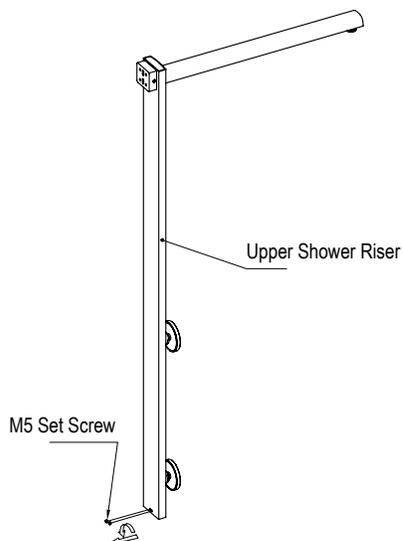


10. Remove the caps on both sides of the valve body. Connect the valve body with the upper and lower risers, tighten the set screws to secure.

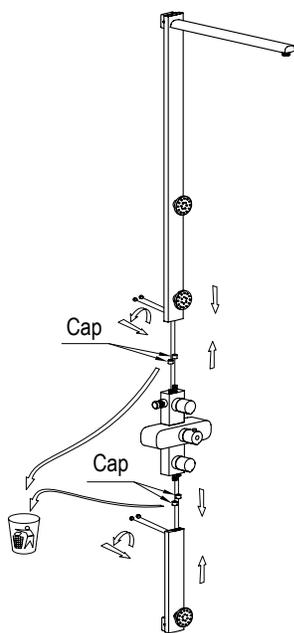

11. Attach the valve body to the S-connector set. Mark the location of the mounting base holes.

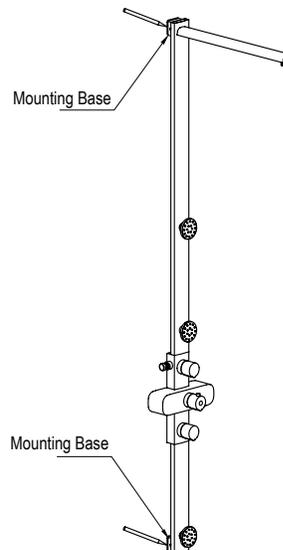

12. Pull out the valve body and unthread the M6 cone screws to remove the mounting bases.

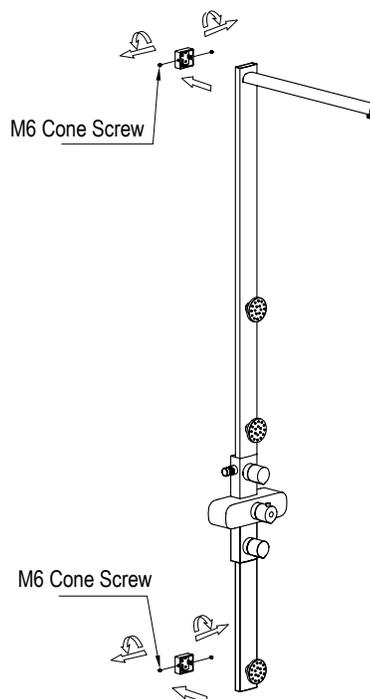


CORREIA SHOWER PANEL


INSTALLATION INSTRUCTIONS

SKU: 931424


13. Hold the mounting base in the location marked in the previous steps. Mark the location of the two slotted holes in the base.

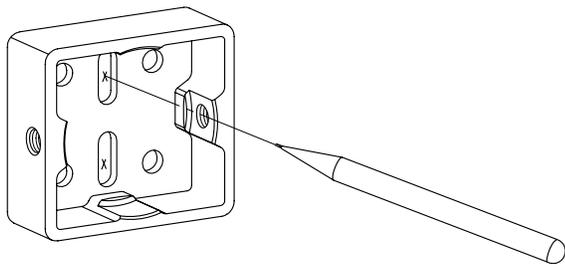


14. Drill mounting holes in the location marked in the previous step.

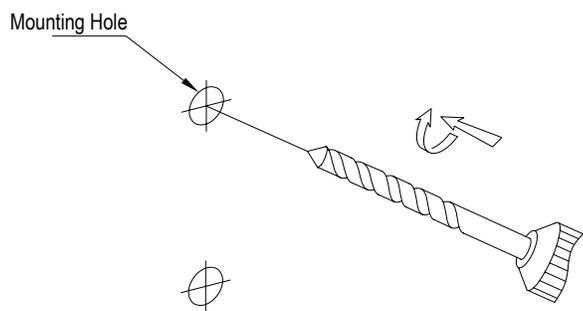

15. Insert anchors into the mounting holes.

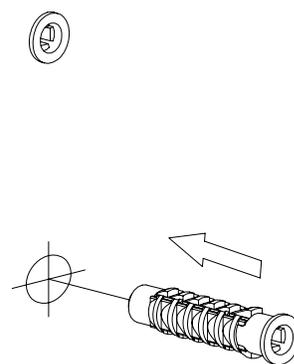

16. Drive screws into the anchors to attach the mounting base to the wall. Repeat these steps for the remaining mounting base.

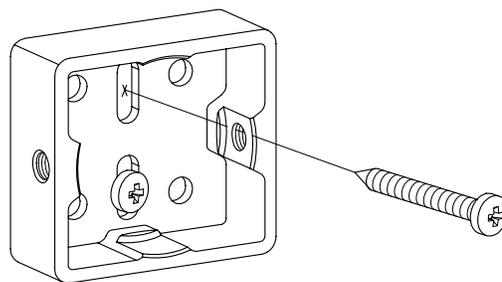


CORREIA SHOWER PANEL


INSTALLATION INSTRUCTIONS

SKU: 931424


17. Attach the faucet body to the S-connector set. Attach the shower riser with mounting bases. Secure the valve body with the M6 screws, and the mounting base with the M6 cone screws.

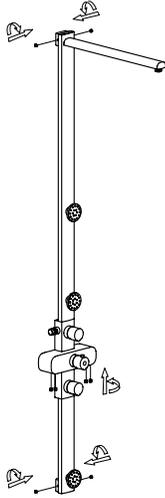


18. Attach the rainfall shower head to the upper riser. Tighten the M4 set screw to secure.

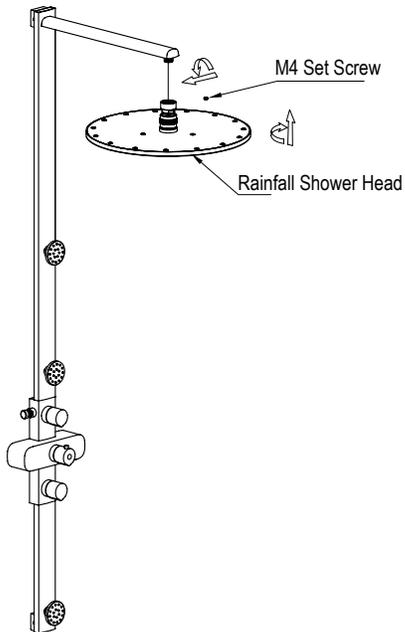

19. Unthread the M5 screw to remove the mounting plate from the hand shower caddy.

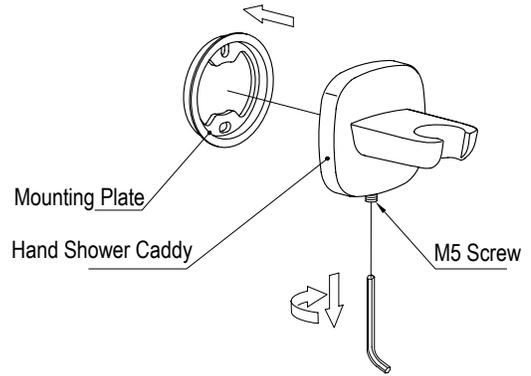

20. Mark the locations of the mounting holes in the mounting plate.

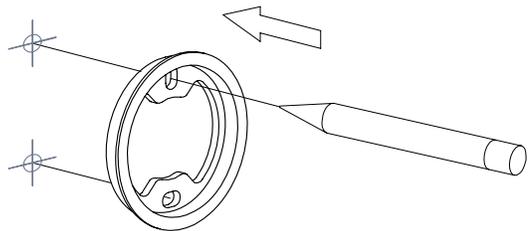


CORREIA SHOWER PANEL


INSTALLATION INSTRUCTIONS

SKU: 931424


21. Drill pilot holes in the locations marked in the previous step.

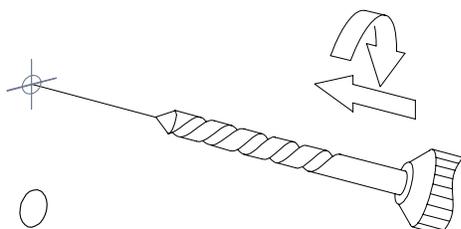


22. Insert the wall anchors, and attach the mounting plate to the wall by with self-tapping screws. Install the hand shower caddy. Tighten the M5 screw to secure.

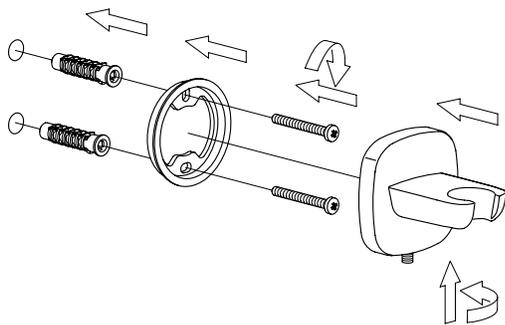

23. Remove the sheath from the 1/2" shower hose connector. Attach the hand shower, connector and hose.

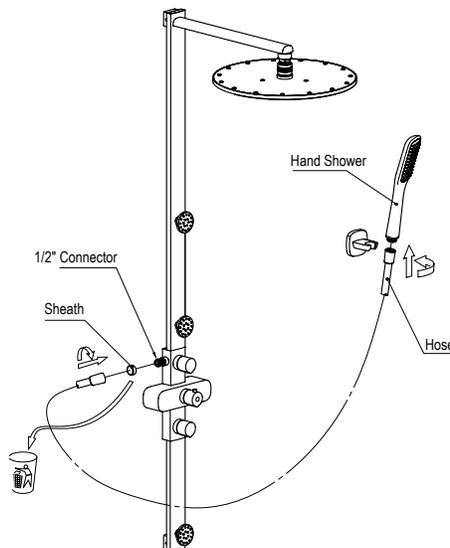

24. Turn on the water supply, check to make sure that all connections are tight, and that the hot and cold supplies are working correctly. Turn the shower on and allow the water to flow for approximately 60 seconds. Divert the water to the hand shower hose and allow the water to flow for an additional 60 seconds.

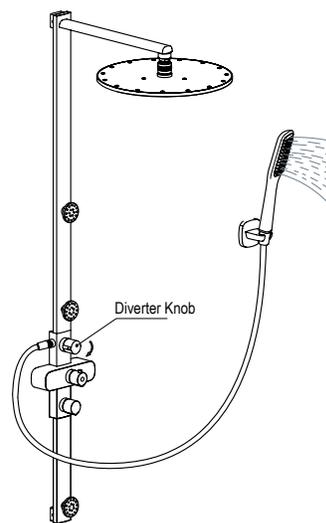

CORREIA SHOWER PANEL


INSTALLATION INSTRUCTIONS

SKU: 931424

DIVERTER KNOB FUNCTIONS:

Note: You cannot use all three functions simultaneously. Additionally, the shower head and the hand spray cannot be used simultaneously.

1. Turn the top diverter knob clockwise to run water from the hand spray.
2. Turn the top diverter knob counter-clockwise to run water from the shower head.
3. Turn the bottom diverter knob clockwise to run water from the body sprays. Turn the bottom diverter knob counter-clockwise in the off position to stop running the water from the body sprays.
4. Turn the top diverter knob clockwise and the bottom diverter knob clockwise to run water from the hand spray and the body sprays simultaneously.
5. Turn the top diverter knob counter-clockwise and the bottom diverter knob clockwise to run water from the shower head and the body sprays simultaneously.

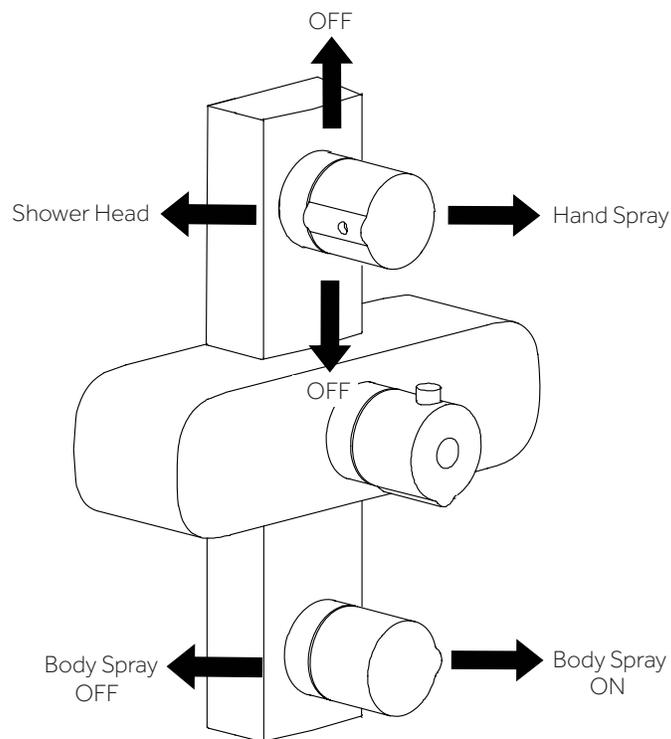

CORREIA SHOWER PANEL


INSTALLATION INSTRUCTIONS

SKU: 931424


CLEANING:

If the water flow is weaker than normal or the temperature control isn't functioning properly, the filtering net of thermostatic cartridge may be blocked. Remove the water inlet valve and clean as directed in the following steps.


1. Remove the cap with a sharp-ended tool. Remove the screw, thermostatic knob, stop collar, and locking nut. Take out thermostatic cartridge.

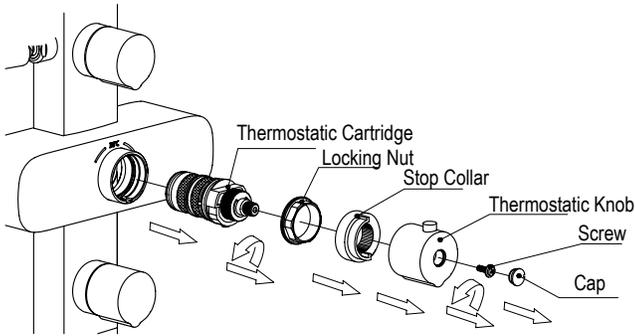

2. Clean the thermostatic cartridge filtering net with a brush and vinegar.

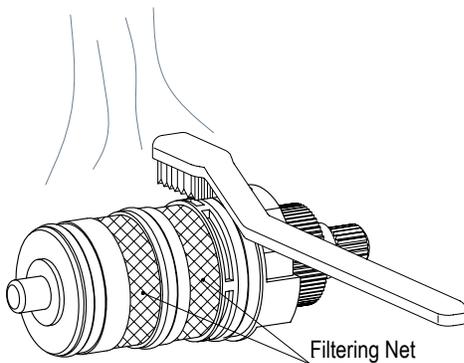

3. Reassemble the thermostatic cartridge, the locking nut and stop collar.

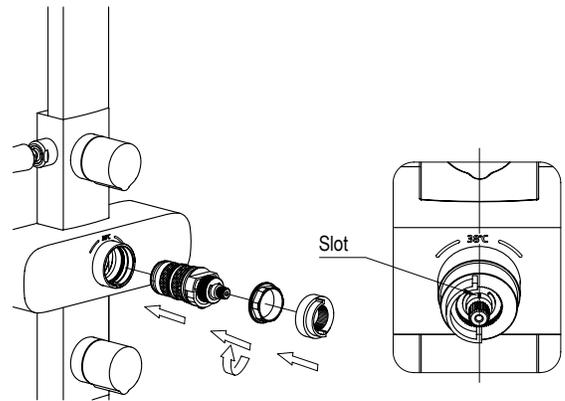

4. Replace the thermostatic knob. Tighten the screw and insert the cap.

