




ART DECO CONSOLE SINK INSTALLATION


2-LEG STAND ASSEMBLY INSTRUCTIONS

Unpack and inspect the vanity for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284. If you need assistance or have questions while assembling your console sink, contact Customer Service.

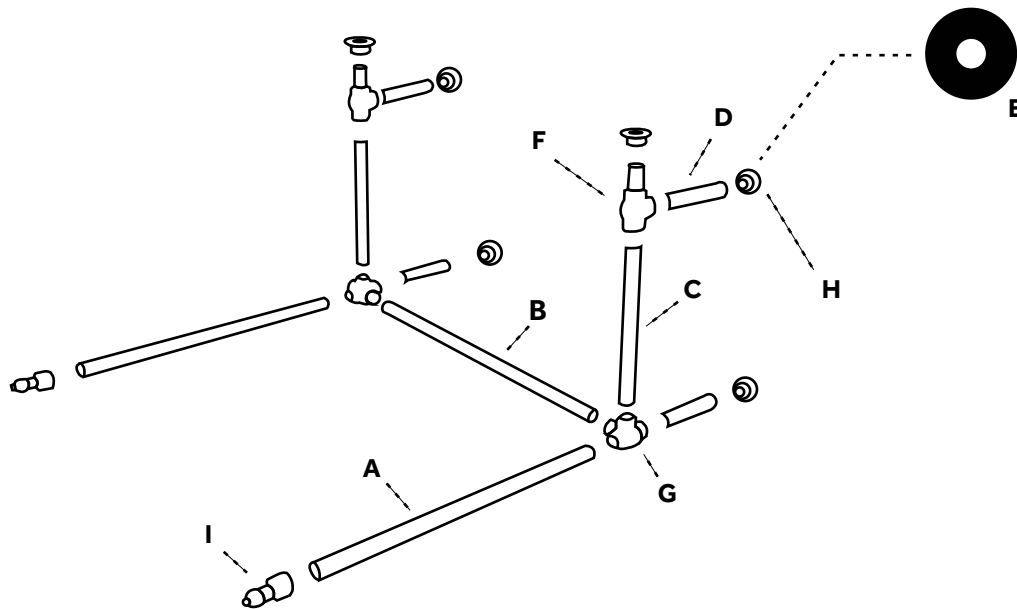


Note: Remove all pieces of the console stand from its packaging and separate them to organize.

A x 2




B



C x 2



D x 4



E (Countertop pads) x 4

F (3-way ball joint) x 2

G (4-way ball joint) x 2

H (Mounting Bracket) x 6

I (Feet) x 2

Screws x 18

Wall Anchors x 6

TOOLS AND MATERIALS



Screwdriver




Hammer



ART DECO CONSOLE SINK INSTALLATION


3-LEG STAND ASSEMBLY INSTRUCTIONS

Unpack and inspect the vanity for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284. If you need assistance or have questions while assembling your console sink, contact Customer Service.

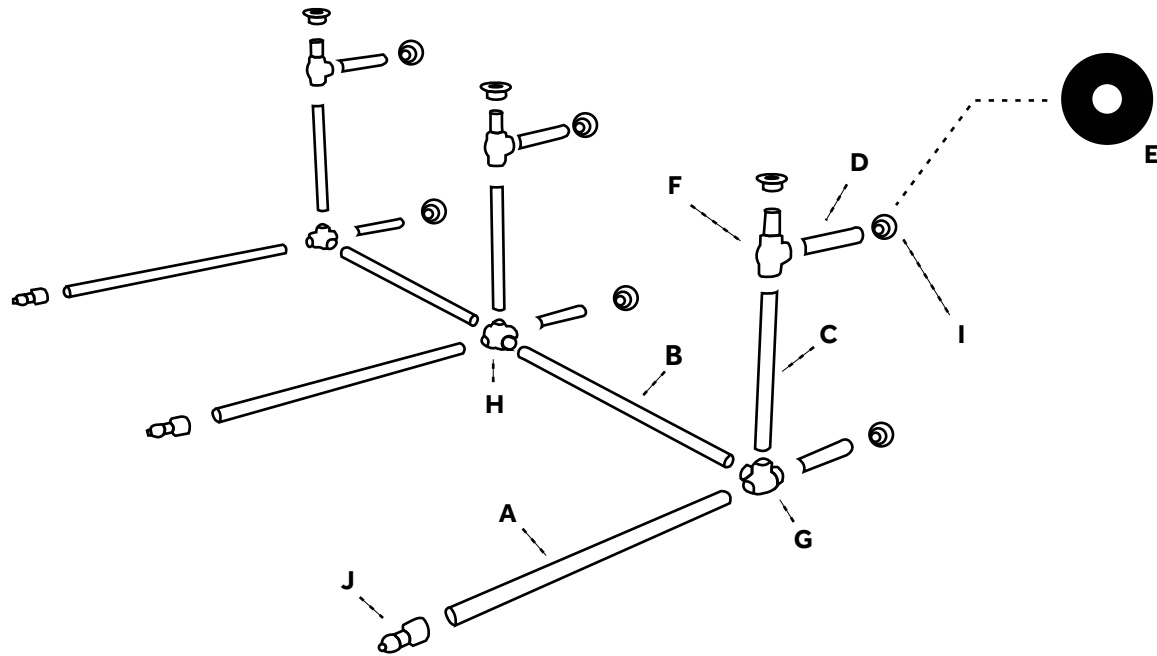


Note: Remove all pieces of the console stand from its packaging and separate them to organize.

A x 3




B x 2



C x 3



D x 6



E (Countertop pads) x 6



F (3-way ball joint) x 3

G (4-way ball joint) x 2

H (5-way ball joint) x 1

I (Mounting Bracket) x 9

J (Feet) x 3

Screws x 27

Wall Anchors x 9

TOOLS AND MATERIALS



Screwdriver



Hammer



ART DECO CONSOLE SINK INSTALLATION

BEFORE INSTALLING

Read entire Console Sink Installation Instructions. Observe all local building and safety codes.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your sink, contact Customer Service.

For adequate wall support, we recommend using heavy-duty steel wall anchors and placing wood blocking inside the wall. We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the sink or wall, or for personal injury during installation.

TOOLS AND MATERIALS:



Pencil



Screwdriver



Level



Drill



Silicone Sealant

BACKSPLASH

For counters with a backsplash, apply silicone to the backsplash's edge and wall-facing side. Position the backsplash to the rear of the counter and against the wall. Allow silicone to dry.

INSTALLATION

1. Once assembled, place the sink stand against the wall and in line with wall studs or wood blocking. Make sure the stand is level. If needed, adjust the small screws under each leg to level.
2. Mount the flanges to the wall with the included screws. Each flange has three screws.
3. Apply a thin coat of silicone to the tops of the sink stand where the vanity top will rest.
4. Carefully place the vanity top on the sink stand, center it and allow silicone to dry for 24 hours.
5. Proceed to installing your faucet, drain, and plumbing fixtures to complete the installation.

