



# REAR OUTLET TOILET

## BEFORE INSTALLING

Read entire Rear Outlet Toilet Installation Instructions. Observe all local building and safety codes.

## INSTRUCTIONS

For the following installation instructions for your new toilet it is assumed that any old fixtures have been removed and that the toilet flange is in the proper location for installation (refer to specification sheet).

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-866-855-2284. If you need assistance or have questions while installing your toilet, contact Customer Service.


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing or for personal injury during installation.

Shut off the water supply lines where the new toilet is being installed.

## TOOLS AND MATERIALS:



Pencil



Hacksaw



Level



Drill




Adjustable Wrench



PVC Glue

## INSTALLATION

1. If you are installing a two-piece toilet, slide the tank bolts through the mounting holes on the top of the base of the toilet and thread the washers and nuts onto the tank bolts. Verify that the tank is level and alternately tighten the washers and nuts until the tank is resting firmly on the bowl. If your toilet is one piece only, move on to the next step.

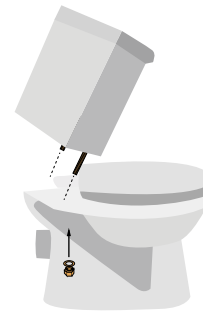

2. Place the toilet in the location where it will be installed.




3. Measure the distance from the back of the waste outlet on the toilet to the wall hub fitting to determine the length of the p-trap connector. The connector should extend approximately 1-1/2" into the hub fitting.






## INSTALLATION (STEPS 4-9)


4. Trim the p-trap adapter with a hacksaw to the appropriate length as necessary.

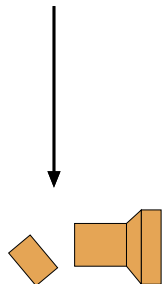


5. Mark the location of the pre-drilled mounting holes using the holes in the base of the toilet as a template.

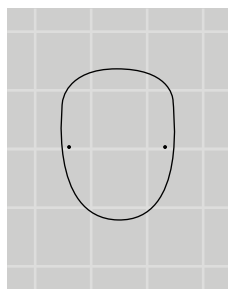

6. Remove the toilet from the work area and drill mounting holes in the locations designated in the previous step.

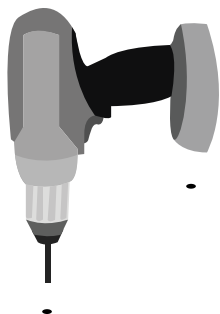


7. Apply PVC or ABS glue around the p-trap connector and place inside the hub fitting.

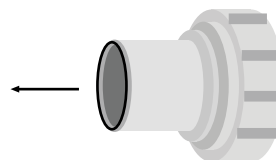

8. Slide the toilet into place and press the waste outlet into the p-trap connector.




9. Once the toilet is securely in place, insert anchor bolts and washers through the mounting holes in the base of the toilet and tighten into the pre-drilled holes created in step 6.

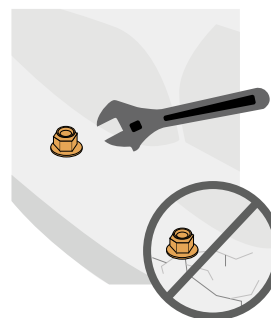




## INSTALLATION (STEPS 10-13)

10. Place caps over the anchor bolts on the base of the toilet.

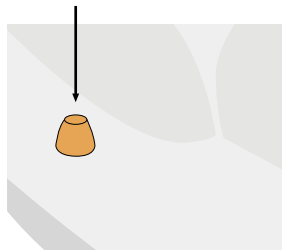

11. Connect the water supply tubes at the bottom of the tank. Turn on the water supply and flush the toilet several times to check for any leaks around the back or base.

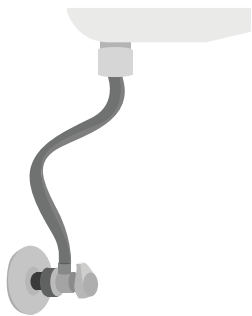

12. Attach the toilet seat.



13. Finish your installation by applying latex caulk or tile grout around the base of the toilet. This will finish the joint between your floor and toilet bowl and divert water away from the base of the toilet.

