



# LIFT ROD SINK DRAIN INSTALLATION

## BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing, or personal injury during installation.

Unpack and inspect the item for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

## TOOLS AND MATERIALS:



Plumber's Tape\*



Basin Wrench\*




Thread Sealant\*

\*not included

## GETTING STARTED

- Ensure that you have gathered all of the required materials that are needed for the installation.

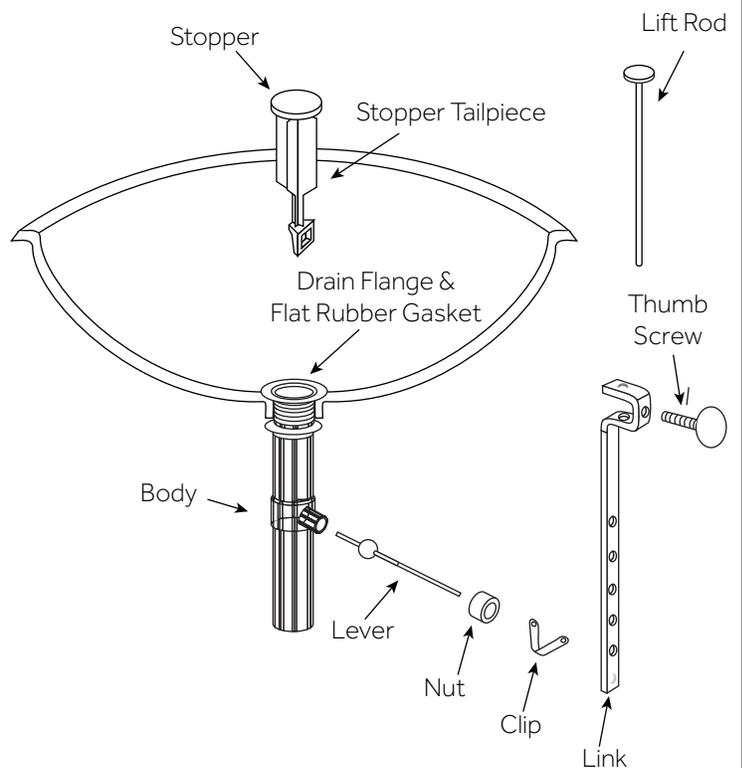





# LIFT ROD SINK DRAIN INSTALLATION

## INSTALLATION


1. Remove the flange by unthreading it from the drain body. Remove the flat rubber gasket as well.

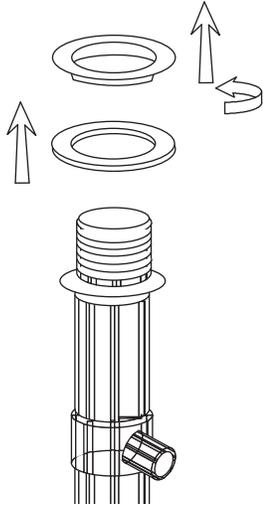


2. Set the flat rubber gasket over the drain hole in your sink, then insert the flange into the drain hole.

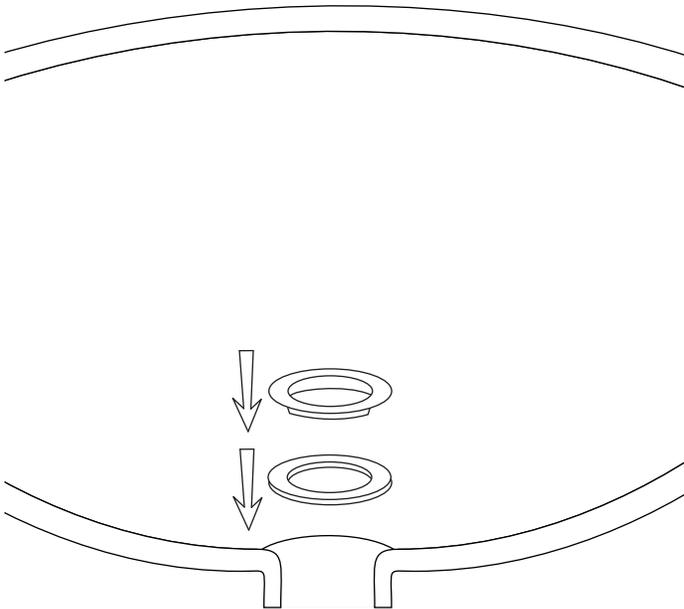

3. From beneath the sink, reattach the flange by threading it back onto the drain body.

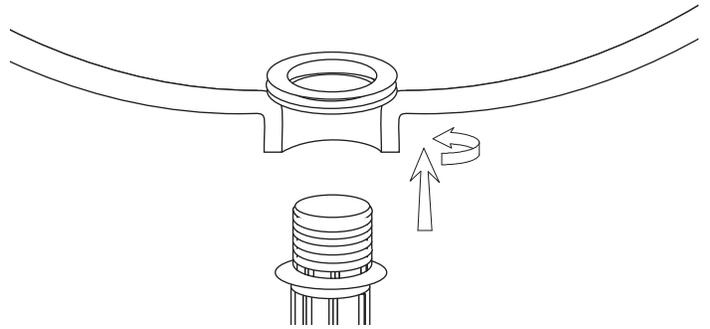


4. Connect the drain lever by threading it into the hole on the side of the drain body. The lever must pass through the hole in the stopper tailpiece to function properly. Apply a bit of thread sealant or plumber's tape to the threads before attaching.

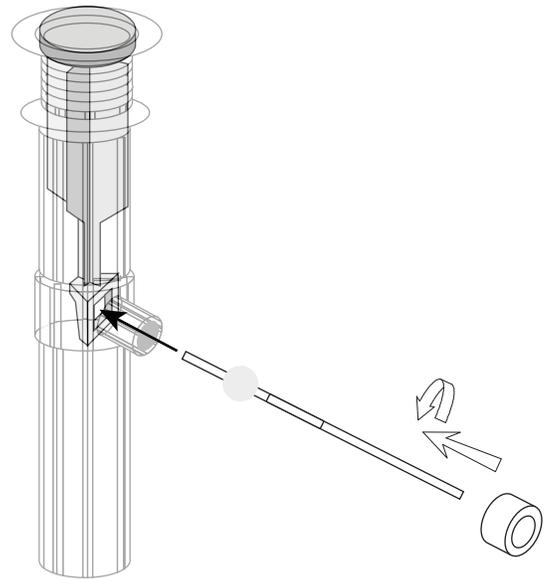




## LIFT ROD SINK DRAIN INSTALLATION


5. Position the drain so that the lever is facing the back of the fixture, in line with the faucet's lift rod. While holding in place, hand tighten the lock nut until secure then finish tightening with a basin wrench. Be careful not to overtighten, which can crack a fragile sink.

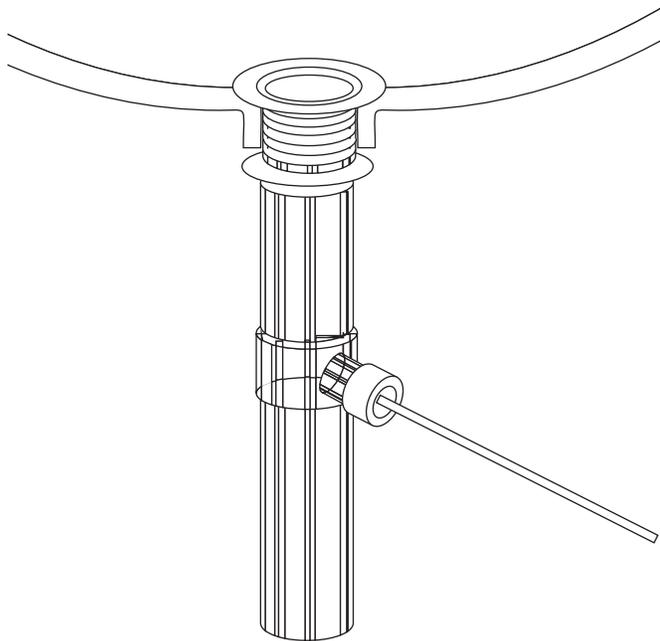

6. If not already installed, insert the faucet's lift rod into its designated hole on the back of the faucet.

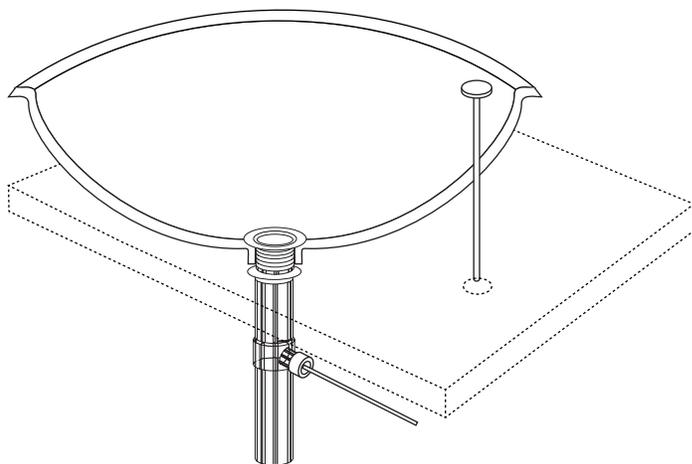


7. Use the link to attach the faucet's lift rod to the drain lever. Pinch the metal clip located on the drain lever to remove. Slide one end of the clip back onto the lever, followed by the link, then the second end of the clip to secure.

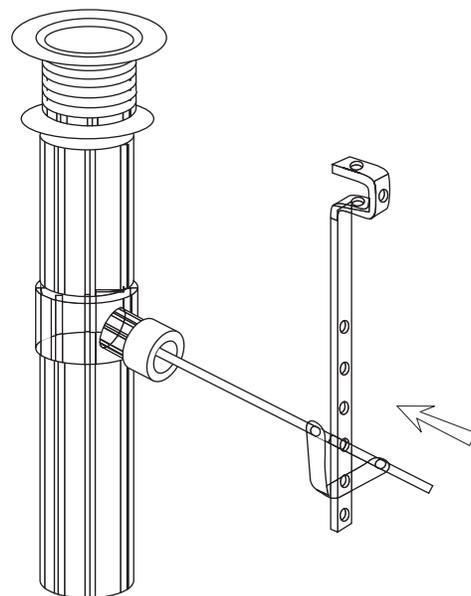




## LIFT ROD SINK DRAIN INSTALLATION

8. Attach the lift rod to the top of the link and secure it by tightening the thumb screw.

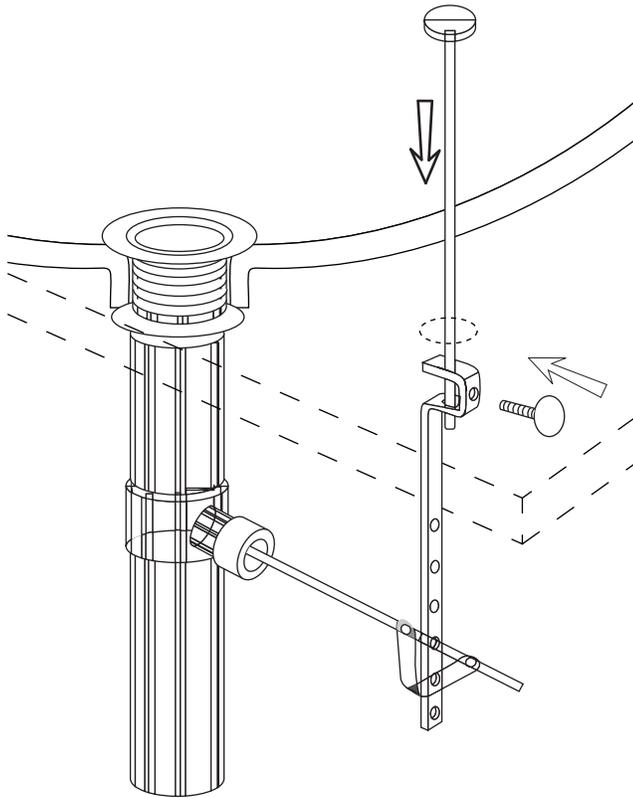

9. Make any final adjustments to the positioning of the link and drain lever as needed. Adjust until the drain fully opens and closes.

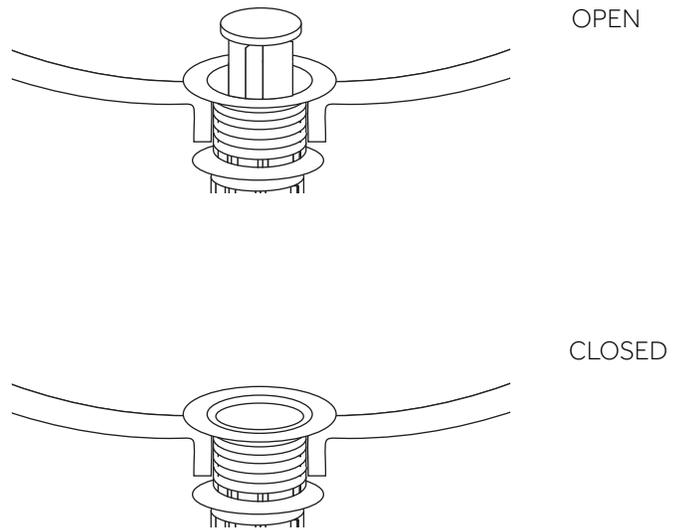

10. Fill your sink to check for any leaks and to ensure that the drain is functioning properly.

