



# CONSOLE SINK

## INSTALLATION INSTRUCTIONS

### CONTENTS

<b>Console Installation</b>	<b>2</b>
Backsplash	2
<b>Undermount Sink</b>	<b>3</b>
<b>Semi-Recessed Sink</b>	<b>4</b>
<b>Vessel Sink</b>	<b>5</b>
<b>Drain Installation</b>	<b>6</b>



## CONSOLE SINK

### BEFORE INSTALLING


Read entire Console Sink Installation Instructions. Observe all local building and safety codes.

### INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.855.715.1800. If you need assistance or have questions while installing your sink, contact Customer Service.

For adequate wall support, we recommend using heavy-duty steel wall anchors and placing wood blocking inside the wall. We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the sink or wall, or for personal injury during installation.

### TOOLS AND MATERIALS:

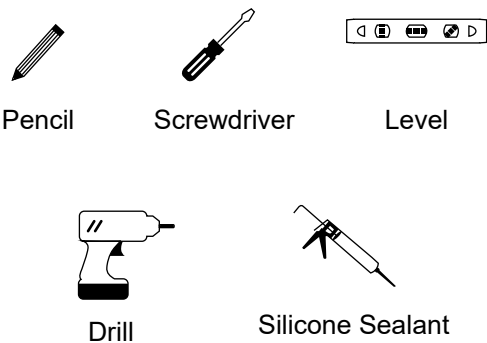

### BACKSPLASH


For counters with a backsplash, apply silicone to the backsplash's edge and wall-facing side. Position the backsplash to the rear of the counter and against the wall. Allow silicone to dry.

### INSTALLATION

1. Position the console legs on the floor to prepare for assembly. Each leg has a 4-way ball joint with included set screws.
2. Attach the horizontal supports to the ball joints and tighten the set screws.
3. Once assembled, place the sink stand against the wall and in line with wall studs or wood blocking. Make sure the stand is level. If needed, adjust the small screws under each leg.
4. Mount the flanges to the wall with the included screws. Each flange has three screws.

**Note:** Undermount sinks should be installed at this point. See the "Sink Installation Instructions" below before continuing to Step 5. For semi-recessed and vessel sinks, continue through the following steps, then install sinks using the "Sink Installation Instructions."

5. Apply a thin coat of silicone to the tops of the sink stand where the vanity top will rest.
6. Carefully place the vanity top on the sink stand, center it and allow silicone to dry for 24 hours..

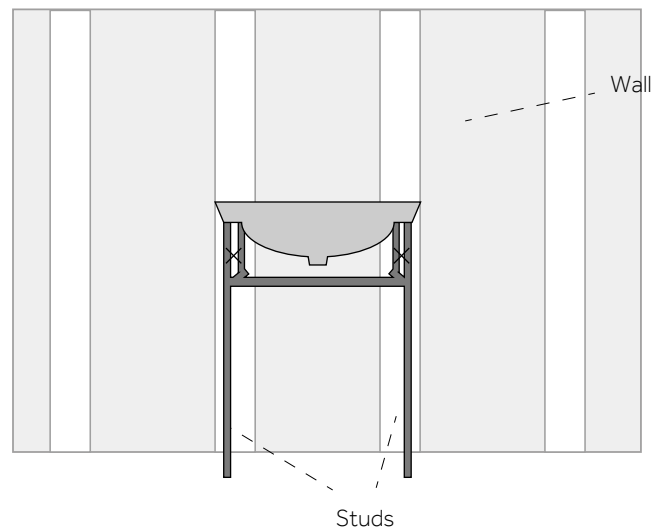



## UNDERMOUNT SINK

### BEFORE INSTALLING

Read instructions completely before installing.  
Note: Use care when lifting and installing any sink.  
Place sink on a level surface with a towel or other soft cloth beneath to prevent damage.

### TOOLS AND MATERIALS:



Pencil



Damp Cloth



Neutral Cure  
Silicone Sealant

### INSTALLATION

1. Carefully turn the vanity top over so that it rests upside-down on a stable, cushioned surface.
2. Position the undermount sink over the sink cutout. Make sure the sink is centered with the faucet hole and is evenly spaced between the bolt holes.
3. Draw an outline of the sink on the vanity top.
4. Remove the sink from the vanity top and apply a generous bead of silicone around the sink rim.
5. Carefully place the sink upside down on the vanity top, positioning it within the outline.
6. At each of the bolt holes in the vanity top, attach the sink clips by placing the long end of the bracket flat against the sink lip. Screw the wing bolts through the brackets and bolt holes and tighten snugly.
7. Carefully turn the top and sink over. If needed, reposition the sink by slightly loosening the wing bolts and adjusting the placement. Re-tighten the bolts when finished.
8. Remove any excess silicone sealant with a damp cloth. Let silicone dry for 24 hours.





## SEMI-RECESSED SINK

### BEFORE INSTALLING

Read instructions completely before installing.  
Note: Use care when lifting and installing any sink.  
Place sink on a level surface with a towel or other soft cloth beneath to prevent damage.

### TOOLS AND MATERIALS:



Neutral Cure  
Silicone Sealant



Damp Cloth

### INSTALLATION

1. Carefully turn the sink over to rest upside down on the vanity top.
2. Apply a continuous bead of silicone to the outer edge of the sink.
3. Turn the sink back over, placing it inside the sink cutout and position until centered.
4. Remove any excess silicone with a damp cloth. Let silicone dry for 24 hours.





## VESSEL SINK

### BEFORE INSTALLING

Read instructions completely before installing.  
Note: Use care when lifting and installing any sink.  
Place sink on a level surface with a towel or other soft cloth beneath to prevent damage.

---

### TOOLS AND MATERIALS:



Neutral Cure  
Silicone Sealant



Damp Cloth

### INSTALLATION

1. Carefully place the sink upside down on the vanity top. Apply a continuous bead of silicone to the base of the sink where it will rest on the top.
2. Turn the sink right-side-up and position it back over the 2" drain hole.
3. Remove any excess silicone with a damp cloth. Let silicone dry for 24 hours.





## DRAIN INSTALLATION

### BEFORE INSTALLING

Read instructions completely before installing. Note: Use care when lifting and installing any sink. Place sink on a level surface with a towel or other soft cloth beneath to prevent damage.

### TOOLS AND MATERIALS:



Thread Sealant



Basin Wrench

### INSTALLATION

1. Disassemble the drain by removing the threaded tail piece, rubber sealing gaskets, friction washer and lock nut from the drain body.
2. Place thread sealant on the threaded section of the tail piece and reattach to the drain body.
3. Slide the flat rubber sealing gasket up the tail piece to the top of the drain body. This gasket will create a water tight seal between the drain flange and sink.
4. Place the drain in the drain hole in the sink.
5. On the underside of the counter, attach the tapered rubber gasket. With the flat side facing down, slide the gasket up the threaded shank until it makes contact with the bottom of the sink.
6. Slide the friction washer up to meet the rubber gasket.
7. Thread the lock nut onto the threaded shank. Hand-tighten and make sure that the drain is properly aligned. When ready, finish tightening with a basin wrench to secure the drain.