
KITCHEN CABINET BASE

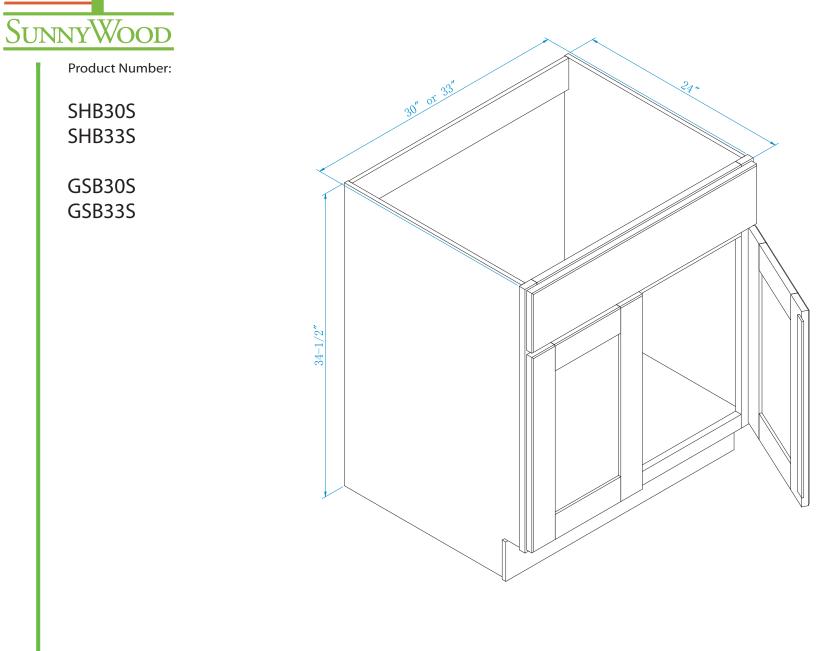

NOTE: No center stile. Batten is attached to door panel in lieu of a center stile.

www.sunnywood.biz