


# Freestanding Vanity

## INSTALLATION INSTRUCTIONS

---

Swiss Madison®  
well made forever

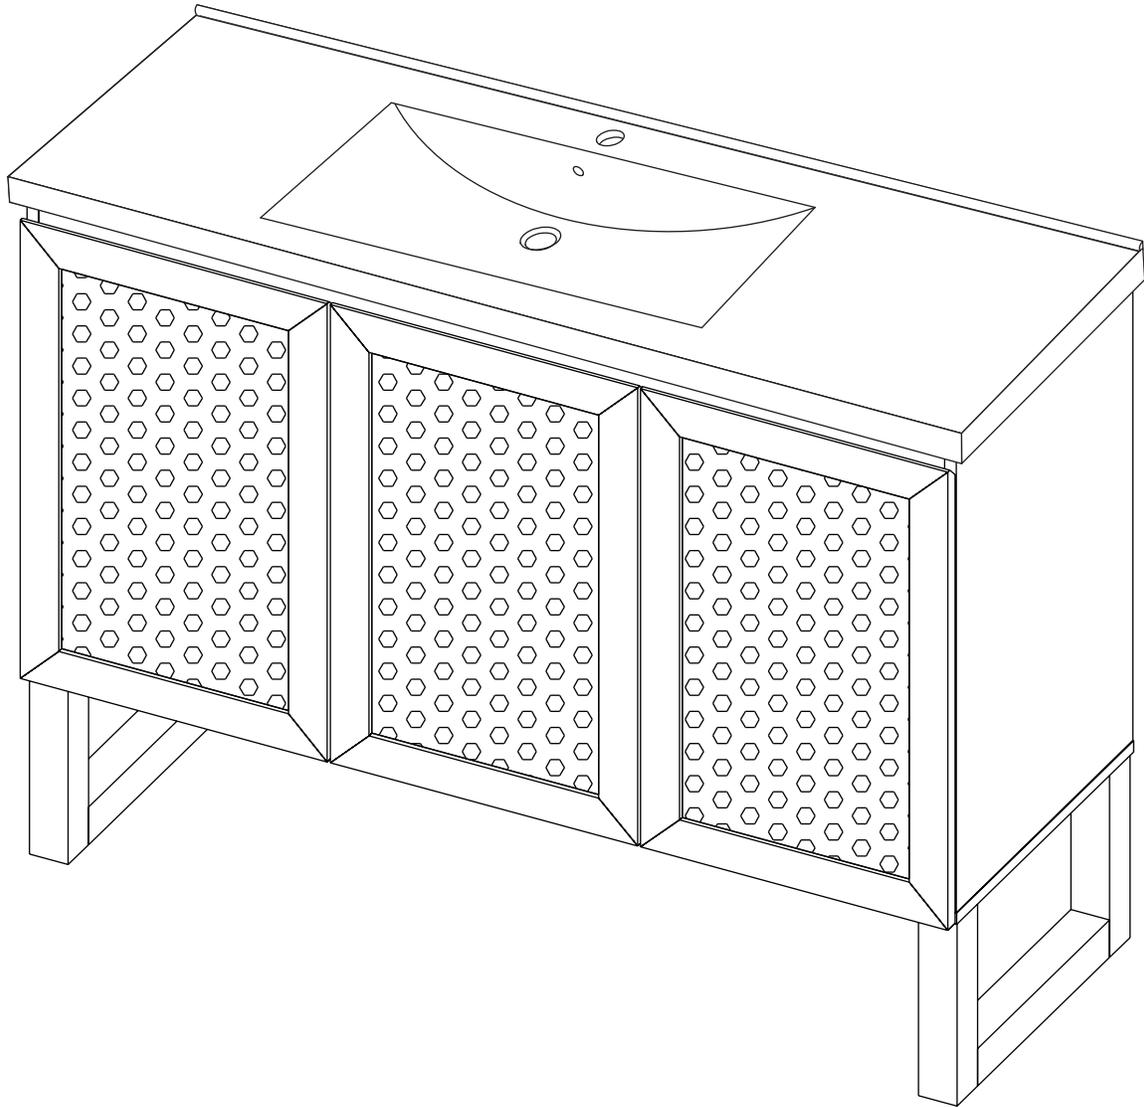

@SwissMadison  
#WellMadeForever





## PRIOR TO INSTALLATION:

- Inspect product to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Floor must be level prior to installation of vanity.
- All dimensions are nominal! Be sure to measure your vanity prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

If you have any questions or concerns please contact us:  
 1-434-623-4766  
[info@swissmadison.com](mailto:info@swissmadison.com)

## SUGGESTED TOOLS & MATERIALS:

## INCLUDED PARTS:




Safety Glasses




Gloves



Screwdrivers

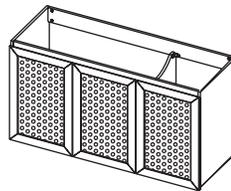


Vanity Base

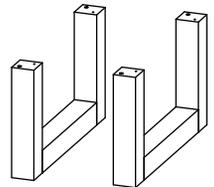


Leg Set




Silicone

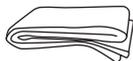


Drop Cloth

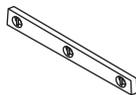

Level

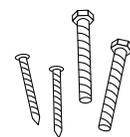



Hardware

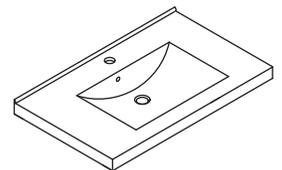

Vanity Sink


**Parts for Reference:**

- 1. Middle Panel
- 2. Middle Support
- 3. Rear Top Bar
- 4. Front Top Bar
- 5. Rear Bottom Bar
- 6. Right Side Panel
- 7. Left Side Panel
- 8. Base Panel
- 9. Legs (2)
- 10. Base Support Bar
- 11. Right Side Door (2)
- 12. Left Side Door
- A. Cam Bolt
- B. Cam Lock
- C. Wooden Dowel
- D. Screws
- E. Hinges
- F. Foam Pads
- G. Bracket Screws
- H. Brackets

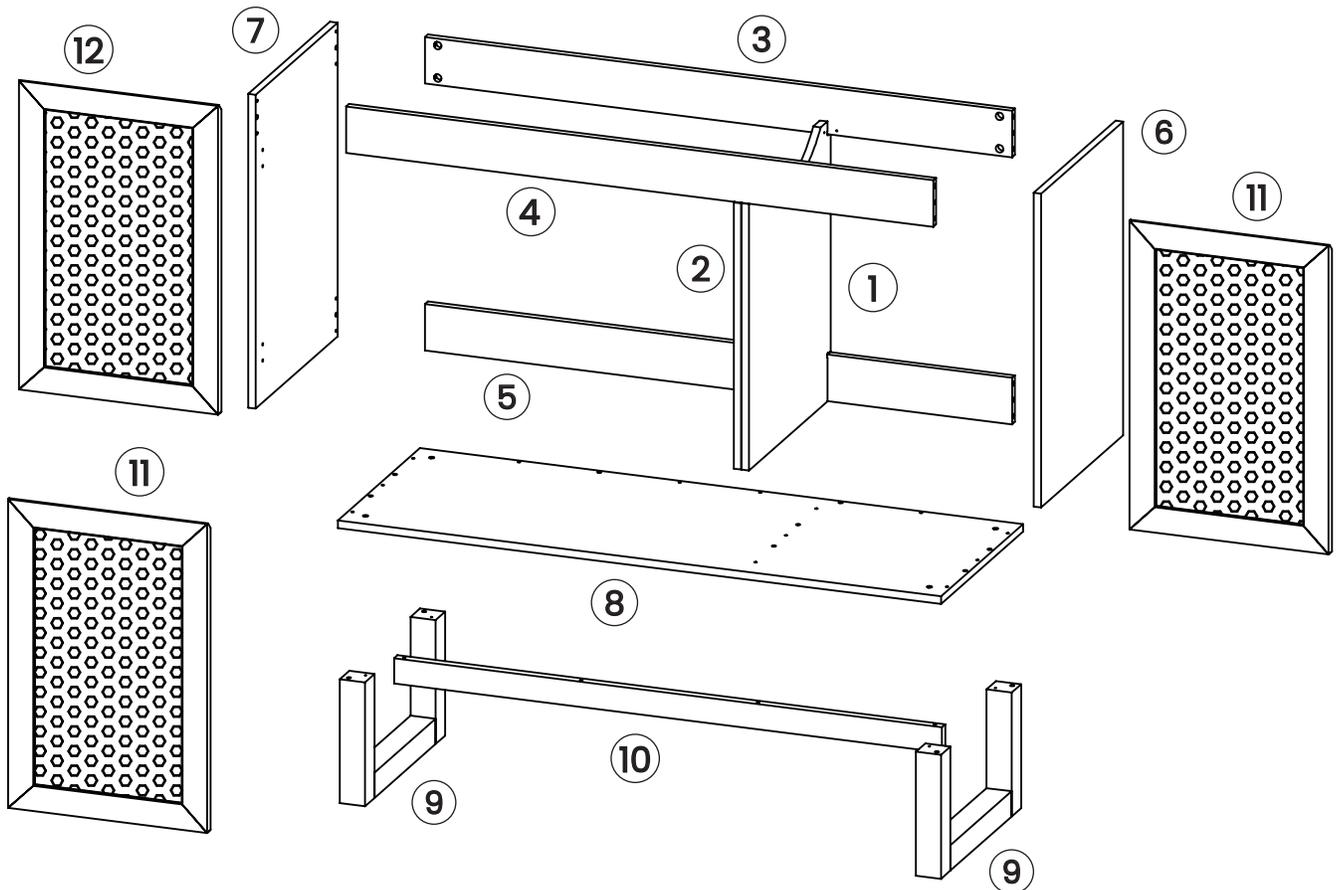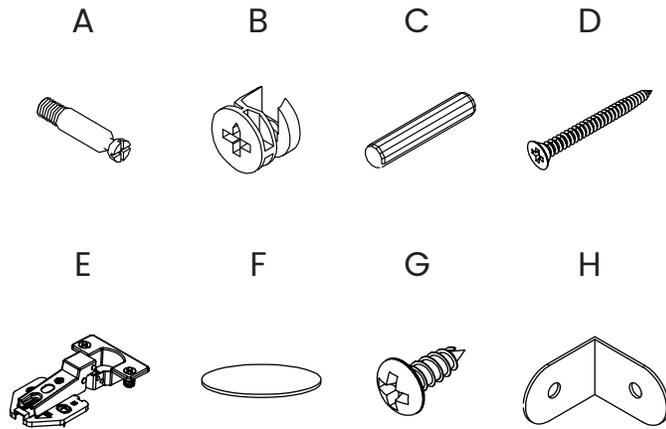


**1. Prepare Frame**

- Insert 2 wooden dowels (C) into the middle panel (1) as shown.
- Insert 1 wooden dowels (C) into each end of the rear top bar (3) as shown. Repeat to the front top bar (4).
- Insert 4 wooden dowels (C) into the rear bottom bar (5) as shown.

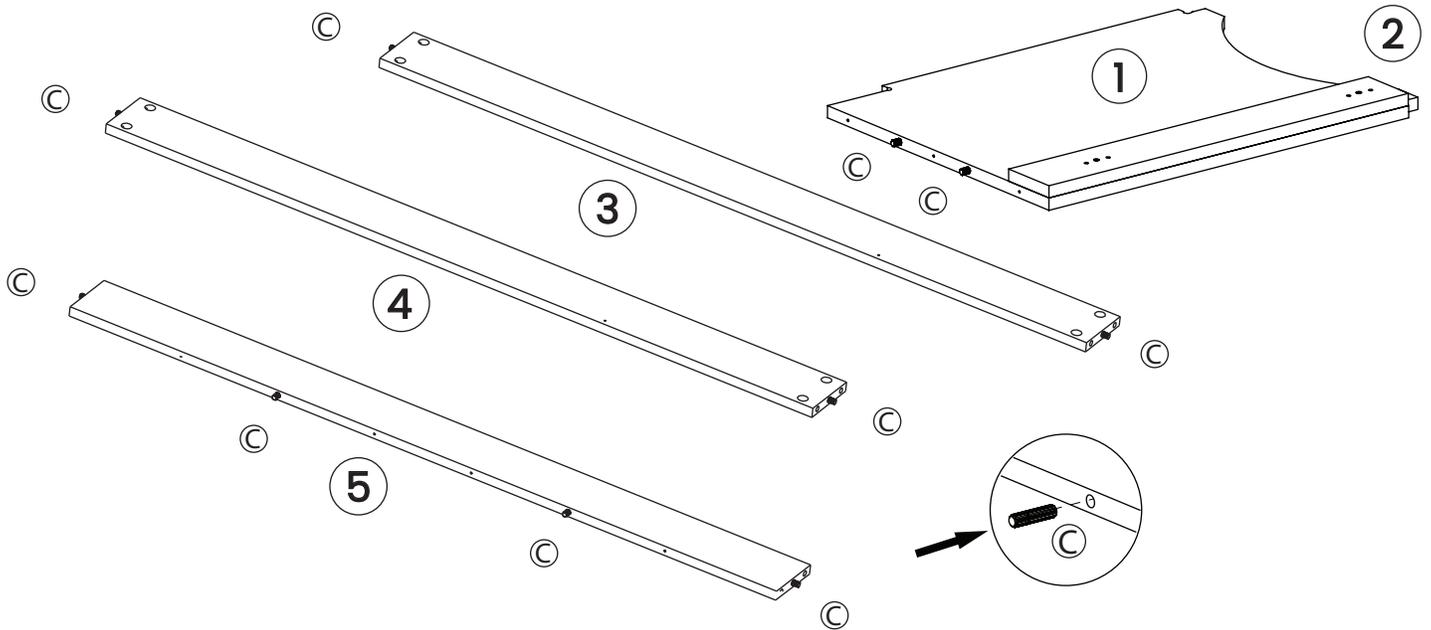


**2. Prepare Side Panels**

- Insert 2 wooden dowels (C) into the right side panel (6) as shown.
- Screw 6 cam bolts (A) into the right side panel (6) as shown.
- Repeat the above steps for the left side panel (7).

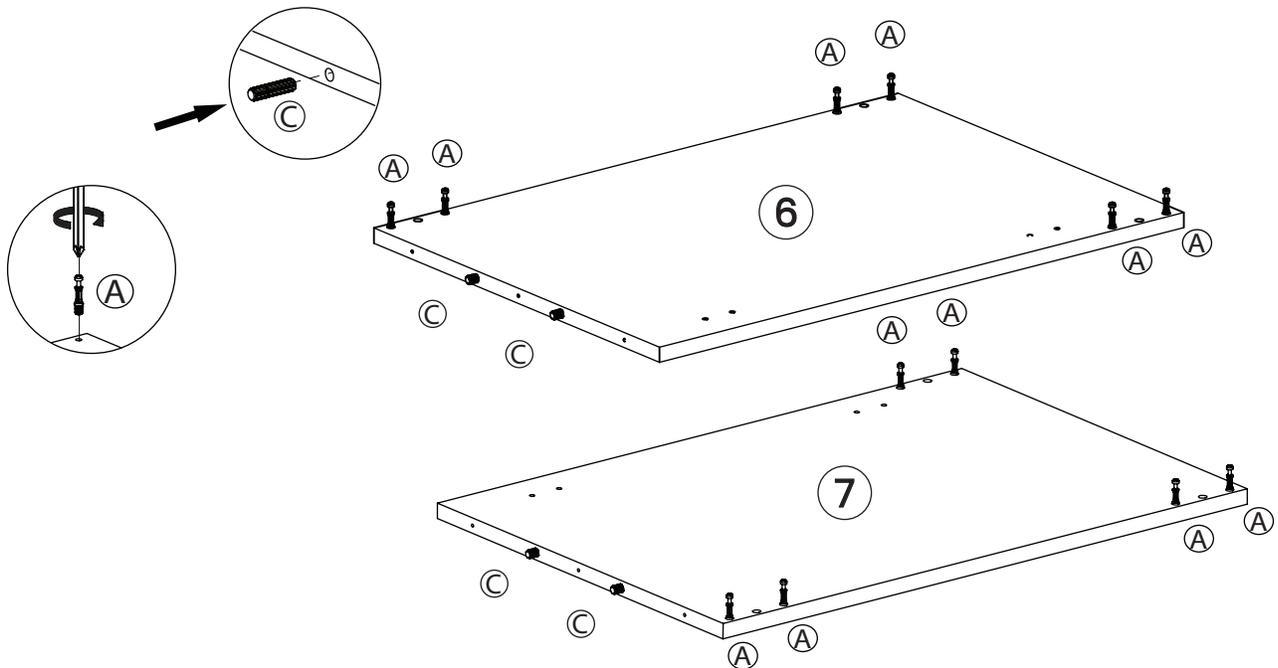


**3. Assemble Frame**

- Use 2 cam locks (B) to connect the rear top bar (3) and left side panel (7) as shown. Repeat this process to secure the front top bar (4) and the rear bottom bar (5) to the left side panel (7) as shown.
- Slide the middle panel (1) and middle support (2) in between the top and rear bars (3,4,5) as shown. Be sure to line the middle panel (1) up using the cut out notches.
- Use 2 cam locks (B) to connect the rear top bar (3) and right side panel (6) as shown. Repeat this process to secure the front top bar (4) and the rear bottom bar (5) to the right side panel (6) as shown.

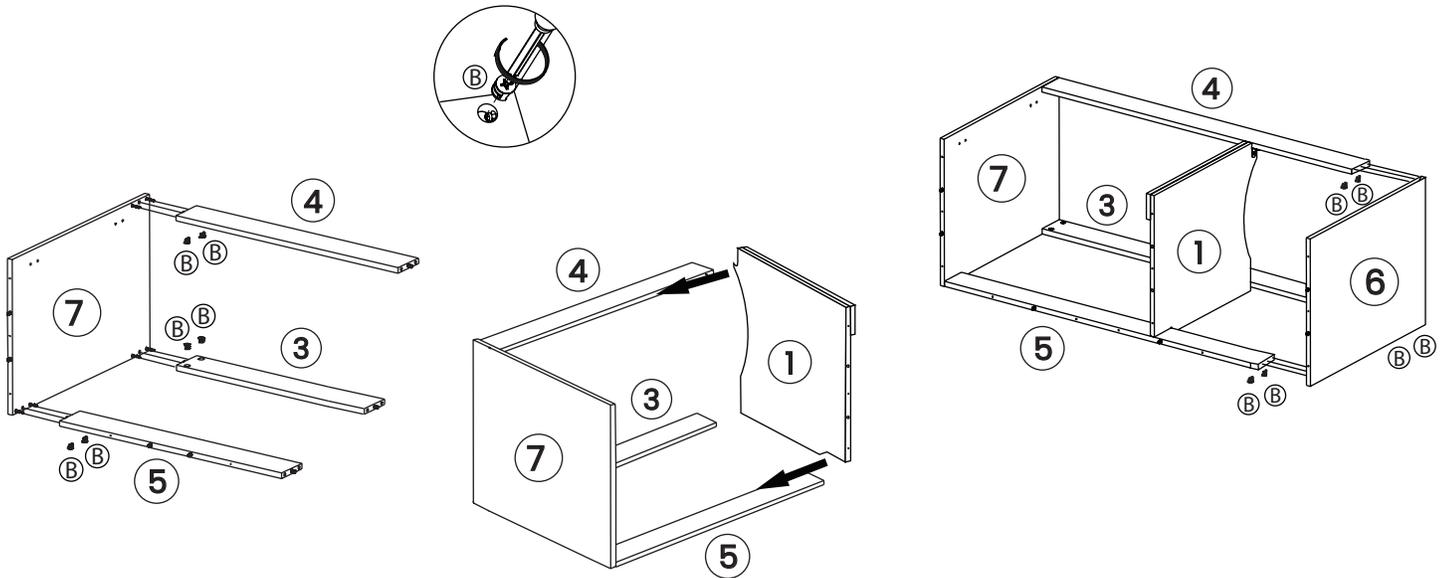


**4. Construct Base**

- Align the base panel (8) with the vanity frame as shown.
- Use 13 screws (D) to secure the base panel (8) as shown.
- Secure the base support bar (10) to the base panel (8) as shown using 4 screws (D).

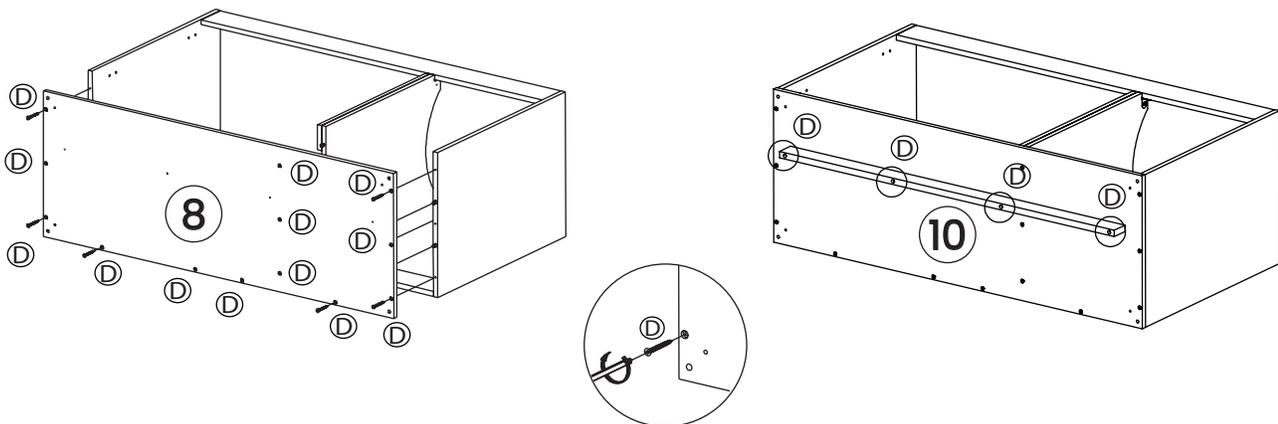


**5. Attach Legs**

- Insert 2 wooden dowels (C) into each leg set (9) as shown.
- Place a foam pad (F) onto the bottom of the legs sets (9) according to the diagram below.
- Attach each leg set (9) to the cabinet base (8) as shown.
- Finish securing the legs sets (9) into place by using 4 screws (D).

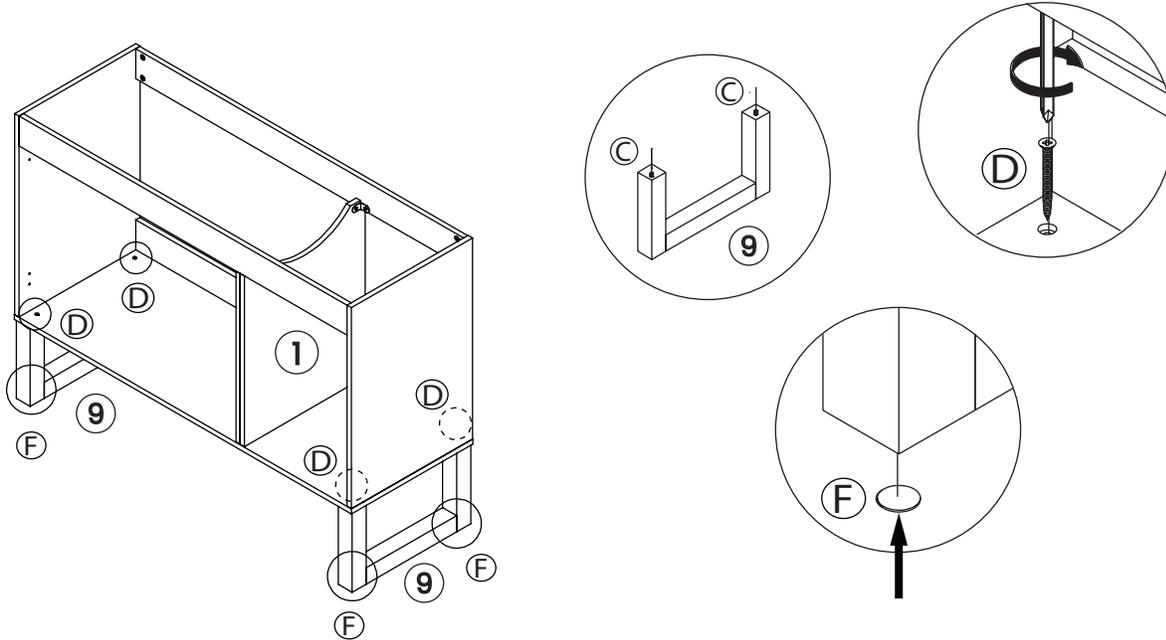


**6. Attach Brackets**

- Secure the middle panel (1) into place by lining up a bracket (H) against the middle panel (1) and the rear top bar (3).
- Use 2 screws (G) to secure bracket into place.
- On the opposite side of the middle panel (1), line up a bracket (H) against the middle panel (1) and the front top bar (4).
- Use 2 screws (G) to secure bracket into place.

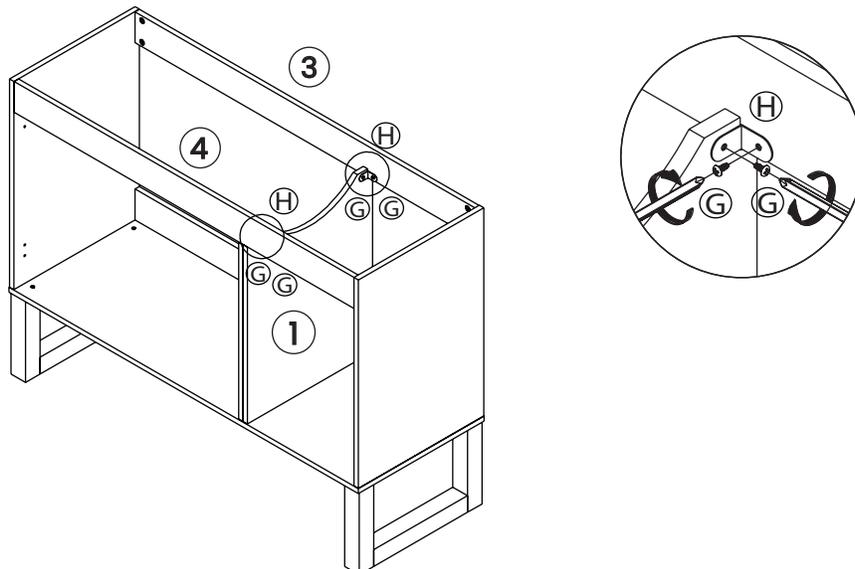


**7. Attach Hinges**

- Remove threaded caps from bottom of screw in a hinge (E).
- Align caps in designated holes of the left side door (12). Using a mallet, hammer caps into the holes, making sure that each cap is open at the top.
- Align hinge (E) with the left side door (12) as shown. Then, screw the hinge (E) into the threaded caps until tight. Repeat the above process with an additional hinge (E).
- Once the above steps are completed to the left side door panel (12), repeat all the steps to both right side door panels (11).

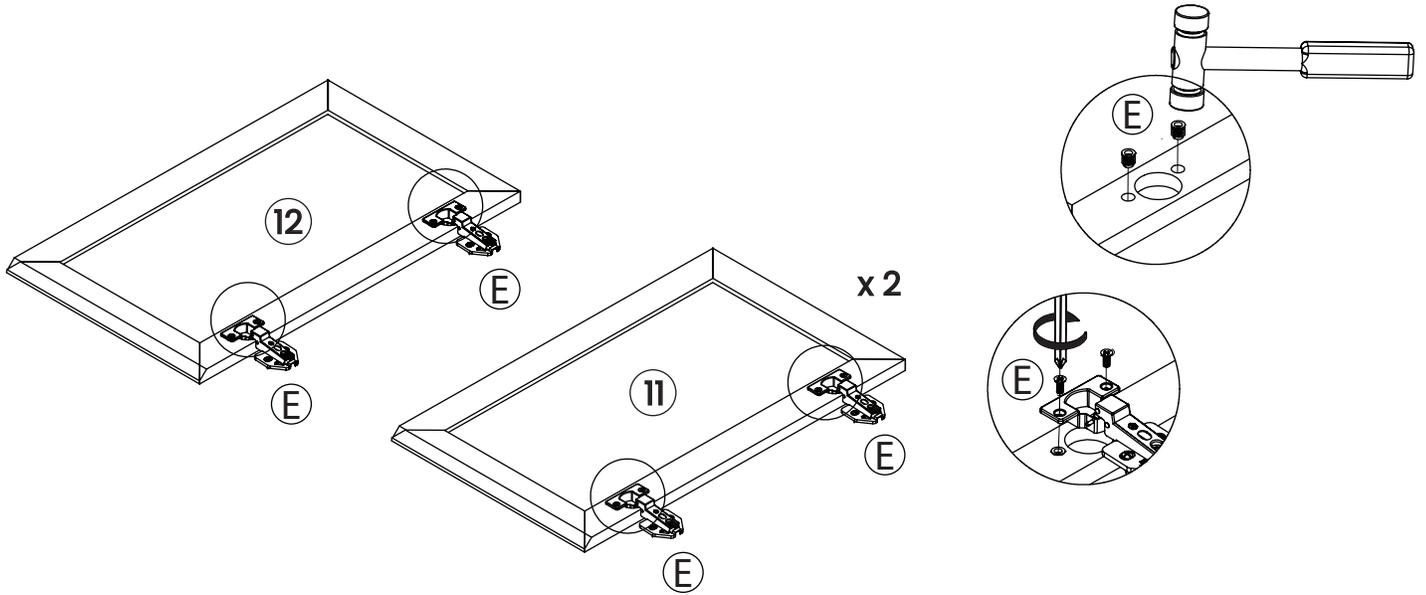


**8. Attach Doors**

- Using 2 screws per hinge (E), connect the right door panel (11) to the cabinet body as shown.
- Connect the remaining right door (11) to the middle of the cabinet body as shown using 2 screws per hinge (E).
- Attach the left side door (12) using 2 screws per hinge (E) as shown.

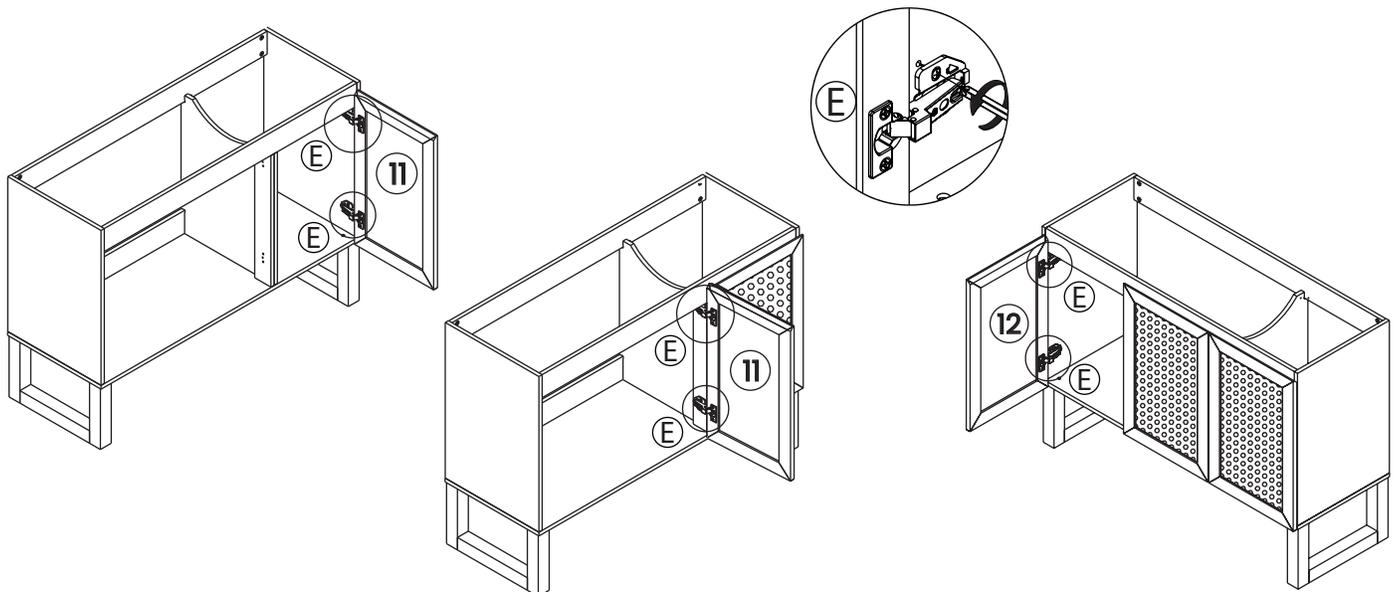


**9. Optional: Secure Vanity to Wall**

\*Hardware not included\*

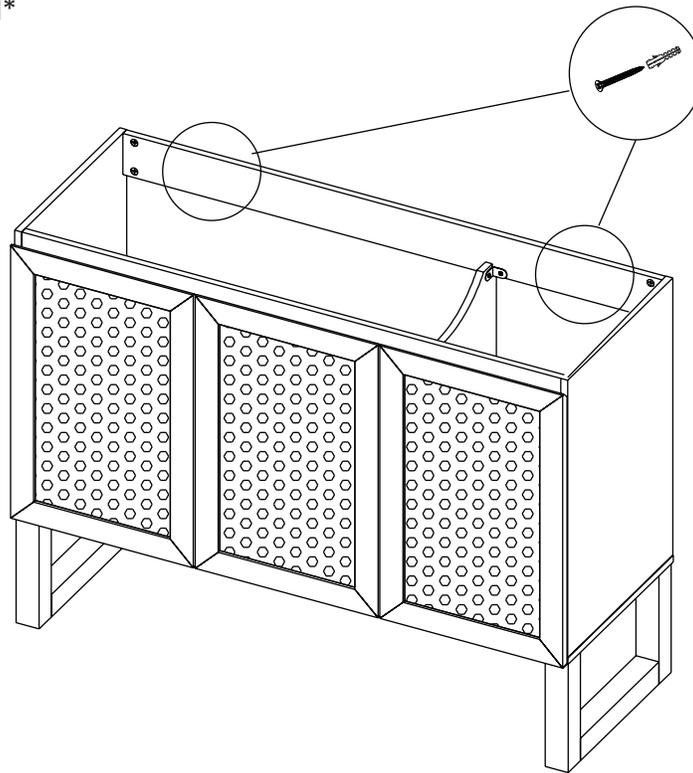


**10. Vanity Top Installation**

- Install faucet and drain according to manufacturer’s installation instructions. Do not overtighten, this may cause the sink to crack.
- Set the vanity top on top of the vanity base, checking the location of the p-trap and drain.
- Remove vanity top from vanity base. Apply a thin bead of silicone around the vanity base and set the vanity top carefully in place.
- Remove excess silicone with a wet cloth.

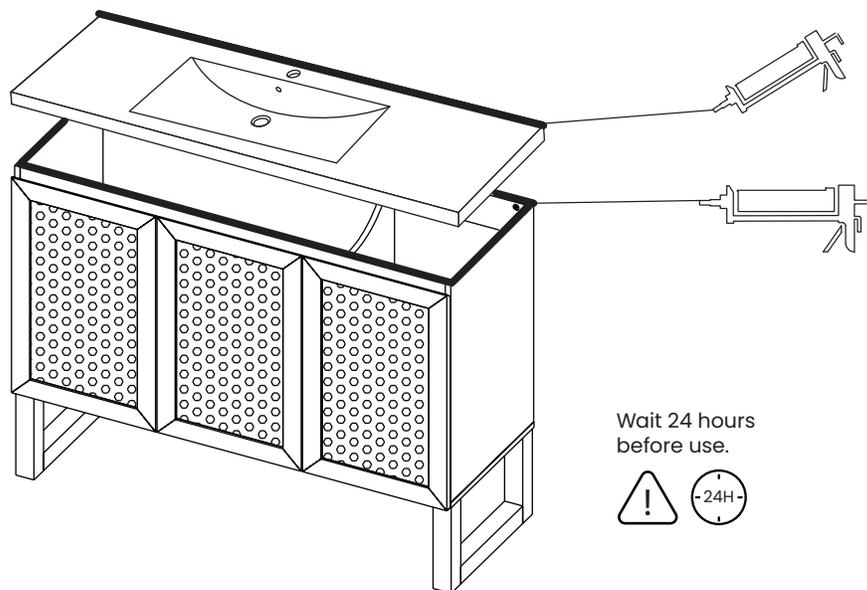

Wait 24 hours before use.

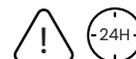

## ONE YEAR LIMITED WARRANTY

Swiss Madison® products are made with quality materials and excellent craftsmanship to provide our customers with beautiful, durable, long-lasting products. Should there be any defects in materials or craftsmanship under regular use that are discovered within the first year of installation, Swiss Madison® will provide replacement parts at no charge, or at its discretion, replace any product or part of the product that is deemed defective, under normal installation, use, service or maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required in the instance of a claim.

Swiss Madison® recommends all installations of Swiss Madison® products to be conducted by a licensed, professional plumber or contractor. Swiss Madison® will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to utilize a licensed professional for installation. Swiss Madison® is not responsible for any installation or removal costs.

### **This One Year Limited Warranty Will Be Voided If:**

- The installation recommendations were not followed by the installer
- The product has been moved from its initial place of installation
- The product has in any way been modified from its packaged state
- The product has been subjected to improper maintenance, abuse, misuse, excessive use of chemicals, accidents, or other damages, etc.

Swiss Madison® makes no implication that its products comply with any local building or plumbing codes. It is the consumer's responsibility and obligation to determine local code compliance prior to and during installation. This warranty extends only to the original purchaser and first consumer.

Swiss Madison® is not responsible for any special, incidental or consequential damages associated with the installation, replacement, return or use of the original purchaser's product. This includes, but is not limited to: freight costs, labor, travel time, lost profit, home damages and other contingent liabilities and costs (including, without limitation, costs associated with 'professionals' or 'experts', investigations, audits, analyses, attorneys and any other professional/hired services).

The Swiss Madison® warranty is a comprehensive and explicit limit of liability. All items not disclosed within the warranty are not addressable within the responsibility of Swiss Madison®. Certain states have variances regarding implied warranties; in those situations, we remain fully compliant.

**If you have any questions or concerns, please contact us directly at  
1-434-MADISON (623-4766)**

**⚠ WARNING:** Contents of your order may contain sharp and possibly other harmful pieces and may cause hazard to children and adults. Swiss Madison® is not responsible in any way for personal damages.