


CD0142-01-RHL-L/HD-TRM
Shower Trim
Installation Guide

Model Number	Specification
<input type="checkbox"/> CD0142-01-RHL-L/HD-TRM <i>Shower Trim</i>	<ul style="list-style-type: none"> • Metal lever handle • Shower arm and flange • Components shall be metal and nonmetallic construction, plated in standard polished chrome finish
Warranty	
<p>Limited Lifetime - to the original end purchaser in consumer installations. 5 Years - for commercial installations. Refer to www.symmons.com/warranty for complete warranty information.</p>	

Dimensions

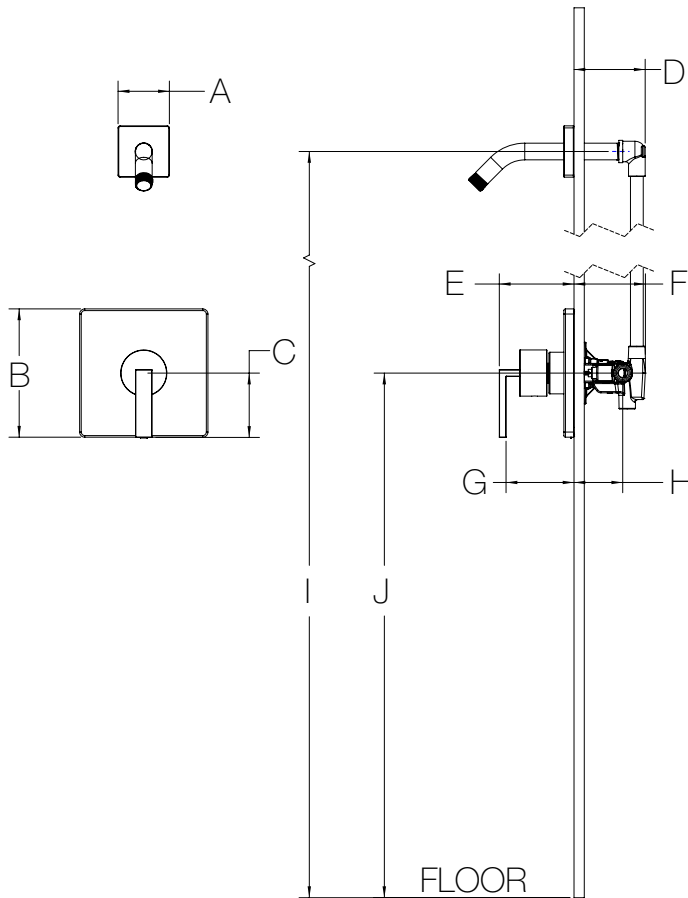





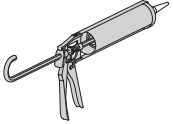
Measurements	
A	Sq. 2-1/2", 64 mm
B	Sq. 6-1/4", 159 mm
C	3-1/8", 80 mm
D	3-7/16", 88 mm
E	3-5/8", 92 mm
F	3-1/2", 89 mm
G	3-5/16", 84 mm
H	Rough-in 2-3/8" ± 1/2", 60 mm ± 13 mm
I	Ref. 77", 1956 mm
J	Ref. 42", 1067 mm

Notes:

- 1) All dimensions measured from nominal rough-in (see H as reference).
- 2) Dimensions subject to change without notice.

Parts Breakdown

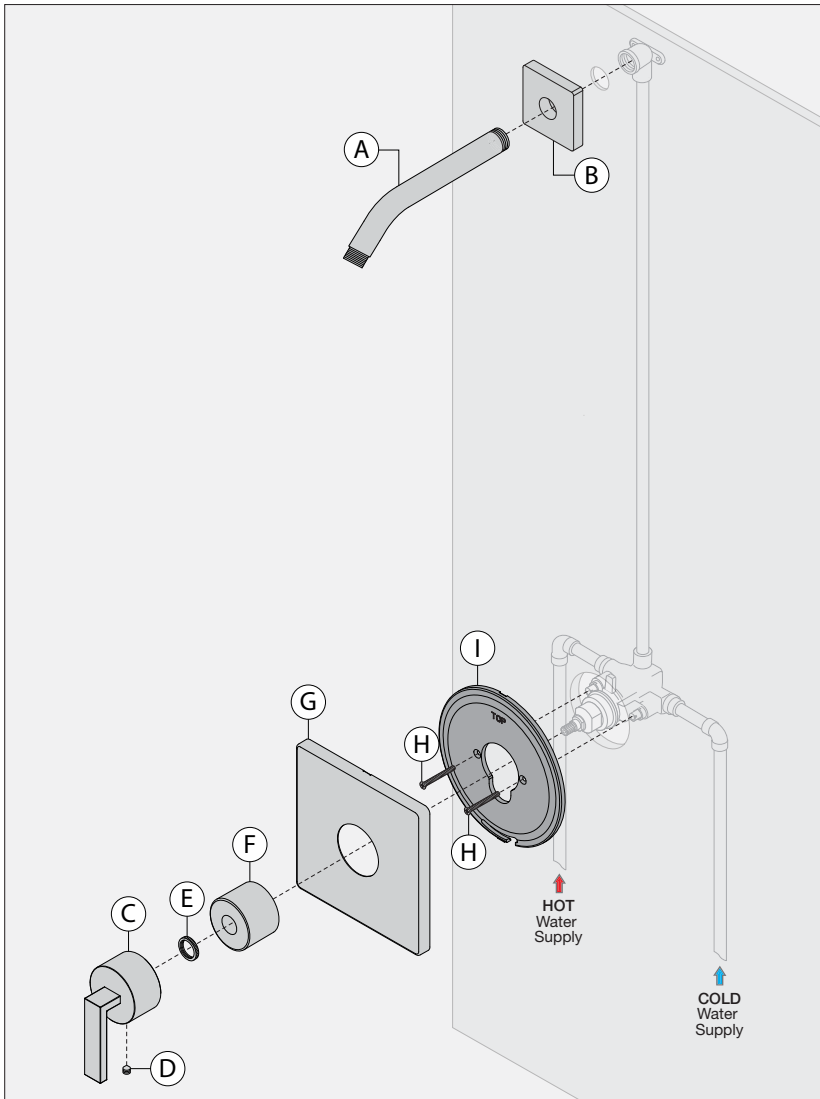

Replacement Parts		
Item	Description	Part Number
A	Shower Arm	
B	Flange	300SQ
C	Handle	
D	Set Screw	T-378
E	Lock Nut	
F	Dome Cover	T-19/20-PL
G	Escutcheon	
H	Mounting Screws	RTS-044
I	Mounting Plate	
Tools Required for Installation		
Allen Wrench: Handle (3 mm)		
Phillips Head Screwdriver		
Plumber Tape		
Silicone		

Notes:

- 1) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall (less mounting plates and brackets). Leave opening on bottom of escutcheon for weep hole.
- 2) Apply plumber tape to all threaded connections.