## **Hutch Pendant**



#### **GENERAL PRODUCT INFORMATION:**

These fixtures are intended to be installed utilizing NEC compliant junction boxes.



This product is suitable for damp locations.

This product can be dimmed with a standard electronic dimmer.

This instruction shows a typical installation.


#### **CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.


Two Person Installation Recommended

# **Install the Mounting Plate**

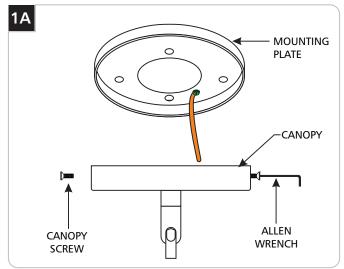


- **1** Remove the canopy screws using the provided Allen Wrench.
- 2 Remove the mounting plate from the canopy.



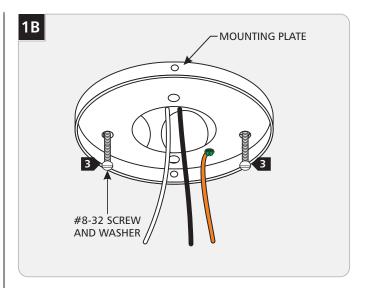


Secure the mounting plate to the electrical box with the two washers and #8-32 screws provided.

### Assemble the Fixture

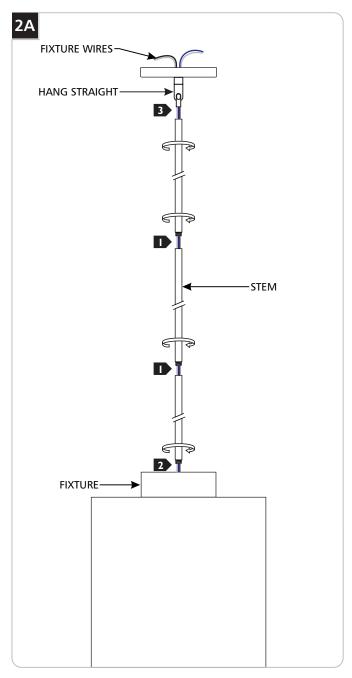


- Determine desired length of fixture using the provided stems and assemble them by screwing them together.
- 2 Feed the fixture wires through the stem assembly and screw it to the fixture.
- Feed the fixture wires through the hang straight and screw it onto the stem assembly.

# **Install the Fixture**

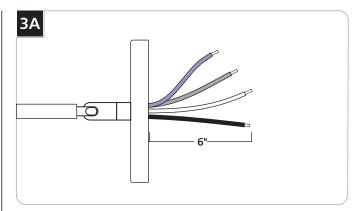


- 1 Leave 6" of the wire behind the canopy for power connections. Cut the excess wire.
- 2 Strip the end of the wires.

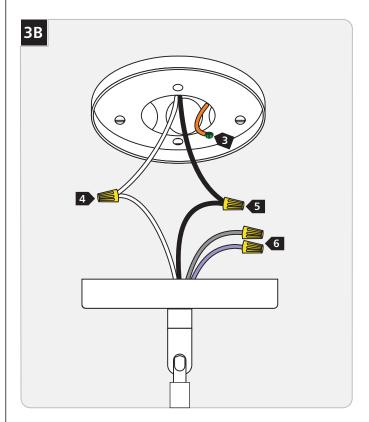

- Connect the fixture to a suitable ground in accordance with local electrical codes.
- 4 Connect the white driver wire to the neutral power line wire with a wire nut.
- Connect the black driver wire to the hot power line wire with a wire nut.
- **For High Output Models Only:** For 0-10V dimming, use the purple and gray wires to connect to a compatible dimmer.

**NOTE**: 0-10V dimming is only available through High Output models by using the purple and gray wires. For all other models, cap off the purple and gray wires.

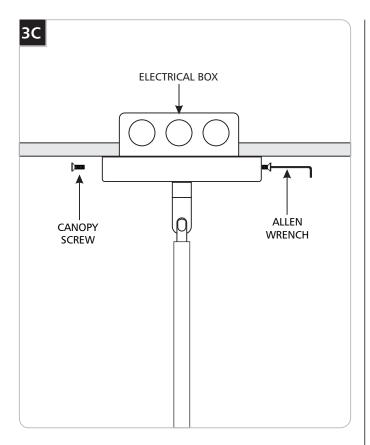

- Neatly place all wires and wire nut connections inside the canopy.
- Align the canopy holes with the mounting plate holes. Secure the canopy in place by tightening the canopy screws using the provided Allen Wrench.

# **SAVE THESE INSTRUCTIONS!**



7400 Linder Ave, Skokie, IL 60077 847.410.4400

www.techlighting.com
© 2017 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company