

# **Delancey Pendant (Compact Fluorescent)**



## Install the Shade

installing the canopy.

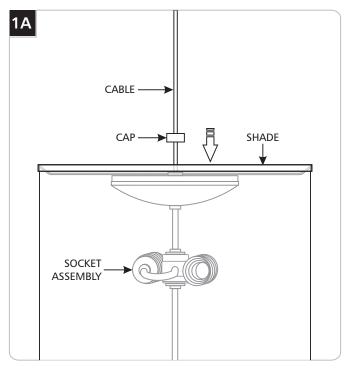




2 Feed the cable through the center of the shade support until it rests on the end of the socket assembly.


3 Feed the cable through the center of the cap and screw the cap back onto the socket assembly.

### **Install the Lamps**

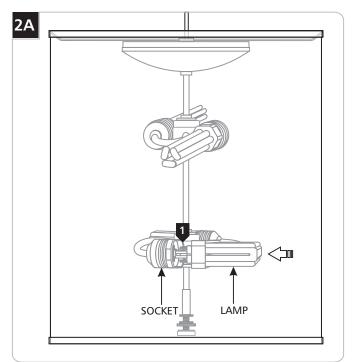


Use MAX 32 Watt GX24Q-3 Base Triple Tube Compact Fluorescent Lamp with each socket.

26 Watt GX24Q-3 Base Triple Tube Compact Fluorescent Lamps are recommended.



1 Push the lamp pins all the way into the socket holes.

### Install the Glass Disk

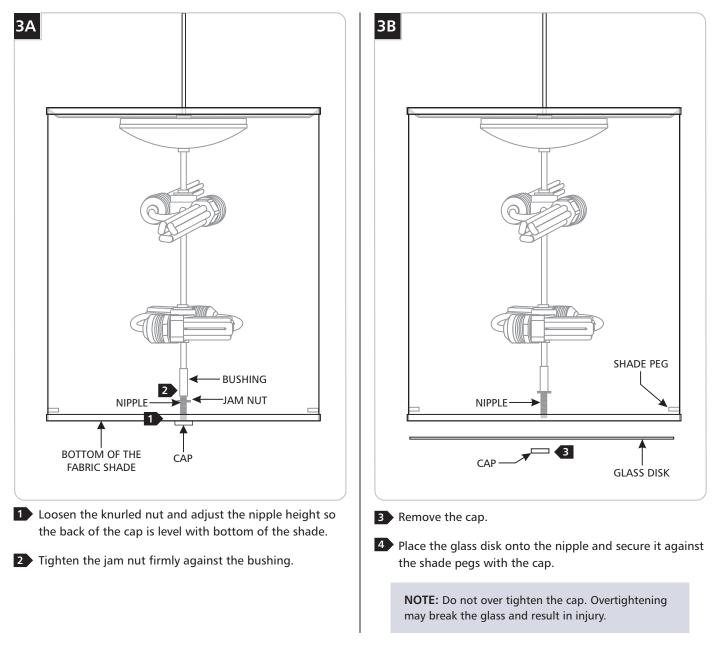

#### SAVE THESE INSTRUCTIONS!

