

# Mercer Suspension

700TDMERC\_ 1.1



## GENERAL PRODUCT INFORMATION:




This product is suitable for damp locations.


This product can be dimmed with a standard incandescent dimmer.

This instruction shows a typical installation.


**CAUTION:** To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.

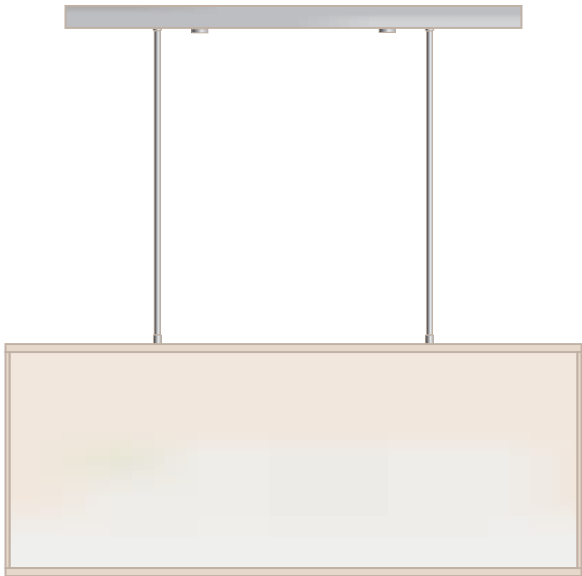


## Installing the Fixture

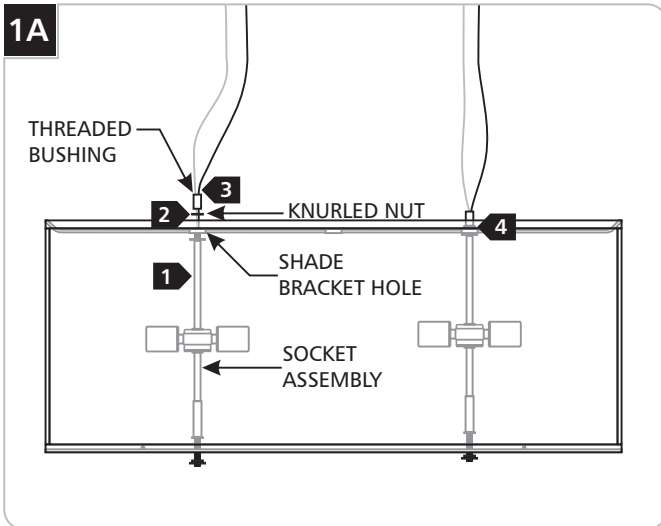


- 1** Starting with one socket assembly, feed the socket assembly wires through the left shade bracket hole, the knurled nut and the threaded bushing respectively.
- 2** Line up the sockets so that they are parallel with the fixture length and tighten the knurled nut.
- 3** Tighten the threaded bushing to the socket assembly.
- 4** Repeat the steps 1 through 3 for the other socket assembly using the right shade bracket hole.

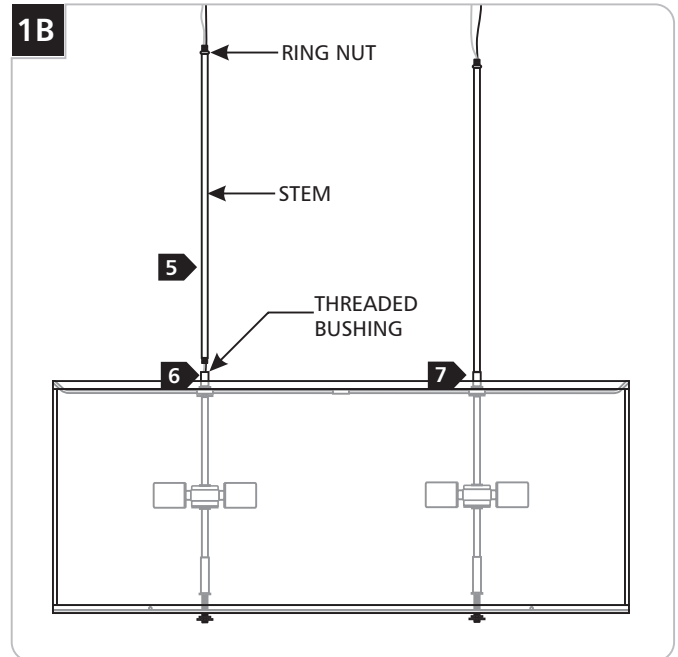


- 5** Feed the fixture wires through the stem (from the side without the ring nut).
- 6** Tighten the stem to the threaded bushing.
- 7** Repeat steps 5 and 6 for the other stem.

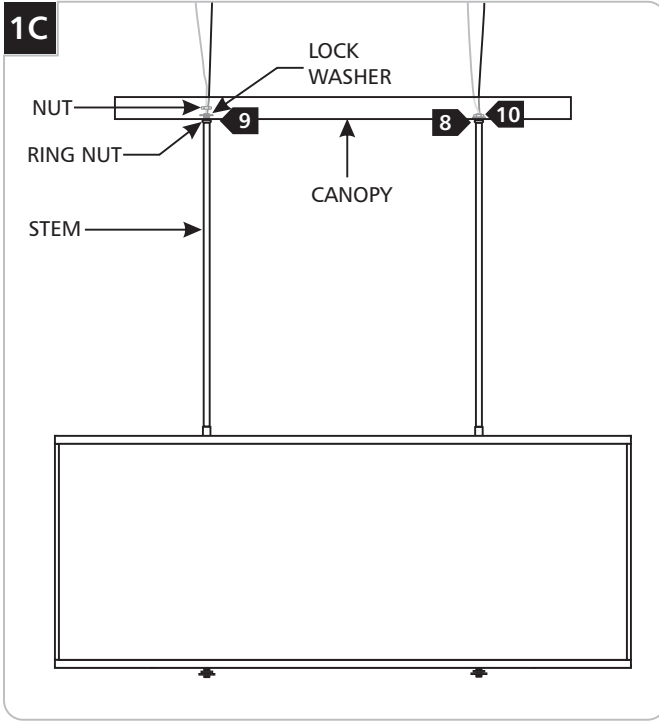


- 8** Feed the fixture wires through the canopy holes and rest the canopy onto the ring nuts.
- 9** Feed the fixture wires through the lock washer and nut. Tighten the nut to the stem.
- 10** Repeat the step 9 for the other fixture wires.

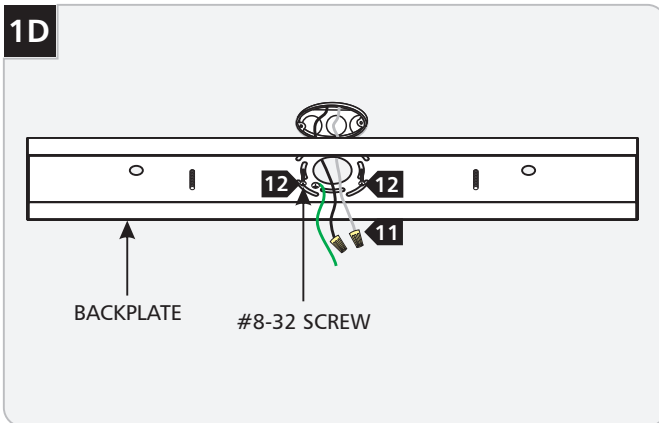


- 11** Feed the power line wires through the backplate center hole.
- 12** Mount the backplate to the electrical box with the two provided #8-32 screws.

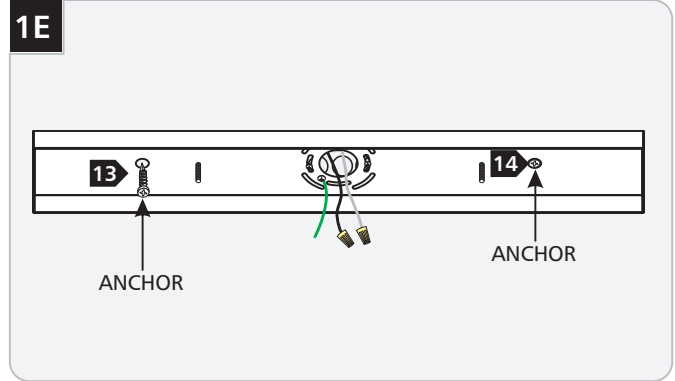

- 13** With a hammer tap the two provided anchors through the canopy holes into the ceiling up to the threaded portion.
- 14** Screw the anchors completely into the ceiling with a Phillips screwdriver.

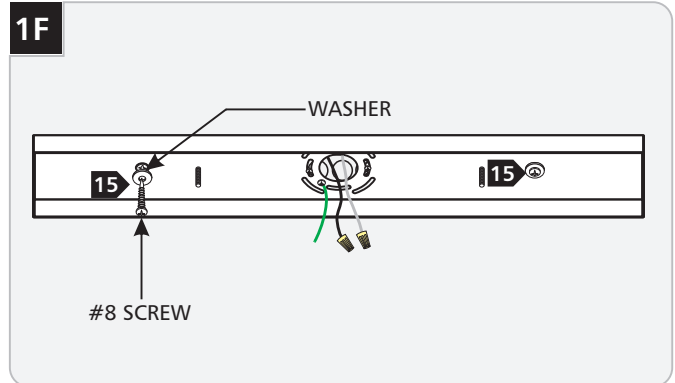


- 15** Secure the backplate to the anchors with the #8 screws and washers.

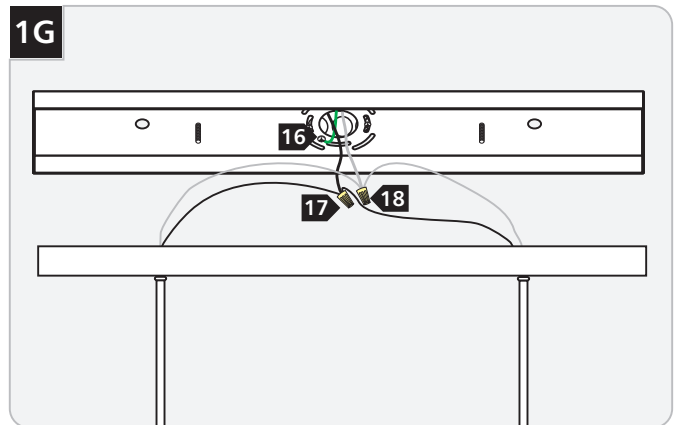


- 16** Make sure that the mounting plate is grounded in accordance with local electrical codes.
- 17** Connect the black socket wires to the hot power line wire with a wire nut.
- 18** Connect the white socket wires to the neutral power line wire with a wire nut.

## Install the Lamps & Diffuser

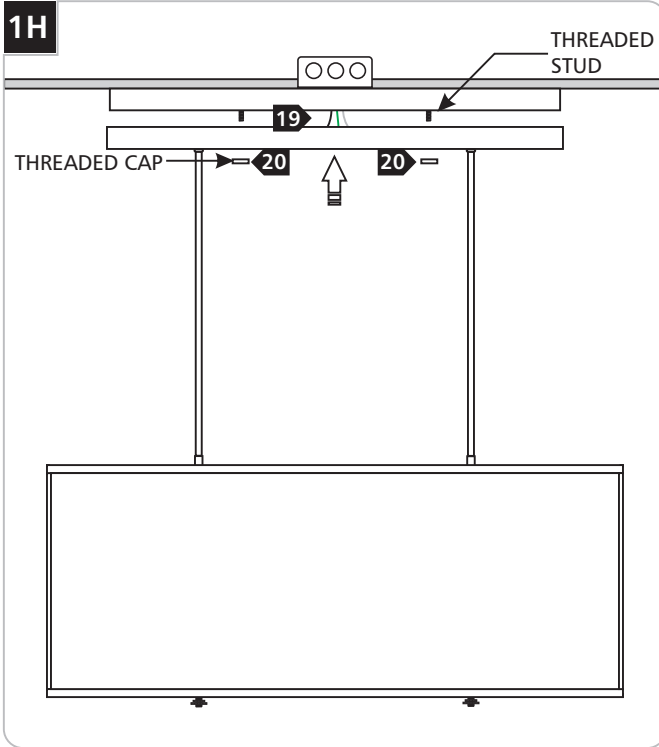

- 19** Place all wire and wire nut connections properly inside the canopy.
- 20** Slide the canopy holes onto the backplate threaded studs and secure the canopy in place with the two threaded caps.

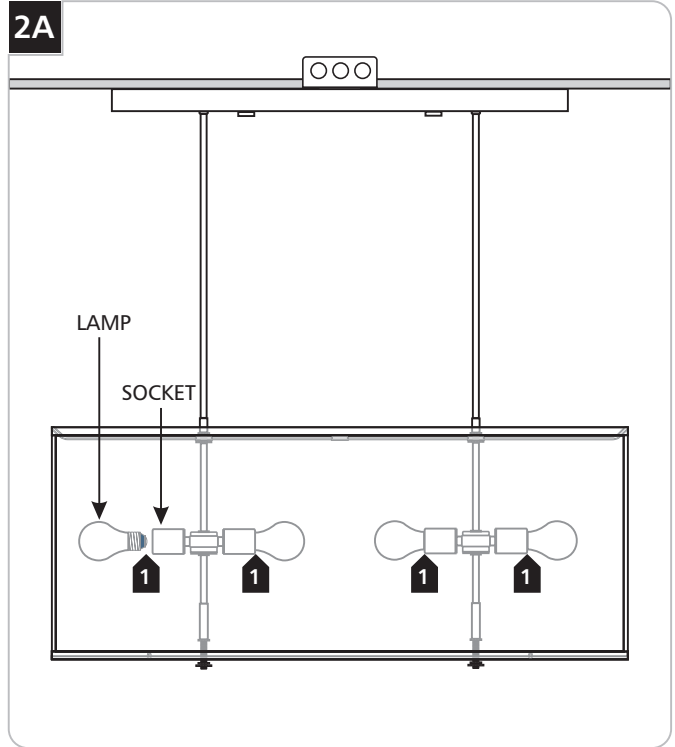


**CAUTION:** To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.

Use **MAX** 120 Volt, **100** Watt A19 medium base lamp with each socket.



- 1** Screw the lamps completely into the sockets.

2B

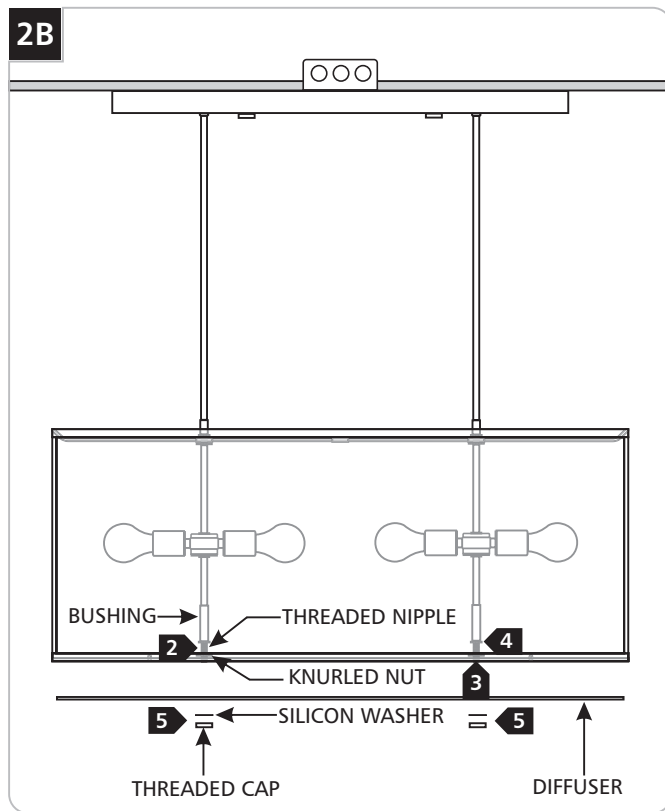

- 2 Adjust the nipples height by loosening the knurled nuts.
- 3 Place the diffuser onto the threaded nipples against the shade frame. Make sure that the threaded nipples are not exposed more than 3/16" below the diffuser.
- 4 Remove the diffuser and tighten the knurled nuts firmly against the bushings to secure the threaded nipples in place.
- 5 Replace the diffuser and secure it in place with silicon washers and the threaded caps.

**NOTE:** Removing the diffuser is not necessary if relamping. Relamp the fixture from top of the fabric shade.

**SAVE THESE INSTRUCTIONS!**

**2**thousanddegrees™

7400 Linder Ave, Skokie, IL 60077  
847.410.4400

[www.2thousanddegrees.com](http://www.2thousanddegrees.com)

© 2008 Tech Lighting, L.L.C. All rights reserved. The "2thousand degrees" graphic is a registered trademark of 2thousand degrees. 2thousand degrees reserves the right to change specifications for product improvements without notification.

A Generation Brands Company