


Assembly Instructions for Key Largo, Pendent

NOTE: INSTALLATION MUST BE PREFORMED BY A LICENCED PROFESSIONAL

- 1) Remove the shade and all hardware provided from packaging.
- 2) Feed the black wire trough the shade and secure using the brass washer with a set screw to the top of the shade so that the socket is secure and tight inside the shade.
- 3) Secure the mounting bracket to the electrical box using the mounting screws that are provided.
- 4) Feed the black wire through the copper canopy and cut excess wire. Then tie a knot in the wire above the canopy.
- 5) Secure the canopy in at the proper measurement using the brass washer with the set screw below the canopy.
- 6) Make all electrical connections at this time.
- 7) Attach the copper canopy to the mounting bracket using the canopy screws as well as the brass cap nuts.

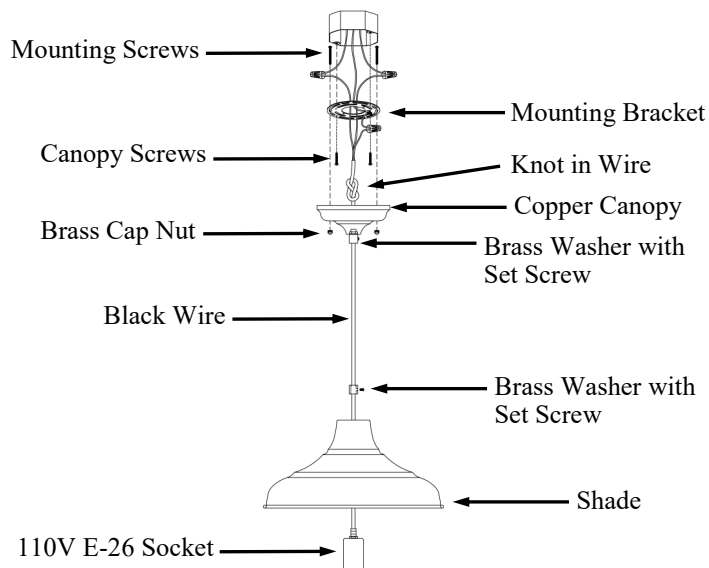


For additional technical assistance and replacement parts call:
251.621.3435
TOLL FREE: 866.249.1918

Assembly Instructions for Key Largo, Gooseneck

NOTE: INSTALLATION MUST BE PREFORMED BY A LICENCED PROFESSIONAL

- 1) Remove socket from packaging inside gooseneck box and remove the flat nut from the socket and wire.
- 2) Feed the wire through the hole on top of the shade, bottom to top as shown in the drawing.
- 3) Slide flat nut back onto the wire down to the top of the shade.
- 4) Thread the fat nut onto the brass all-thread and tighten so that the socket and flat nut sandwich the shade.
- 5) Feed the wire through the gooseneck bracket coming out of the hole in the center of the wall mounting plate.
- 6) Turn the shade clockwise to tighten the brass all-thread into the threaded coupler inside the gooseneck bracket.

Note: Mounting hardware is not provided.

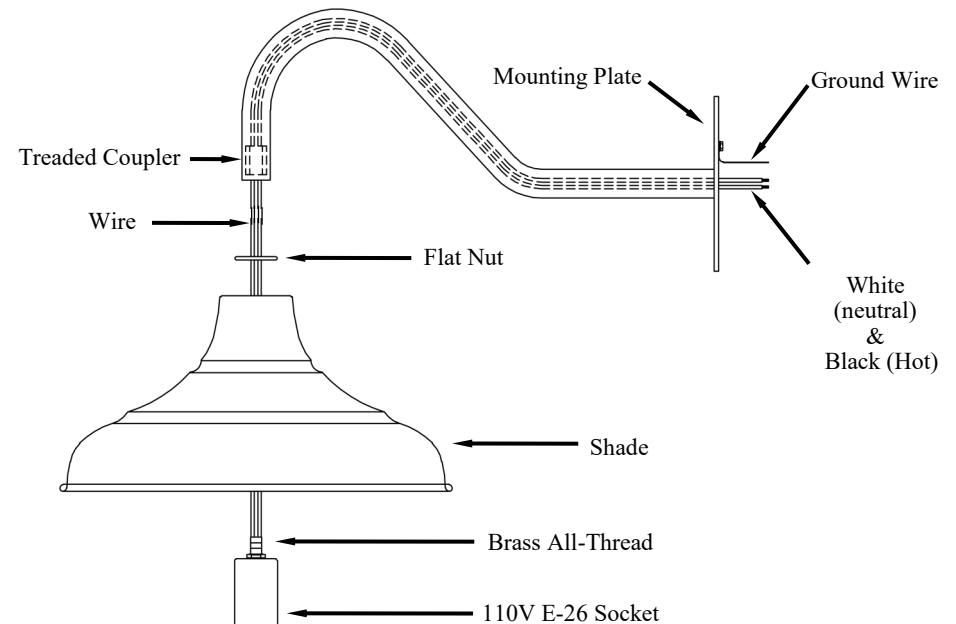


For additional technical assistance and replacement parts call:
251.621.3435
TOLL FREE: 866.249.1918

Assembly Instructions for Key Largo, Stem Mount

NOTE: INSTALLATION MUST BE PERFORMED BY A LICENCED PROFESSIONAL

- 1) Remove the shade and all hardware provided from packaging.
- 2) Feed wire through one end of stem and out the other end.
- 3) Tighten stem into the threaded coupler on top of the shade. Once secure, tighten the set screw to lock it in place.
- 4) Slide the copper canopy onto stem in the direction shown.
- 5) Feed the wire through the ceiling plate and tighten onto stem. Once secure tighten the set screw to lock it in place.
- 6) Make electrical connections and secure to the mounting surface with the appropriate fasteners for your application.
- 7) Slide copper canopy up to the ceiling plate and secure using the brass set screw attached.

Note: Mounting hardware is not provided.

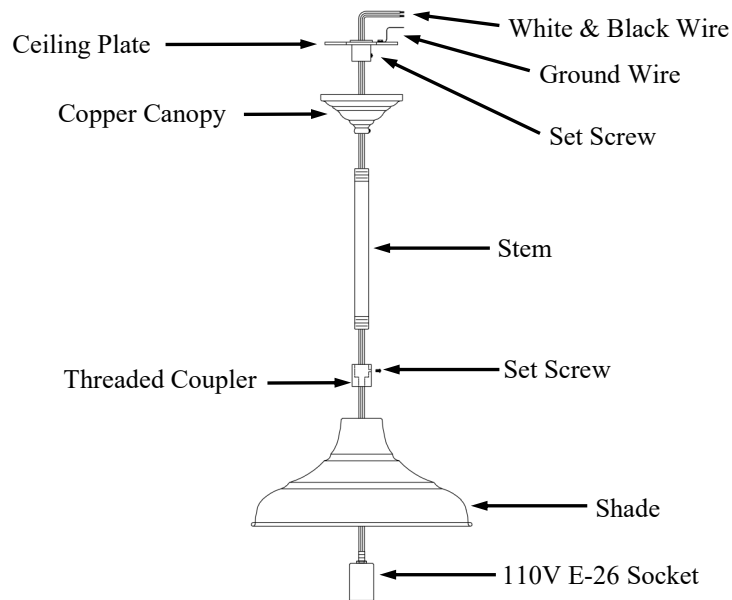


For additional technical assistance and replacement parts call:
 251.621.3435
 TOLL FREE: 866.249.1918

Assembly Instructions for Key Largo, Chain Mount

NOTE: INSTALLATION MUST BE PERFORMED BY A LICENCED PROFESSIONAL

- 1) Remove the shade and all hardware provided from packaging.
- 2) Remove desired amount of brass chain using chain plyers and feed wire up the chain weaving back and forth.
- 3) Secure mounting strap to electrical box with hardware provided
- 4) Thread the brass all-thread into the mounting strap and tighten the strap nut to secure the all-thread in position.
- 5) Feed wire through the brass loop, brass locking nut, copper canopy, then trough the all-thread into the electrical box.
- 6) Thread the brass loop onto the all-thread (locktite required)
- 7) Make all electrical connections at this time.
- 8) Slide copper canopy tight against the ceiling and use the brass locking nut to secure the canopy.

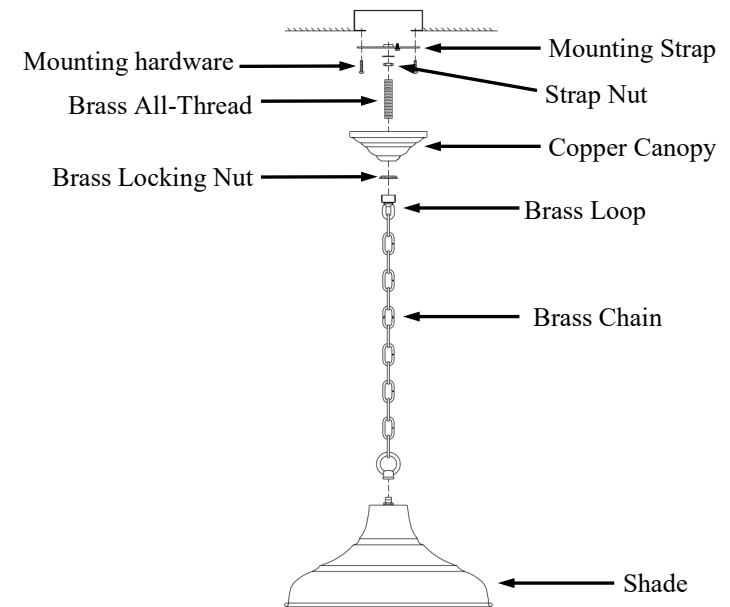

For additional technical assistance and replacement parts call:
 251.621.3435
 TOLL FREE: 866.249.1918