

Outdoor Postmount Lantern 40754 BK

Assembly Instructions



CAUTION

- Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.
- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED




Ladder




Safety glasses



Electrical tape




Phillips screwdriver




Flat blade screwdriver




Pliers




Wire strippers

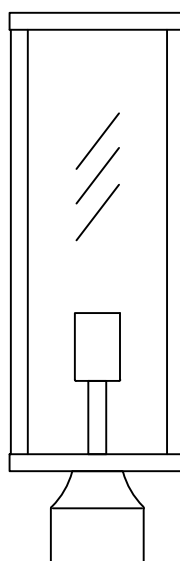

Fixture



Mounting Screws



Wire Nuts

Outdoor Postmount Lantern 40754 BK

Assembly Instructions

STEP 1


Make the electrical connection from the junction box to the fixture. Connect the ground wire to the mounting unit using the preinstalled green ground screw. Then, connect the positive, negative and ground wires with the supplied wire nuts. Secure with electrical tape

Connect Clear, Brown, Gold or Black Parallel Wire without tracer (round & smooth) or Black Fixture Wire to:

Black or Red Supply Wire or Insulated Wire (other than green) with copper conductor.


Connect Clear, Brown, Gold or Black *Parallel Wire with tracer (square & ridged) or White Fixture Wire to:

White Supply Wire or Insulated Wire (other than green) with silver conductor

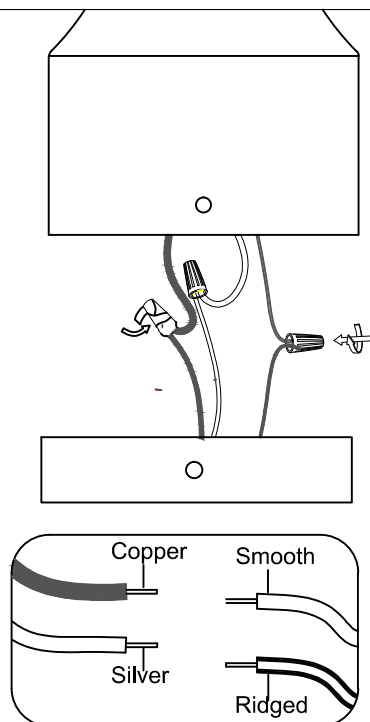

STEP 1

Use the mounting screws to attach the mounting unit to the junction box.

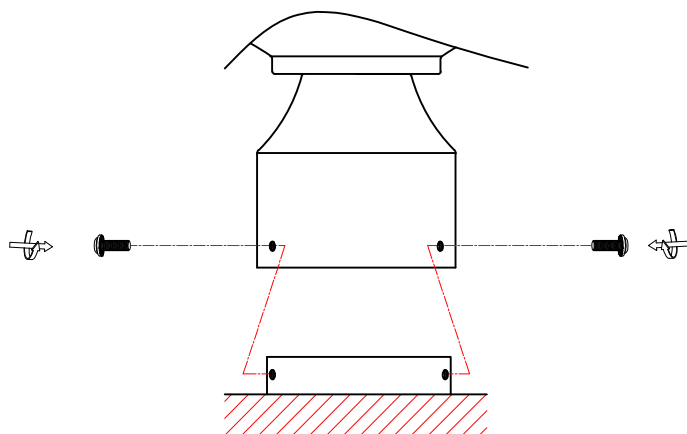

STEP 3

Place the fixture over the mounting unit and secure with the lock nut. Install a bulb (Candelabra Base E26 Type T 60W not included) and cover with the di and cage. Secure the assembly with the cage screws.

