

10360



Assembly Instructions



CAUTION

- Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.
- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED

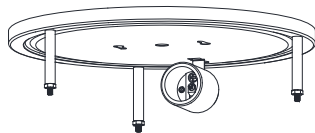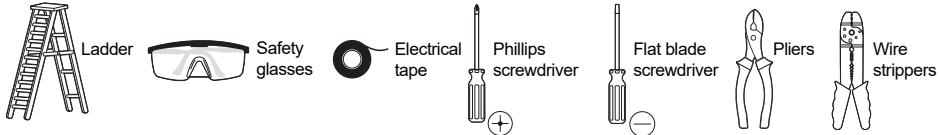


Fixture*1



Mounting Unit*1



Mounting Screw*2

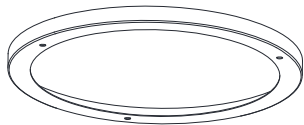

Decorative Circle*1



Wire Nut*3



Finial*3



Shade*1


*PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE

10360

Assembly Instructions

STEP 1

Use the mounting screws to attach the mounting unit to the junction box.

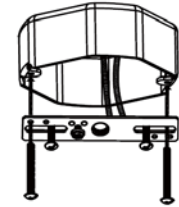

STEP 2




Make the electrical connection from the junction box to the fixture. Connect the ground wire to the mounting unit using the preinstalled green ground screw. Then, connect the positive, negative and ground wires with the supplied wire nuts. Secure with electrical tape.

Connect Clear, Brown, Gold or Black Parallel Wire without tracer (round & smooth) or Black Fixture Wire to:

Black or Red Supply Wire or Insulated Wire (other than green) with copper conductor.

Connect Clear, Brown, Gold or Black *Parallel Wire with tracer (square & ridged) or White Fixture Wire to:

White Supply Wire or Insulated Wire (other than green) with silver conductor

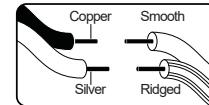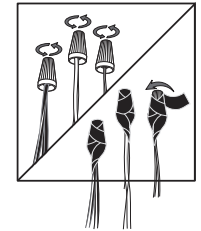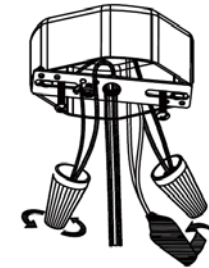

STEP 3

Line up the holes in the fixture with the support screws and rotate the fixture until the support screws are aligned with the smaller section of the mounting hole as shown. Secure the support screws.

Install one 13-watt max. medium-base LED bulb(not included).

Place the shade inside the three decorative poles on the fixture.

Align the hole in the decorative circle with the nipple on the decorative pole and put it under the shade. Secure the decorative circle by placing the finials.

