72050
Assembly Instructions

CAUTION

- Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.
- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED


Ladder


Safety glasses



Electrical tape



Phillips screwdriver


Flat blade screwdriver



Pliers



Wire strippers

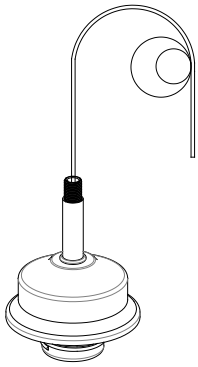
Fixture*1

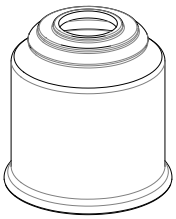
Glass shade*1


socket ring*1

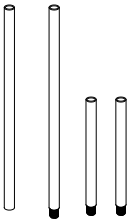
Long & short rod*2

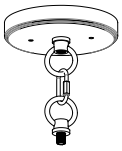
canopy*1


Mounting Unit*1


Wire Nut*3


Mounting Screw*2


cap nut*2

***PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE**

72050
Assembly Instructions

STEP 1

Use the mounting screws to attach the mounting unit to the junction box.

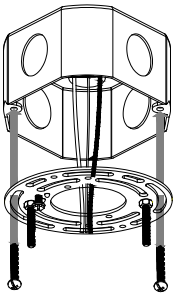


STEP 2

Screw the long rods to the top of the fixture. Then screw in the short rods. Make sure to feed the branch wires through the rods during assembly.

Secure the rod assembly to the canopy.


Secure the glass shade to the fixture with the socket ring.

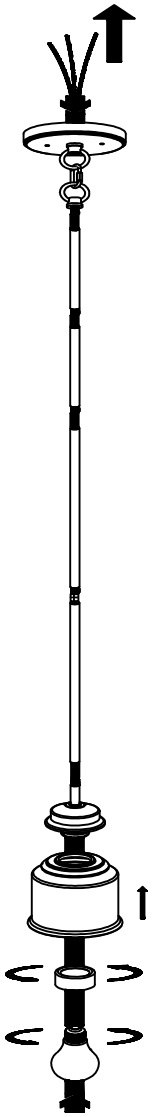



STEP 3

Make the electrical connection from the junction box to the fixture. Connect the ground wire to the mounting unit using the preinstalled green ground screw. Then, connect the positive, negative and ground wires with the supplied wire nuts . Secure with electrical tape.

Connect Clear, Brown, Gold or Black Parallel Wire without tracer (round & smooth) or Black Fixture Wire to:	Connect Clear, Brown, Gold or Black *Parallel Wire with tracer (square & ridged) or White Fixture Wire to:
Black or Red Supply Wire or Insulated Wire (other than green) with copper conductor.	White Supply Wire or Insulated Wire (other than green) with silver conductor

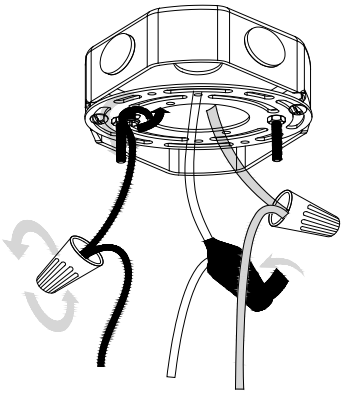

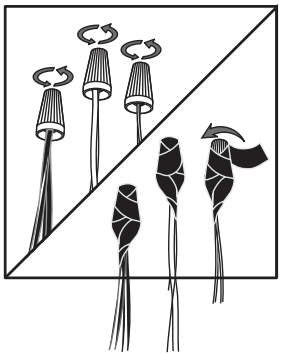

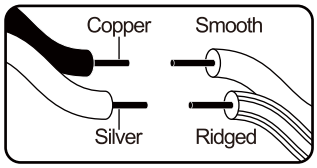

STEP 4

Place the fixture over the mounting unit and secure with the cap nut.
Install E26*3*60W Bulb (not included).

