

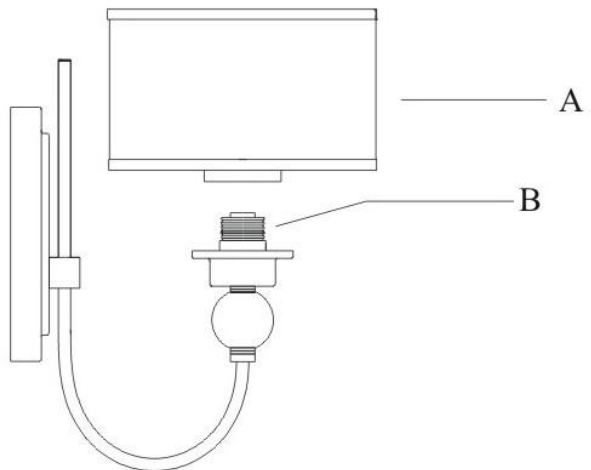
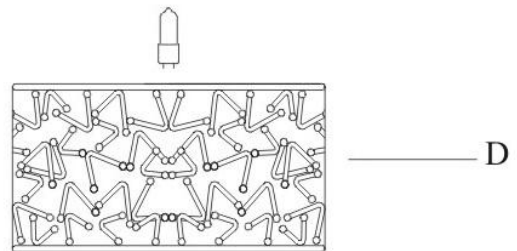


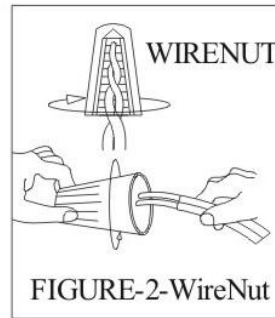

UTTERMOST

STYLENO: 22484

Assembly Instruction

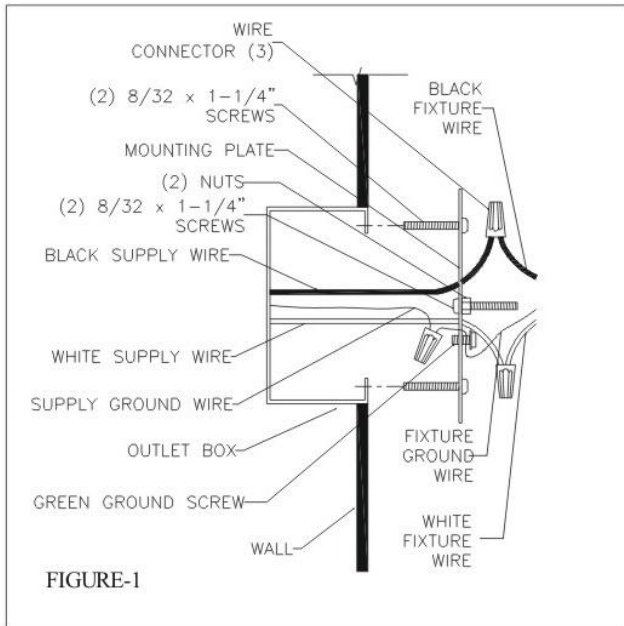

PO BOX 558 / 3325 GRASSY HILL RD. ROCKY MOUNT. VIRGINIA 24151
www.uttermost.com



UTTERMOST

STYLE NO: 22484

Parts and hardware list

1	Screw Collar Nut	2PCS
2	Nipple	1PC
3	8-32 Screws	2PCS
4	Mounting Plate	1PC
5	Green Ground screw	1PC
6	Wire Nut	3PCS

Please make sure that you have all the parts indicated before you begin assembling this item. Please Read Wiring Instruction before you begin assembling and installing your chandelier lamp. WARNING: BEFORE INSTALLING. make sure the electricity supply is shut off to avoid a possible electric shock

Assembly Instruction

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged
2. Attach the Mounting plate to the Outlet Box by using two 8-32 Screws (See Figure 1)
3. Install the supply ground wire in the Mounting Plate with the Ground Green screw
4. Place the null wire, black wire evenly against the black wire from the outlet box and place the live wire, white wire evenly against the white wire from the outlet box. (Connecting the Wires-See Figure 2)
5. After the wires are connected, carefully place them inside the Outlet Box (See Figure 1)
6. Place the Fabric Shade (A) to the Socket (B), then secure with Socket Ring (C)
7. Place the Metal Shade (D) on the Fabric Shade (A).
8. Install the G9 bulb into socket (Bulb Included)

PO BOX 558 / 3325 GRASSY HILL RD. ROCKY MOUNT. VIRGINIA 24151
www.uttermost.com