





UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 22133

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off. This lamp must be installed on reinforced outlet box.
3. Fasten the **Cross bar** to the outlet box. Secure the **Nipple** onto the **Canopy** with **Loop #1**.
4. Secure **Part A** onto the **Lamp Body** by the **Ball Finials** on both sides.
5. Adjust chain length as needed. Thread **Quick Link #1** into **Loop #1** on the **Canopy**, then **Quick Link #2** into **Loop #2** on the top of **Part A**. Hand tighten until snug.
6. Pull the wire from the **Canopy** and then the center hole in the **Cross Bar**. The power supply wire consists of three wires, one black wire, one white wire and one green ground wire.
7. Connect the wires as shown :
 - A. Connect the House Ground Wire to the Fixture Ground Wire.
 - B. Connect the House White or Ribbed Wire to the Fixture Supply Wire (White or Ribbed Side).
 - C. Connect the House Black/Red Wire to the Fixture Supply Wire (Black or Smooth Side).
 - D. Wrap each connected wire with Wire Nut and carefully stuff all of the connected wires into the Outlet Box.
8. Put the **Glass Shade** onto the **Shade Base** separately with care.
9. Install correct **bulbs** to the **socket** referring to fixture markings and/or labels for maximum wattage. (Bulbs Included)

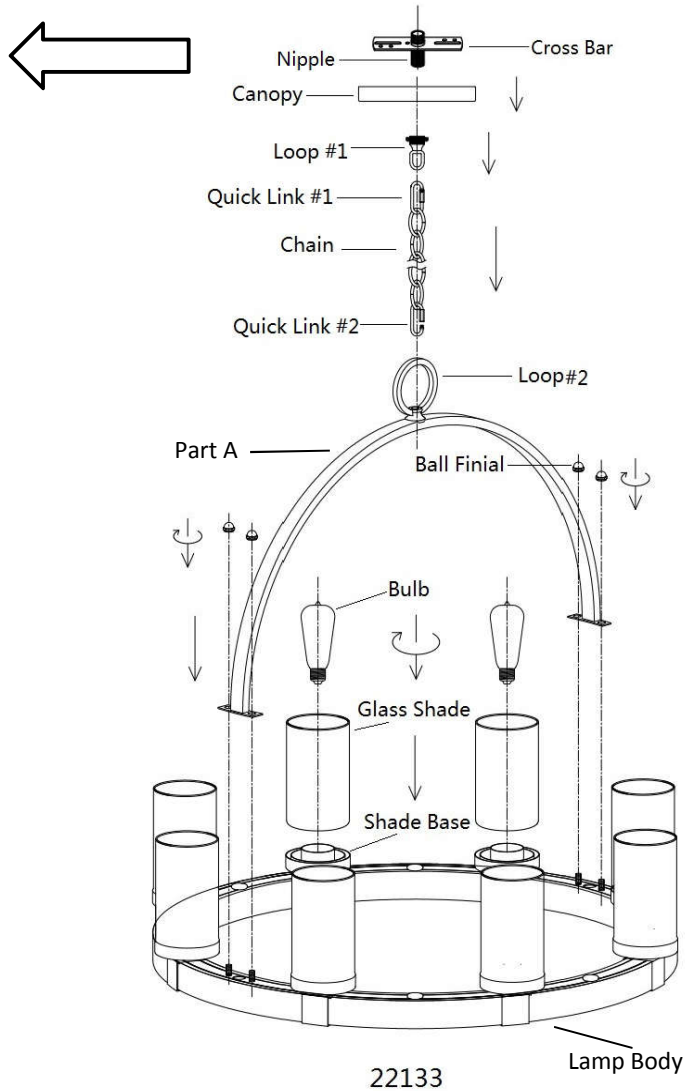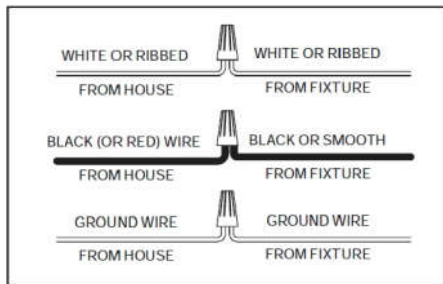

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com