
ASSEMBLY INSTRUCTIONS

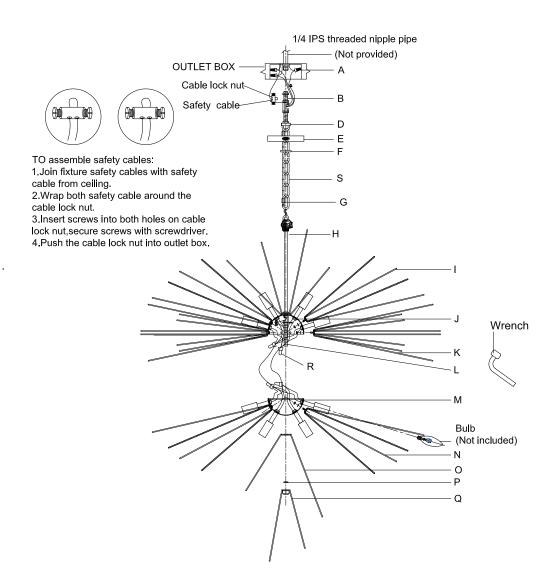







Strada Round Pendant

Item # KW 5071

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A


WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Carefully remove all parts from the box.
- A 1/4" threaded nipple must be installed in your outlet box. Then install the threaded nipple (B) into the outlet box.
- 3. Attach branch (I) and (K) to top half ball (J), and secure with hex nut by wrench provided.
- 4. Attach branch (N) to bottom half ball (M), and secure with hex nut by wrench provided.
- 5. Install the center rod (H) to the threaded nipple (L).
- 6. Connect the Hot wire (black) from bottom half ball (M) to the Hot wire (black) from the top half ball (J) with nipple (R).
- 7. Connect the Neutral wire (white) from bottom half ball (M) to the Neutral wire (white) from the top half ball (J) with nipple (R).
- 8. Insert bulbs (not included) into the sockets.
- 9. Attach bottom half ball (M) with branch (O) to the top half ball (J) and let the threaded nipple (L) go through the center hole of bottom half ball (M), then tighten with hex nut (P).
- 10. Thread the branch (Q) to the bottom of threaded nipple (L).
- 11. Unscrew the threaded collar on the chain end link (G) and attach it to the fixture top ring. Close the threaded collar to secure the fixture.
- 12. Let canopy (E) and lock collar (F) go through the chain (S).
- 13. With the fixture dimension as a guide, shorten the chain (S) as needed using a pair of chain pliers.
- 14. Unscrew the threaded collar on the other chain end link, raise the fixture then attach chain end link to the ceiling loop (D). Close the threaded collar to secure.
- 15. Unwrap the wiring from the top of the fixture body. Weave the power supply cord and the ground wire through the chain (S).
- 16. When you reach the canopy and ceiling loop, measure the wires then cut. Be certain to leave enough to connect inside of the outlet box.

ASSEMBLY INSTRUCTIONS

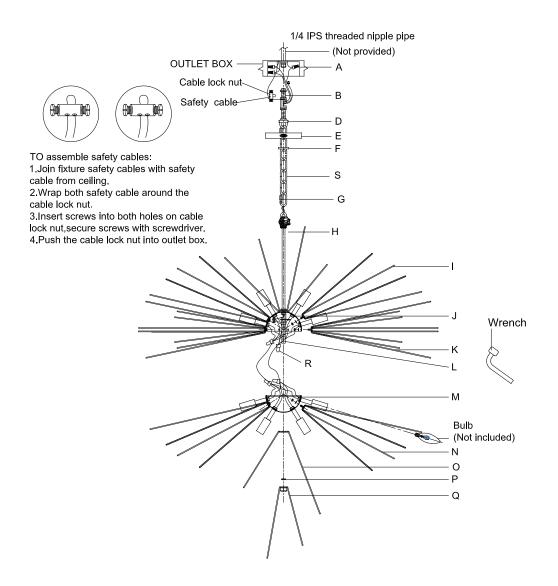

Strada Round Pendant

Item # KW 5071

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 17. Strip the insulation back on the two power supply wires about 5/8".
- 18. Twist the power supply and ground wire together and push through the center hole of the ceiling loop (D).
- 19. Connect the fixture ground (bare) wire with the ground wire from the outlet box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box.
 - IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
- 20. Connect the fixture Neutral wire (ribbed, no markings) with the neutral wire from the outlet box using wire nut (A).
- 21. Connect the fixture Hot (smooth edge, markings) wire with the hot wire from the outlet box using wire nut (A).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 22. Tuck these wire connections neatly into the outlet box to secure.
- 23. Put canopy (E) to ceiling loop (D), and secure with lock collar (F).
- 24. Installation is complete, turn on power at fuse or circuit breaker.










^{***}Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

ASSEMBLY INSTRUCTIONS

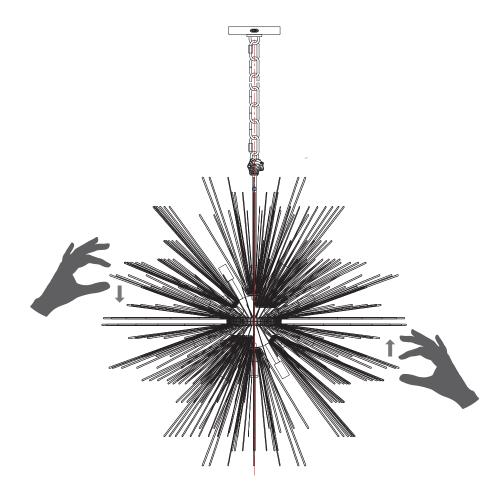

Strada Round Pendant

Item # KW5071

For a more personalized style you are able to gently bend spines in any direction.

NOTICE: BENDING SPINES MULITPLE TIMES CAN CAUSE THEM TO BREAK